

# Vacuum Measuring, Controlling

Vacuum Gauges

Calibration Service

260.00.02

Excerpt from the Leybold Full Line Catalog (Edition 2022)

Catalog Part Vacuum - Measuring, Controlling



# Contents

## Vacuum Measuring, Controlling

### General

Applications for Vacuum Gauges .....	5
Select the Combination of Sensor and Gauges which is ideal for your Application .....	6
Basic Terms of Vacuum Metrology .....	10
Connection Accessories for Small Flanges.....	12

### Products

#### Handheld Measuring Instruments

Digital PIEZOVAC Sensor PV 101 .....	14
Digital THERMOVAC Sensor TM 101.....	14

#### Active Sensors / Transmitter

CERAVAC Transmitter CTR 100 N and CTR 101 N.....	16
Linear Pressure Sensors DI/DU 200, DI/DU 201, DI/DU 2000,DI/DU 2001, DI/DU 2001 rel.....	20
THERMOVAC Transmitter TTR RN Series - TTR 91/911, 96/916, 97/917 RN(S) .....	24
TTR 101 / TTR 101 S2 / TTR 101 S2 PB.....	30
PENNINGVAC Transmitter PTR 90 N .....	34
PTR 225 N, PTR 237 N .....	38
Loadlock Transmitter THERMOVAC TTR 200 N, PENNINGVAC PTR 200 N.....	42
IONIVAC Transmitter ITR 90 .....	46
ITR 200 S .....	50
Spiral Tube .....	54
<b>Connection Cables for Active Sensors .....</b>	<b>56</b>

#### Controller and Operating Units for Active Sensors

GRAPHIX ONE, TWO, THREE .....	58
DISPLAY ONE .....	60
DISPLAY THREE .....	62

#### Passive Sensors

THERMOVAC Sensors TR 211, TR 211 NPT, TR 212, TR 216.....	64
PENNINGVAC Sensors PR 25, PR 26, PR 27, PR 28.....	66
IONIVAC Sensors IE 414 and IE 514.....	68

## **Operating Units for Passive Sensors**

COMBIVAC CM 51/CM 52 .....	70
IONIVAC IM 540 .....	74

## **Mechanical Gauges**

Bourdon Vacuum Gauges.....	77
Capsule Vacuum Gauges .....	78
Diaphragm Vacuum Gauge DIAVAC DV 1000 .....	80

## **Additional Sensors**

Older Sensors / Replacement Sensors .....	82
-------------------------------------------	----

## **Pressure Switches and Control Instruments**

Pressure Control System Move.....	84
Control Valve Move 1250.....	85
Controller CMove 1250 .....	88
Interface Module IMove 1250 .....	91
Low Pressure Safety Switch PS 113 A .....	92
Pressure Switch PS 115 .....	94
Switching Amplifier SV 110 .....	96
Diaphragm Pressure Regulators MR 16/MR 50 .....	98

## **Miscellaneous**

Leybold Calibration Service .....	100
Leybold Service: Easy, Competent, Reliable .....	102

## Applications for Vacuum Gauges

Gauges	Gauges												
	BOURDONVAC A	BOURDONVAC C	Capsule Vacuum Gauge	DI/VAC DV 1000	Handheld Measuring Instruments	CERAVAC Transmitter CTR	Linear Pressure Sensors DI/DU	THERMOVAC Transmitter TTR	PENNINGVAC Transmitter PTR	IONIVAC Transmitter ITR	Low Pressure Transmitter PTR	Pressure Switch PS 115	Diaphragm Pressure Regulators MR 16/50
<b>Mechanical engineering</b>													
Automotive industry; filling of brake and air conditioning systems					■	■	■	■					
Vacuum conveying technology	■	■	■	■		■							■
Packaging technology			■	■		■						■	
Isolation vacuum	■		■	■	■	■	■					■	
<b>Chemical processes</b>													
Absolute pressure measurements in gas mixtures	■	■	■	■		■	■						
Drying and degassing processes		■		■		■							■
Solvent recovery				■			■						■
Vacuum pressure control in existing central vacuum supply systems							■						■
<b>Electrics/electronics/optics</b>													
Evaporation and coating systems					■		■	■	■				
Monitoring and controlling of sputter systems							■	■	■				
Semiconductor technology (CVD, plasma etching etc.)					■		■			■			
Ion implantation					■		■	■					
Lamp production		■		■	■	■	■						
<b>Analytical instruments and surface physics</b>													
ESCA, SIMS, AES, XPS							■	■	■	■			
Electron microscopy							■	■	■	■			
Crystal growing								■	■	■			
Gas analysis systems, mass spectrometers							■	■	■	■			
<b>Research</b>													
Measurement of ultimate pressure in UHV systems										■			
Application in MBE systems								■	■	■			
Application in MBE systems										■			
Beam guidance systems, cyclotron								■		■			
Fusion experiments										■			
Space simulation chamber							■	■	■	■			
<b>System control/pressure control</b>													
Pressure checks on backing pumps and vacuum systems							■					■	
Safety circuits in vacuum systems, protection of vacuum gate valves							■		■		■	■	
Control of ionization vacuum gauges							■						
Pressure measurements on HV pump systems, e.g. diffusion, TMP, cryopump systems							■	■	■	■			
Venting systems											■	■	
Valve control, pressure dependant systems control							■	■	■	■	■	■	
Simple pressure control arrangements				■		■		■				■	■
<b>Calibration</b>													
Calibration of vacuum gauges and mass spectrometers				■						■			
Reference instruments for the determination of the physical properties of gases				■									
Precision measurements of low pressures also, in the presence of corrosive or reactive gases,				■									
<b>Miscellaneous</b>													
Vacuum annealing, melting, soldering and hardening furnaces				■			■	■	■				
Cooling and air conditioning technology				■	■	■	■						
Electron beam welding				■			■	■	■				
Metallurgy							■	■	■				

Vacuum Measuring, Controlling

# Select the Combination of Sensor and

## Operating Ranges for Active Sensors

	mbar	10 <sup>-12</sup>	10 <sup>-11</sup>	10 <sup>-10</sup>	10 <sup>-9</sup>	10 <sup>-8</sup>	10 <sup>-7</sup>	10 <sup>-6</sup>	10 <sup>-5</sup>	10 <sup>-4</sup>	10 <sup>-3</sup>	10 <sup>-2</sup>	10 <sup>-1</sup>	10 <sup>0</sup>	10 <sup>1</sup>	10 <sup>2</sup>	10 <sup>3</sup>
<b>Capacitance Diaphragm</b>																	
<b>CERAVAC Transmitters (x = 2, 3, 4 or 5)</b>																	
CTR 101 N / 100 N (1000 Torr)													0,13				1330
CTR 101 N / 100 N (100 Torr)												0,013					133
CTR 101 N / 100 N (10 Torr)											0,0013					13	
CTR 101 N / 100 N (1 Torr)									0,00013					1,3			
CTR 101 N / 100 N (0,1 Torr)									0,000013				0,13				
<b>Thermal Conductivity (according to Pirani)</b>																	
<b>THERMOVAC Transmitters</b>																	
TTR 101 (Pirani combined with capacitance diaphragm)									5 · 10 <sup>-5</sup>								1500
TTR 91 RN / TTR 911 RN										5 · 10 <sup>-4</sup>							1000
TTR 96 RN / TTR 916 RN										1 · 10 <sup>-4</sup>							1000
TTR 97 RN / TTR 917 RN										5 · 10 <sup>-4</sup>							1000
<b>Cold Cathode Ionization (according to Penning)</b>																	
<b>PENNINGVAC Transmitters</b>																	
PTR 90 N, DN 40 CF						1 · 10 <sup>-8</sup>											1000
PTR 90 N, DN 40 ISO-KF						1 · 10 <sup>-8</sup>											1000
PTR 90 N, DN 25 CF						1 · 10 <sup>-8</sup>											1000
PTR 225 N, DN 25 ISO-KF						1 · 10 <sup>-8</sup>				0,05							
PTR 237 N, DN 40 CF						1 · 10 <sup>-8</sup>				0,05							
<b>Hot Cathode Ionization</b>																	
<b>IONIVAC Transmitters (Bayard-Alpert combined with Pirani)</b>																	
ITR 90				5 · 10 <sup>-10</sup>													1000
ITR 200 with and without display				5 · 10 <sup>-10</sup>													1000
<b>Linear Pressure Sensors <sup>1)</sup></b>																	
DI/DU 200 and 201													0,1			200	
DI/DU 2000 and 2001														1		2000	
DI/DU 2001 rel.															-1000		+1000
<b>Handheld Measurement Instruments</b>																	
<b>THERMOVAC Sensors</b>																	
PV 101													0,1				1200
TM 101										5 · 10 <sup>-4</sup>							1200
<b>Loadlock Transmitters</b>																	
TTR 200 N, DN 16 ISO-KF									5 · 10 <sup>-5</sup>								1500
PTR 200 N, DN 16 ISO-KF						1 · 10 <sup>-8</sup>											1500

# Gauges which is ideal for your Application

## Operating Units for Active Sensors

Part No. EU / US	DISPLAY		GRAPHIX			IM 540
	ONE	THREE	ONE	TWO	THREE	
	230 001	230 025	230680V01	230681V01	230682V01	230 10
			1	1, 2	1, 2, 3	3, 4
			1	1, 2	1, 2, 3	3, 4
			1	1, 2	1, 2, 3	3, 4
			1	1, 2	1, 2, 3	3, 4
			1	1, 2	1, 2, 3	3, 4
	1	1, 2, 3	1	1, 2	1, 2, 3	3, 4
	1	1, 2, 3	1	1, 2	1, 2, 3	3, 4
	1	1, 2, 3	1	1, 2	1, 2, 3	3, 4
	1	1, 2, 3	1	1, 2	1, 2, 3	3, 4
	1	1, 2, 3	1	1, 2	1, 2, 3	
	1	1, 2, 3	1	1, 2	1, 2, 3	
	1	1, 2, 3	1	1, 2	1, 2, 3	
		1, 2, 3	1	1, 2	1, 2, 3	
		1, 2, 3	1	1, 2	1, 2, 3	
			1	1, 2	1, 2, 3	
			1	1, 2	1, 2, 3	
	1 (Only DU)	1,2,3 (Only DU)	1 (Only DU)	1,2 (Only DU)	1,2,3 (Only DU)	
	1 (Only DU)	1,2,3 (Only DU)	1 (Only DU)	1,2 (Only DU)	1,2,3 (Only DU)	
	1 (Only DU)	1,2,3 (Only DU)	1 (Only DU)	1,2 (Only DU)	1,2,3 (Only DU)	

Vacuum Measuring,  
Controlling

1, 2, 3, 4 indicate the channel to which the sensor may be connected

<sup>1)</sup> Possible

# Select the Combination of Sensor and

## Operating Ranges for passive Sensors

	mbar	$10^{-12}$	$10^{-11}$	$10^{-10}$	$10^{-9}$	$10^{-8}$	$10^{-7}$	$10^{-6}$	$10^{-5}$	$10^{-4}$	$10^{-3}$	$10^{-2}$	$10^{-1}$	$10^0$	$10^1$	$10^2$	$10^3$
<b>Thermal Conductivity (according to Pirani)</b>																	
<b>THERMOVAC Sensors</b>																	
TR 211											0,0005						1000
TR 211 NPT											0,0005						1000
TR 212											0,0005						1000
TR 216											0,0005						1000
<b>Cold Cathode Ionization (according to Penning)</b>																	
<b>PENNINGVAC Sensors</b>																	
PR 25					$1 \cdot 10^{-9}$						0,01						
PR 26					$1 \cdot 10^{-9}$						0,01						
PR 27					$1 \cdot 10^{-9}$						0,01						
PR 28					$1 \cdot 10^{-9}$						0,01						
<b>IONIVAC Sensores</b>																	
IE 414 (Bayard-Alpert)						$2 \cdot 10^{-11}$								0,01			
IE 514 (Extraktor)										$1 \cdot 10^{-12}$							0,0001



# Gauges which is ideal for your Application

## Operating Units for passive Sensors

	<b>IONIVAC IM 540</b>	<b>COMBIVAC</b>					
		<b>CM 51</b>	<b>CM 52</b>				
<b>Part No. EU / US</b>	230 100	-	-				
<b>Part No. RS 232 C</b>	-	230 110	230 115				
<b>Part No. Profibus</b>	-	230 111	230 116				
		1, 2	1, 2				
		1, 2	1, 2				
		1, 2	1, 2				
		1, 2	1, 2				
		3					
		3					
		3					
		3					
	1, 2		3				
	1, 2		3				

1, 2, 3 indicate the channel to which the sensor may be connected

# Basic Terms of Vacuum Metrology

Today, the total range of vacuum pressure accessible to measurement extends from atmospheric pressure (about 1000 mbar (750 Torr)) down to  $10^{-12}$  mbar/Torr, i.e. it extends over 15 powers of ten. The instruments used for measuring the pressure within this wide range are called vacuum gauges. For physical reasons it is not possible to create a single vacuum sensor through which it might be possible to perform quantitative measurements within the entire pressure range. Therefore, a variety of different vacuum gauges are available, each with their own characteristic measurement range which commonly extends over several powers of ten. A difference is made between direct and indirect pressure measurements. In the case of direct (or absolute) pressure measurements, the readings obtained through the vacuum gauge are independent of the type of gas and the pressure which is to be measured. Common are so-called mechanical vacuum gauges where the pressure is determined directly by recording the force acting on the surface of a diaphragm. In the case of so-called indirect pressure measurements the pressure is determined as a function of a pressure dependant property of the gas (thermal conductivity, ionization probability, for example). These properties do not only depend on the pressure, but also on the molar mass of the gases. For this reason, the pressure readings obtained through vacuum gauges which rely on indirect pressure measurements, depend on the type of gas. The readings usually relate to air or nitrogen as the measurement gas. For the measurement of other vapors or gases the corresponding correction factors must be applied.

## Vacuum Gauges where the Pressure Readings are Independent of the Type of Gas (Mechanical Vacuum Gauges)

### BOURDON Vacuum Gauge

The inside of a tube which is bent into a circular arc (the so-called Bourdon tube) is connected to the vacuum system. Due to the effect of the external atmospheric pressure, the end of the tube bends more or less during the evacuation process. This actuates the pointer arrangement which is attached to this point. The corresponding pressure can be read off on a linear scale. With Bourdon gauges it is possible to roughly determine pressures between 10 mbar (7.5 Torr) and atmospheric pressure.

### Capsule Vacuum Gauge

This vacuum gauge contains a hermetically sealed, evacuated, thinwalled diaphragm capsule which is located within the instrument. As the vacuum pressure reduces, the capsule bulges. This movement is transferred via a system of levers to a pointer and can then be read off as the pressure on a linear scale.

### Diaphragm Vacuum Gauge

In the case of the diaphragm vacuum gauge which is capable of absolute pressure measurements, a sealed and evacuated vacuum chamber is separated by a diaphragm from the vacuum pressure to be measured. This serves as the reference quantity.

With increasing evacuation, the difference between the pressure which is to be measured and the pressure within the reference chamber becomes less, causing the diaphragm flex. This flexure may be transferred by mechanical means like a lever, for example, to a pointer and scale, or electrically by means of a strain gauge or a bending bar for conversion into an electrical measurement signal. The measurement range of such diaphragm vacuum gauges extends from 1 mbar (0.75 Torr) to over 2000 mbar (1500 Torr).

### Capacitance Vacuum Gauge

The pressure sensitive diaphragm of these capacitive absolute pressure sensors is made of  $Al_2O_3$  ceramics. The term "capacitive measurement" means that a plate capacitor is created by the diaphragm with a fixed electrode behind the diaphragm. When the distance between the two plates of this capacitor changes, a change in capacitance will result. This change, which is proportional to the pressure, is then converted into a corresponding electrical measurement signal. Here too, an evacuated reference chamber serves as the reference for the pressure measurements. With capacitance gauges it is possible to accurately measure pressures from  $10^{-5}$  mbar/Torr to well above atmospheric pressure, whereby different capacitance gauges having diaphragms of different thickness (and therefore sensitivity) will have to be used.

## Vacuum Gauges where the Pressure Readings depend of the Type of Gas

### Thermal Conductivity Gauge (Pirani)

This measurement principle utilizes the thermal conductivity of gases for the purpose of pressure measurements in the range from  $10^{-4}$  mbar/Torr to atmospheric pressure. Today, only the principle of the controlled Pirani gauge is used by Leybold in order to attain a quick response. The filament within the gauge head forms one arm of a Wheatstone bridge. The heating voltage which is applied to the bridge is controlled in such a way, that the filament resistance and thus the temperature of the filament remains constant regardless of the quantity of heat given off by the filament. Since the heat transfer from the filament to the gas increases with increasing pressures, the voltage across the bridge is a measure of the pressure.

Improvements with regard to temperature compensation have resulted in stable pressure readings also in the face of large temperature changes, in particular when measuring low pressures.

### Cold Cathode Ionization Vacuum Gauge

Here the pressure is measured through a gas discharge within a gauge head whereby the gas discharge is ignited by applying a high tension. The resulting ion current is output as a signal which is proportional to the prevailing pressure. The gas discharge is maintained also at low pressures with the aid of a magnet.

New concepts for the design of such sensors permit safe and reliable operation of these so-called Penning sensors in the pressure range from  $10^{-2}$  to  $1 \times 10^{-9}$  mbar/Torr.

### Hot Cathode Ionization Vacuum Gauge

These sensors commonly use three electrodes. A hot cathode emits electrons which impinge on an anode. The gas, the pressure of which is to be measured, is thus ionized. The resulting positive ion current is detected through the third electrode - the so-called ion detector - and this current is used as the signal which is proportional to the pressure.

The hot cathode sensors which are mostly used today, are based on the Bayard-Alpert principle. With this electrode arrangement it is possible to make measurements in the pressure range from  $10^{-10}$  to  $10^{-2}$  mbar/Torr.

Other electrode arrangements permit access to a higher range of pressures from  $10^{-1}$  mbar/Torr down to  $10^{-10}$  mbar/Torr. For the measurement of pressures below  $10^{-10}$  mbar/Torr so-called extractor ionization sensors after Redhead are employed. In extractor ionization gauges the created ions are focused onto a very thin and short ion detector. Due to the geometrical arrangement of this system, interfering influences such as X-ray effects and ion desorption can be almost completely eliminated. The extractor ionization gauge permits pressure measurements in the range from  $10^{-4}$  to  $10^{-12}$  mbar/Torr.

### Selection of the right Vacuum Gauge

When selecting a suitable instrument for pressure measurements, the pressure range is not the only criteria. The operating conditions for the instrument play an important part. If, for example, there is the risk of excessive contamination, vibrations, or if air inrushes are to be expected etc., the instrument must be rugged enough. Thus for industrial applications diaphragm gauges, controlled thermal conductivity gauges as well as cold cathode ionization gauges are strongly recommended. Precision instruments are very often quite sensitive to rough operating conditions. These should therefore only be used while observing the corresponding applications information.

# Connection Accessories for Small Flanges

## Ordering Information

### DN 10 ISO-KF

### DN 16 ISO-KF

### DN 25 ISO-KF

	Part No.	Part No.	Part No.
Outer centering ring with O-ring Aluminum / FPM (FKM) ((Viton))	<b>183 53</b>	<b>183 53</b>	<b>183 54</b>
Fine filter on centering ring with O-ring Stainless steel / FPM (FKM) ((Viton))	<b>883 95</b>	<b>883 96</b>	<b>883 97</b>
Baffle with centering ring (FPM) ((FKM))	-	-	<b>230 078</b>
Connection accessories for metal seals or bake out room up to 150 °C			
Ultra sealing ring, aluminum (Set of 3)	<b>883 73</b>	<b>883 73</b>	<b>883 75</b>
Outer support ring	<b>883 74</b>	<b>883 74</b>	<b>883 76</b>
Clamping ring	<b>882 75</b>	<b>882 75</b>	<b>882 77</b>

## Ordering Information

### DN 40 ISO-KF

### DN 16 CF

### DN 40 CF

	Part No.	Part No.	Part No.
Outer centering ring with O-ring Aluminum / FPM (FKM) ((Viton))	<b>183 55</b>	-	-
Fine filter on centering ring with O-ring Stainless steel / FPM (FKM) ((Viton))	<b>883 98</b>	-	-
Baffle with centering ring (FPM) ((FKM))	<b>230 079</b>	-	-
Connection accessories for metal seals or bake out room up to 150 °C			
Ultra sealing ring, aluminum (Set of 3)	<b>883 77</b>	-	-
Outer support ring	<b>883 78</b>	-	-
Clamping ring	<b>882 78</b>	-	-
Connection accessories for CF connections			
Copper seals, (set of 10 pieces)	-	<b>839 41</b>	<b>839 43</b>
Screw (set of 25 pieces)	-	<b>839 00</b>	<b>839 01</b>
Replacement sinter filter with centering ring	<b>231 93 515</b>	-	-



# Products


## Handheld Measuring Instruments

### Digital PIEZOVAC Sensor PV 101


### Digital THERMOVAC Sensor TM 101



PIEZOVAC Sensor PV 101 (left) and THERMOVAC Sensor TM 101 (right)

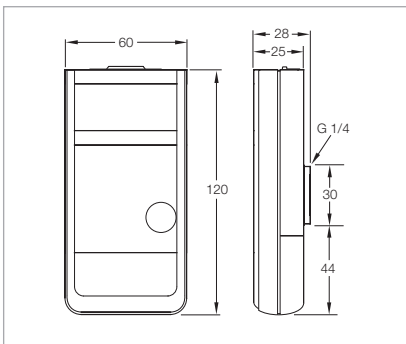

Dimensional drawings PIEZOVAC PV 101 (mm)

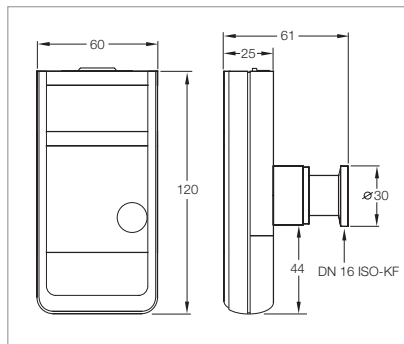

Dimensional drawings THERMOVAC TM 101 (mm)

The **PIEZOVAC PV 101** has been specially developed for food sector deployments. The device can be operated directly under vacuum conditions. Thanks to its detachable flange connection the size of the sensor was significantly reduced. In the medium vacuum range pressures of up to 0.1 mbar will be traced and read out. The exclusive use of its piezo sensor significantly increases the battery's service life so that the device is continuously ready for operation. With a measuring rate of minimum 50 ms, you are informed in short process times on the current pressure.

The **THERMOVAC TM 101** is the essential device for on-site service calls. Thanks to the easy use and integrated measurement data memory, pressures can be directly measured at different locations for monitoring the application. Owing to the advanced

measuring range of the high-precision Pirani sensor, pressures of up to  $5 \times 10^{-4}$  mbar can be displayed.

#### Advantages to the User

- Direct display of measuring values; other monitoring devices are not necessary
- Developed for deployments in demanding environments
- Versatile deployment due to mains-independent power supply
- High-precision measurements of all common gas types
- Export and analysis of stored measurement values via USB interface
- Online analysis of measurement values via USB interface

The digital compact PIEZOVAC PV 101 and THERMOVAC TM 101 combine high-quality sensor technology with modern processor technology in a handy design.

Owing to their battery mode, the devices can be attached and operated at any pressure measuring point, and directly display or store up to 2,000 values for later evaluations and visualizations. All data values stored can be exported and displayed on a computer via USB link and by means of the optional VacuGraph software. The software is especially useful for setting up the devices or calculating rises in pressure for detecting rough leaks.

A carrying case providing space for all required accessories and for storing and transport protection is enclosed with the device and the software.

#### Typical Applications

- Versatile deployment with vacuum pump and vacuum plant servicing
- Comparative measurements of fixed pressure gauges
- Direct measuring inside vacuum vessels or vacuum packs
- Measuring of rough leaks after maintenance services

## Technical Data

### PIEZOvac Sensor

#### PV 101

### THERMOVAC Sensor

#### TM 101

Measurement principle		Piezo-resistive	Piezo-resistive (gas type independent) and thermal conductance Pirani
Indicated units of measurement		mbar, Torr, microns, hPa	mbar, Torr, microns, hPa
Measurement range	mbar (Torr)	1200 to 0,1 (900 to 0,075)	1200 to $5 \times 10^{-4}$ (900 to $3.75 \times 10^{-4}$ )
Maximum overload	bar abs.	2	2
Maximum overload			
1200 – 10 mbar (900 to 75 Torr)		±0,3 % of full-scale	±0,3 % of full-scale
10 – $2 \times 10^{-3}$ mbar		-	10 % of measured value
( $7.5$ to $1.5 \times 10^{-3}$ Torr)		-	< factor 2 of measured value
$< 2 \times 10^{-3}$ mbar			
( $< 1.5 \times 10^{-3}$ Torr)			
Gas type correction factor		Ar, CO <sub>2</sub> , He, CO, H <sub>2</sub> , N <sub>2</sub> , Kr	Ar, CO <sub>2</sub> , He, CO, H <sub>2</sub> , N <sub>2</sub> , Kr
Materials in contact with the vacuum		Stainless steel 1.4305, Viton®, silicon gel	Stainless steel, gold, tungsten, nickel, glass, Viton
Measurement cycle	s	0,1 (50 ms, from 2018 series)	1.0
Data storing rate	s	0.1 to 6000	1 to 6000
Operating temperature			
Sensor	°C	+5 to +50	+5 to +50
Battery	°C	-20 to +45	-20 to +45
Storage temperature			
Sensor	°C	-20 to +60	-20 to +60
Battery	°C	+10 to +25	+10 to +25
Supply voltage		Rechargeable 9 V battery (recommendation: type Panasonic 6LR61PM, 9 V / 500 mAh) or 12 – 15 V DC external adaptor (miniature jack, + terminal at the tip)	Rechargeable 9 V battery (recommendation: type Panasonic 6LR61PM, 9 V / 500 mAh) or 12 – 15 V DC external adaptor (miniature jack, + terminal at the tip)
Power consumption			
< 200 mbar (< 150 Torr)	mW	2	60
> 200 mbar (> 150 Torr)	mW	2	2
Operating duration			
6LR61 alkaline (vacuum operation)	h	< 2500	up to 75
Display		LCD 12 mm	LCD 12 mm
Connection (stainless steel)		G 1/4 internal thread (DN 16 ISO-KF with adaptor, removable)	DN 16 ISO-KF
PC interface		Mini USB-B connector	Mini USB-B connector
Dimensions	mm	60 x 120 x 50 (DN 10 ISO-KF)	60 x 120 x 61
	mm	60 x 120 x 28 (G 1/4)	
Protection class	IP	40	40
Weight (including battery)	kg (lbs)	0.2 (0.44)	0.23 (0.51)

## Ordering Information

### PIEZOvac Sensor

#### PV 101

### THERMOVAC Sensor

#### TM 101

	Part No.	Part No.
Sensor	<b>230 080 V01</b>	<b>230 081 V01</b>
Including AIMn battery, 9 V block 6LR 61		
Accessory kit for VacuGraph Windows software including	<b>230 082 V01</b>	<b>230 082 V01</b>
USB interface cable (2 m)		
protection case with foam insert and 15 V wall power supply for 100 – 260 V, 50/60 Hz mains and AIMn battery, 9 V block 6LR 61		

# Active Sensors / Transmitter

## CERAVAC Transmitter

### CTR 100 N and CTR 101 N



CERAVAC Transmitter CTR 100 N (left) und CERAVAC Transmitter CTR 101 N (right)

The CERAVAC transmitters with an advanced all-welded INCONEL® and stainless steel sensor and microprocessor-based electronics offer excellent accuracy and reproducibility. The CTR 100 N and CTR 101 N allow gas type independent pressure measurements and are able to tolerate bursts of pressure without suffering physical damage or calibration shifts. The robust sensor is suited for the most corrosive processes as the sensor is highly resistant to corrosion from common process chemicals. The sensor of the CTR 101 N is internally heated and regulated to 45 °C to offer full-scale pressure ranges from 1000 to 0.1 Torr.

#### Advantages to the User


- Excellent accuracy and long-term stability
- Very good temperature compensation regardless of ambient conditions
- Highly resistant against corrosion and aggressive gases
- Fast and accurate response to pressure changes
- Improved reliability by high overpressure rating
- Serial Interface (RS 232 protocol)
- Zero adjust push button
- Optional heated (45 °C) version offers 2x better accuracy

#### Typical Applications


- General vacuum measurement and control with very low measurement uncertainty
- Fore and medium vacuum pressure measurement
- Research & Development
- System process control
- Chemical and Semiconductor processes
- LED and solar cell manufacturing
- Physical Vapor Deposition (PVD)
- Reference sensor for calibration systems

INCONEL® is a registered trademark of Inco Alloys International, Inc.




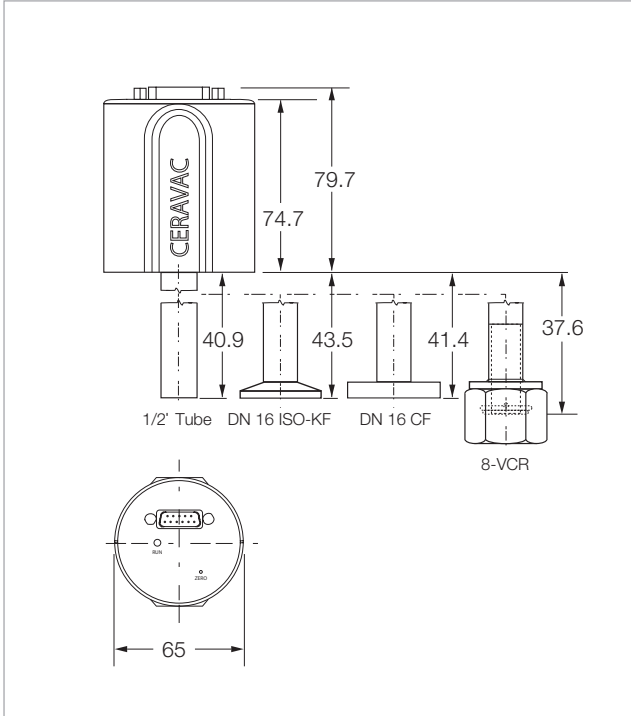

Dimensional drawing for the CERAVAC Transmitter CTR 100 N (mm)

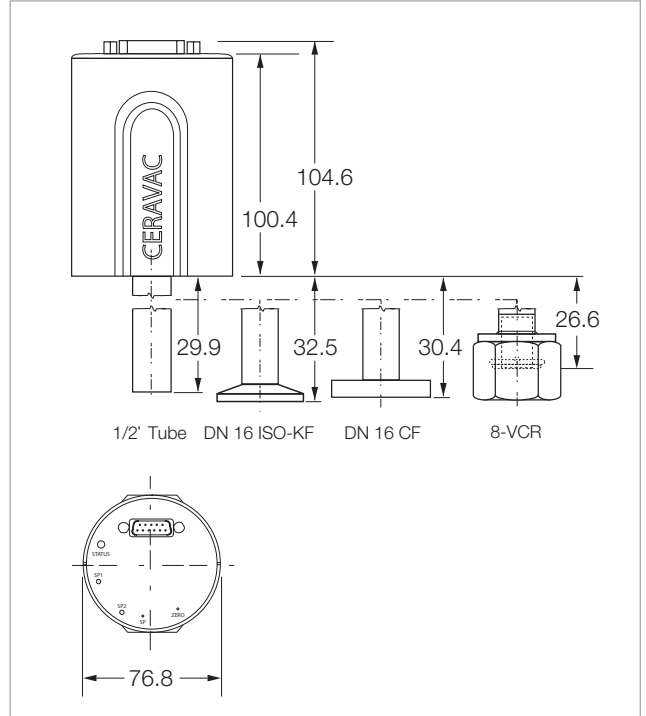

Dimensional drawing for the CERAVAC Transmitter CTR 101 N (mm)

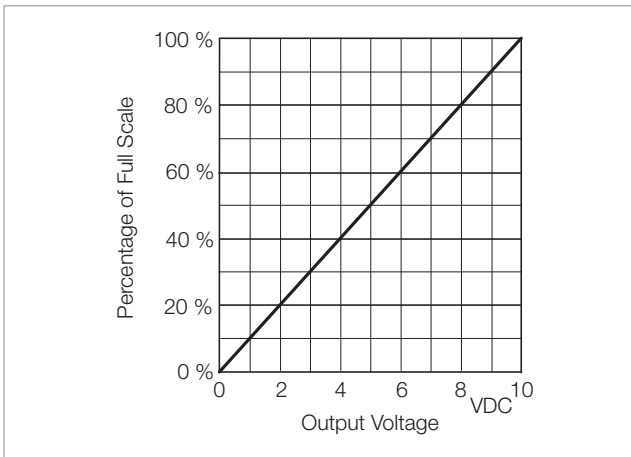

Characteristic of the CERAVAC Transmitter CTR 100 N and CTR 101 N

## Technical Data

### CERAVAC Transmitter

#### CTR 100 N (Temperature Compensated)      CTR 101 N (45 °C heated)

Full scale (FS) / Measurement range		0,1 Torr / $1 \times 10^{-5}$ – 0,1 Torr 1 Torr / $1 \times 10^{-4}$ – 1 Torr 10 Torr / $1 \times 10^{-3}$ – 10 Torr 20 Torr / $2 \times 10^{-3}$ – 20 Torr 100 Torr / 0,01 – 100 Torr 1000 Torr / 0,1 – 1000 Torr	0,1 Torr / $1 \times 10^{-5}$ – 0,1 Torr 1 Torr / $1 \times 10^{-4}$ – 1 Torr 10 Torr / $1 \times 10^{-3}$ – 10 Torr – 100 Torr / 0,01 – 100 Torr 1000 Torr / 0,1 – 1000 Torr
Measurement uncertainty		0.2% ± temperature effect 0.5% ± temperature effect (0.1 Torr)	0.12% ± temperature effect 0.15% ± temperature effect (0.1 Torr)
Sensor Measurement principle		INCONEL® membrane Capacitance diaphragm gauge	
Supply voltage	V DC	+14 to +30	
Power consumption	W	≤ 1	≤ 11 (at operating temperature ≤ 8)
Electrical connection		15-pol. Sub-D	
Analog output measurement range	V	0 to 10	
Interface		RS 232	
Setpoints		0	2
Status indicators		LED	
Max. cable length	m	30	
Max. overrange pressure	bar (hPa)	3.1 (3100)	
Operating temperature range	°C (°F)	+15 to +50	+15 to +40
Storage temperature range	°C (°F)	-20 to +80	
Max. bakeout temperature	°C (°F)	Not bakeable	
Max. rel. humidity	% n.c.	25 to 95	
Installation orientation		Any	
Wetted part material		INCONEL®, Stainless steel 316	
Dead volume, approx.	cm <sup>3</sup>	6.29	
Weight	g (lbs)	513 (0.11)	669 (0.15)
Protection class	IP	40	
CE certification		EMC Directive 2014/30/EEC	
Controller type		GRAPHIX ONE / TWO / THREE	
Temperature effects Zero of FS	%/°C	0,005 (1000/100/20/10 Torr) 0,015 (1 Torr) 0,02 (0,1 Torr)	0,0025 (1000/100/10/1 Torr) 0,005 (0,1 Torr)
Span of reading	%/°C	0.01 (1000/100/20/10/1 Torr) 0.03 (0.1 Torr)	0.01 (1000/100/10/1 Torr) 0.03 (0.1 Torr)
Response time (10% to 90% FS)	ms	40 / 80 (1 Torr) / 120 (0.1 Torr)	

## Ordering Information

### CERAVAC Transmitter

#### CTR 100 N

#### CTR 101 N

	Part No.	Part No.
DN 16 ISO-KF		
1000 Torr	<b>230300V02</b>	<b>230320V02</b>
100 Torr	<b>230301V02</b>	<b>230321V02</b>
20 Torr	<b>230340V02</b>	-
10 Torr	<b>230302V02</b>	<b>230322V02</b>
1 Torr	<b>230303V02</b>	<b>230323V02</b>
0.1 Torr	<b>230304V02</b>	<b>230324V02</b>
DN 16 CF-R		
1000 Torr	<b>230305V02</b>	<b>230325V02</b>
100 Torr	<b>230306V02</b>	<b>230326V02</b>
10 Torr	<b>230307V02</b>	<b>230327V02</b>
1 Torr	<b>230308V02</b>	<b>230328V02</b>
0.1 Torr	<b>230309V02</b>	<b>230329V02</b>
Cajon 8-VCR		
1000 Torr	<b>230310V02</b>	<b>230330V02</b>
100 Torr	<b>230311V02</b>	<b>230331V02</b>
10 Torr	<b>230312V02</b>	<b>230332V02</b>
1 Torr	<b>230313V02</b>	<b>230333V02</b>
0.1 Torr	<b>230314V02</b>	<b>230334V02</b>
1/2" Tube		
1000 Torr	<b>230315V02</b>	<b>230335V02</b>
100 Torr	<b>230316V02</b>	<b>230336V02</b>
10 Torr	<b>230317V02</b>	<b>230337V02</b>
1 Torr	<b>230318V02</b>	<b>230338V02</b>
0.1 Torr	<b>230319V02</b>	<b>230339V02</b>
Calibration	See Section "Miscellaneous", paragraph "Leybold calibration service"	
Operating Units		
GRAPHIX ONE	<b>230680V01</b>	
GRAPHIX TWO	<b>230681V01</b>	
GRAPHIX THREE	<b>230682V01</b>	
Connection cable, Sub-D 15-way female to Sub-D 15-way male, shielded		
5 m	<b>Type C</b>	
10 m	<b>124 55</b>	
15 m	<b>230 022</b>	
20 m	<b>124 56</b>	
30 m	<b>124 57</b>	
	<b>124 58</b>	

# Linear Pressure Sensors

## DI/DU 200, DI/DU 201, DI/DU 2000, DI/DU 2001, DI/DU 2001 rel.



DI 200 (left) and DI 2000 (right), DU similar

Piezo or capacitive pressure sensor based on ceramics technology. Available as absolute or relative pressure sensor.

### Advantages to the User


- Absolute pressure ranges from 0.1 to 200 mbar or 1 to 2000 mbar
- Relative pressure range from -1000 mbar to +1000 mbar
- Excellent overload characteristic due to the  $Al_2O_3$  ceramics diaphragm
- Highly corrosion resistant
- Independent of the type of gas
- Vibration resistant
- 2-wire pressure sensor (DI)
- 4-wire pressure sensor (DU)
- Supply voltage range  
12 to 30 V DC (DI)  
14.5 to 30 V DC (DU)
- Linear output signal 4 to 20 mA (DI)
- Linear output signal 2 to 10 V (DU)
- Compact design
- Digital zero adjustment possible via pushbutton
- IP 54 rated stainless steel housing (DI/DU 200 und DI/DU 201),  
IP 54 rated aluminum housing (DI/DU 2000 und DI/DU 2001)
- DN 16 ISO-KF connection with female G 1/4" inside thread

### Typical Applications


- Pressure measurements in the rough vacuum range, and for corrosive media (Solar, coating)
- Chemical process engineering
- Vacuum packaging
- Drying processes
- Casting resin technology (degassing of potting compounds)
- Measurement of operating and filling pressure, during the production of lamps
- Filling systems for brake fluids (DI 201/DI 2001)
- Filling systems for refrigerants
- Measurement of pressure relative to atmospheric pressure (DI/DU 2001 rel.)

### Operating Units for DU sensors


- DISPLAY
- ONE
  - TWO
  - THREE
- CENTER / GRAPHIX
- ONE
  - TWO
  - THREE

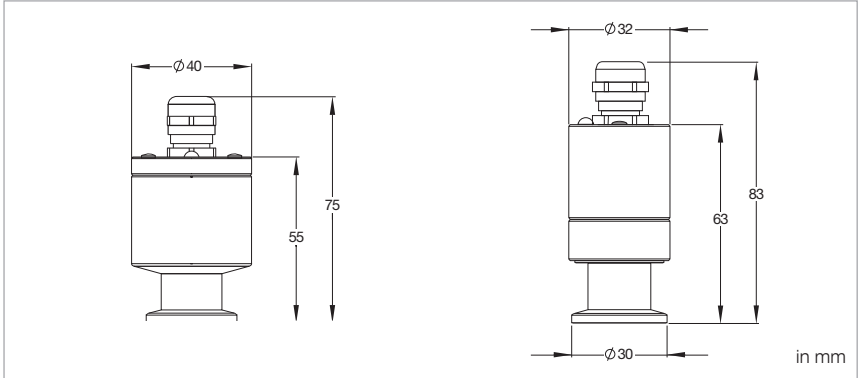


Dimensional drawing for the sensors  
DI/DU 200 and DI/DU 201 (left), DI/DU 2000, DI/DU 2001 and DI/DU 2001 rel. (right)

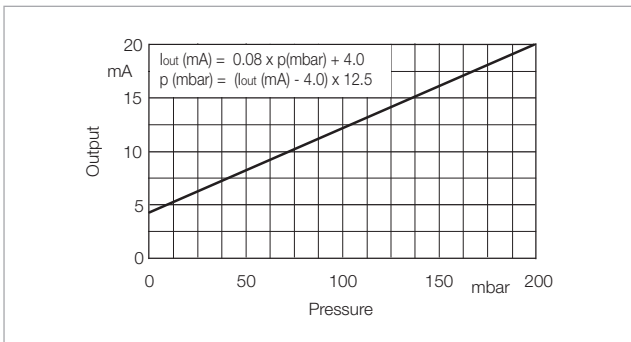


Characteristic of the DI 200 and DI 201 Sensors

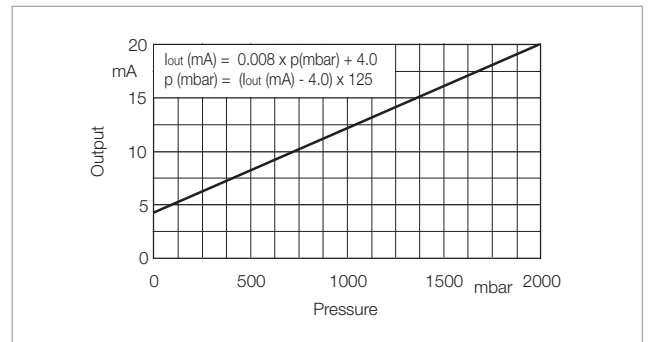

Characteristic of the DI 2000 and DI 2001 Sensors

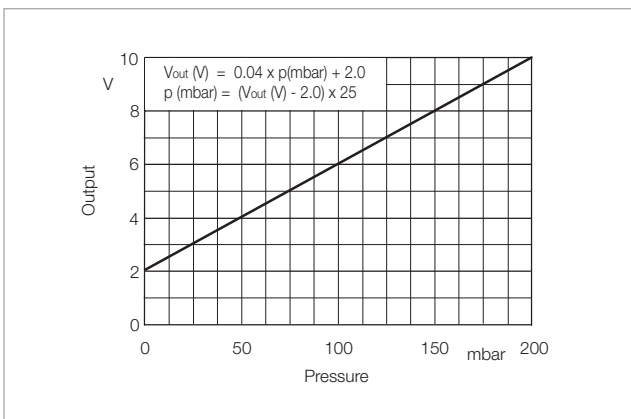

Characteristic of the DU 200 and DU 201 Sensors

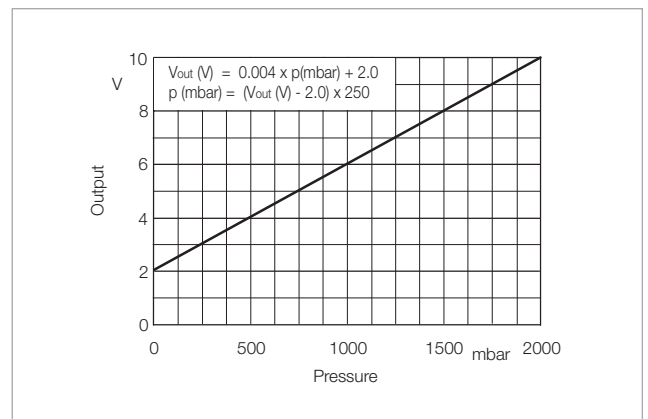

Characteristic of the DU 2000 and DU 2001 Sensors

## Technical Data

### DI/DU 200    DI/DU 201    DI/DU 2000    DI/DU 2001    DI/DU 2001 rel.

Measurement range	mbar (Torr)	0.1 to 200 (0.075 to 150)	0.1 to 200 (0.075 to 150)	1 to 2000 (0.75 to 1500)	1 to 2000 (0.75 to 1500)	-1000 to +1000 (-750 to +750) relative pressure
Overload range, max. (flange side)	bar	6	6	5	5	5
Nominal temperature range	°C	0 to +60				
Measurement uncertainty <sup>1)</sup>	% FS	0.25	0.25	0.25	0.25	0.25 <sup>3)</sup>
Repeatability	% FS	0.05				
Temperature error						
Zero drift	% FS/10°K	0.1				
Sensitivity drift	% FS/10°K	0.15				
Measurement principle, gas type independent		Capacitive	Capacitive	Piezoresistive	Piezoresistive	Piezoresistive
Sensing head supply						
DI		Two-wire system				
DU		Four-wire system				
Output signal						
DI	mA	4 to 20				
DU	V	2 to 10				
Supply voltage						
Operating range						
DI	V DC	12 to 30				
DU	V DC	14.5 to 30				
Dead volume	cm <sup>3</sup>	3.9	3.9	1.8	1.8	1.8
Vacuum connection	DN	16 ISO-KF				
Electrical connection						
DI		diode plug 7pole, cable 5 m				
DU		plug FCC 68, cable 5 m				
Weight, approx.						
DI	kg (lbs)	0.36 (0.79)	0.36 (0.79)	0.26 (0.57)	0.26 (0.57)	0.26 (0.57)
DU	kg (lbs)	0.34 (0.75)	0.34 (0.75)	0.24 (0.53)	0.24 (0.53)	0.24 (0.53)
Protection class	IP	54				
Materials in contact with the medium		Stainless Steel 1.4305 Al <sub>2</sub> O <sub>3</sub> (96 %) Ceramics FPM (FKM)	Stainless Steel 1.4305 Al <sub>2</sub> O <sub>3</sub> (96 %) Ceramics EPDM	Stainless Steel 1.4305 Al <sub>2</sub> O <sub>3</sub> (96 %) Ceramics FPM (FKM)	Stainless Steel 1.4305 Al <sub>2</sub> O <sub>3</sub> (96 %) Ceramics EPDM	Stainless Steel 1.4305 Al <sub>2</sub> O <sub>3</sub> (96 %) Ceramics EPDM
Operating units						
DI series		-				
DU series <sup>2)</sup>		DISPLAY ONE, THREE GRAPHIX ONE, TWO, THREE				

<sup>1)</sup> Sum of linearity, hysteresis and reproducibility

<sup>2)</sup> May possibly require a firmware update

<sup>3)</sup> 0.25 % FS in the range of -1000 ... + 200 mbar / 0.5 % FS in the range of > +200 mbar

### Ordering Information

**DI/DU 200    DI/DU 201    DI/DU 2000    DI/DU 2001    DI/DU 2001  
rel.**

	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>
Linear sensor DI complete with 5 m long connection cable and connecting plug (circular connector)	<b>158 12V01</b>	<b>158 14V01</b>	<b>158 13V01</b>	<b>158 15V01</b>	<b>245 000V01</b>
Extension cable circular connector, 7-pole socket/plug 10 m 20 m			<b>200 04 112</b> <b>200 02 645</b>		

### Ordering Information

**DI/DU 200    DI/DU 201    DI/DU 2000    DI/DU 2001    DI/DU 2001  
rel.**

	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>	<b>Part No.</b>
Linear sensor DU complete with 5 m long connection cable and connecting plug (FCC68)	<b>230500V01</b>	<b>230501V01</b>	<b>230502V01</b>	<b>230503V01</b>	<b>230504V01</b>
Extension cable FCC68, socket/plug 10 m 20 m			<b>230505V01</b> <b>230506V01</b>		
Operating unit GRAPHIX ONE / TWO / THREE DISPLAY ONE / THREE	please see chapter "Controller and Operating Units for Active Sensors" please see chapter "Controller and Operating Units for Active Sensors"				

# THERMOVAC Transmitter

## TTR RN Series - TTR 91/911, 96/916, 97/917 RN(S)



THERMOVAC TTR RN Transmitter

The THERMOVAC Transmitter pirani gauges from the TTR RN series operate on the principal of thermal conductivity in which the rate of heat loss from a heated filament is dependent on the pressure of the gas (around filament).

### Advantages to the User

- **Robust - new filament technology**  
With two main variants, Tungsten for standard and Platinum for harsh, we can help you to tailor your vacuum measurement system in order to “fit and forget” it. Alongside the filament choice all RN series gauges come with an integrated filter to increase their resistance to particle contamination.
- **Easy monitoring and control**
- **Flexibility - fittings for your needs**  
The applications that these new gauges go into are varied. Therefore we have created a system that gives you the choice, whether this be on flange type, output, or interface.
- **Easy serviceability**  
The ability to easily service vacuum gauges is key to maintaining a healthy system. With our RN series no tools are required to complete maintenance: simply pull out the pin, and the two halves separate, allowing you to easily replace the measuring cell/electronics
- **Digital or analog interface**  
You now have the option of standard analog or digital (RS232 or RS485) interfaces, with no impact on gauge performance/size.
- **Integrated filter**  
The integrated filter further protects the gauge from particle contaminants, leading to a stable solution for many years
- **Filament technology**  
Our new filament technology gauges will provide you with a stable solution no matter your environment. With their long length, they also give great measurements across the breadth of the range.
- **Choice of connection**  
Whilst the RJ45/FCC68 connector has been popular for years, some processes prefer a “lockable” connector. That is the reason why we offer the analog variants with a choice of D-Sub or RJ45/FCC68.
- **Flexible output**  
We appreciate the pain of qualifying new items when you have the need to upgrade of switch. Our new gauges offer full backwards compatibility, as well as common voltage scaling: we help you save time and keep to the minimum work required.
- **Wide range power supply**  
For customers integrating vacuum solutions directly, our gauges can take any power input from 15 V to 48 V. Thus eliminating the need for multiple power supplies for the various vacuum components.
- **LED ring pressure indication**  
The light rings do not only display basic “working/not working” information. They also give precious pressure indication via pulsing patterns and guide you through the menu set up.
- **In-house manufacturing from experts**  
Our range of RN gauges are designed and manufactured in-house at our UK located production company. From the drawing board to manufacture this gauge has been designed to meet all your needs.




## Typical Applications

The THERMOVAC Transmitters offer a high degree of versatility due to a new integrated filter and robust filaments.

They are suited for applications in the medium and rough vacuum range. Typical applications are:

- Industrial applications from glass coating to industrial furnaces
- Power generation from battery cell to transformer manufacture
- Research and development
- Analytical instruments

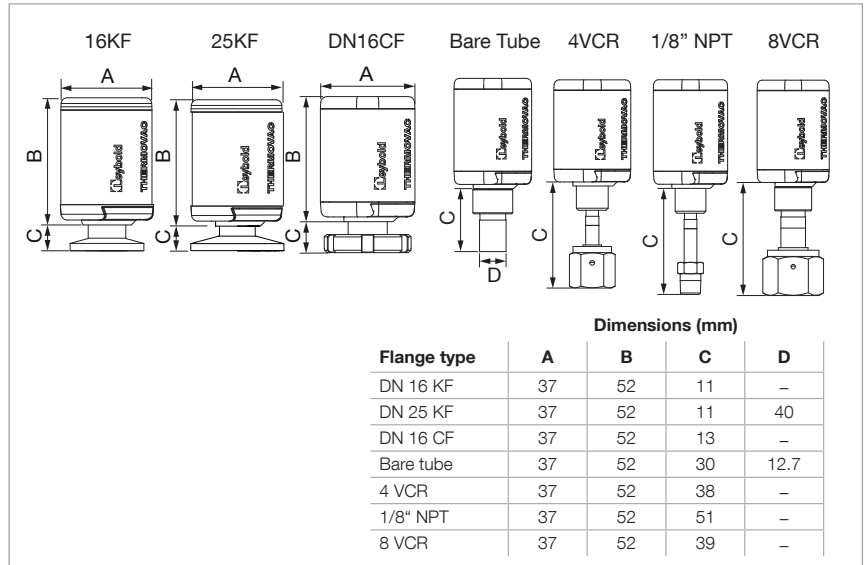

Dimensional drawings for THERMOVAC Transmitters TTR RN


## Design Principle

The gauge has a detachable tube that allows the replacement of the tube or electronics housing.

A multi-function button on the top of the gauge is for navigation through the various menus within the gauge.

An LED indicator surrounding the top of the gauge provides a status indication and aids the adjustment of the gauge when navigating through the menus.

The gauge is available with different electrical connectors, voltage scaling and vacuum flanges to integrate with the customer process.

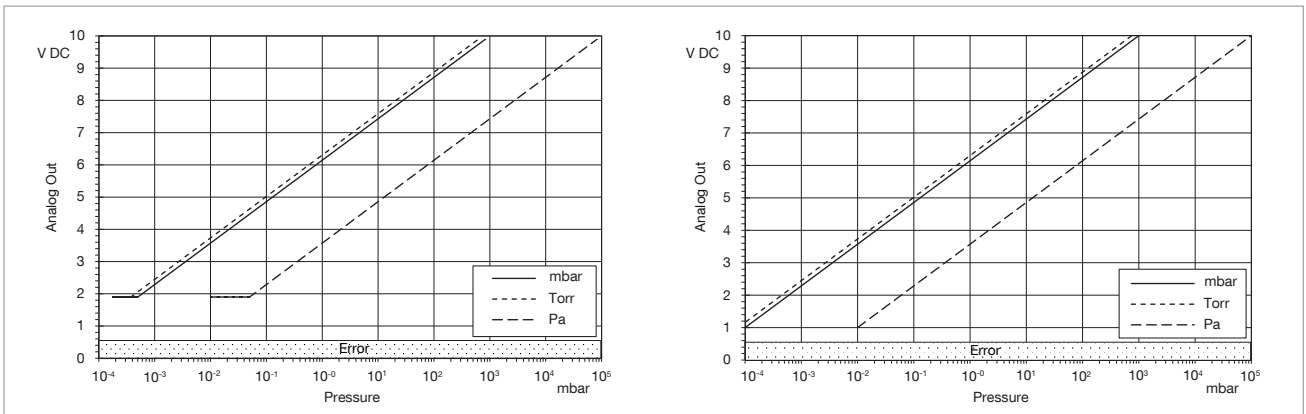

Characteristics of the THERMOVAC Transmitters TTR 91 RN and TTR 97 RN (left) and TTR 96 RN (right)

## Technical Data

### THERMOVAC Transmitter TTR RN Series

#### TTR 91 / 911 RN    TTR 96 / 916 RN    TTR 97 / 917 RN

Measurement range	mbar (Torr)	5 x 10 <sup>-4</sup> to Atmosphere (3.75 x 10 <sup>-4</sup> to Atmosphere)	1 x 10 <sup>-4</sup> to Atmosphere (7.5 x 10 <sup>-4</sup> to Atmosphere)	5 x 10 <sup>-4</sup> to Atmosphere (3.75 x 10 <sup>-4</sup> to Atmosphere)
Measurement uncertainty of reading (typical) <sup>1)</sup>	mbar	5 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±50 % 1 x 10 <sup>-3</sup> to 100 ±15 % 100 to atm ±50 %	5 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±50 % 1 x 10 <sup>-3</sup> to 10 ±15 % 10 to 100 ±50 %	5 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±50 % 1 x 10 <sup>-3</sup> to 100 ±15 % 100 to atm ±50 %
Repeatability of reading (typical) <sup>1)</sup>	mbar	1 x 10 <sup>-3</sup> to 100 ±2 %	1 x 10 <sup>-3</sup> to 10 ±2 %	1 x 10 <sup>-3</sup> to 100 ±2 %
Measurement principle		Thermal conductivity according to Pirani		
Supply voltage	V DC	15 to 48		
Power consumption	W	max. 1.5		
Electrical connection	V	RJ45 / 9-pin D-Sub		
Analog output	V DC	$V_{out} = \log_{10}(P_{mbar}) \times 1.286 + 6.143$		
Impedance	Ω	0 - 10		
Max. output current	mA	10		
Interfaces		1		
Set point		RS232 or RS485		
Range	V	0, 1, or 2 depending on model		
Relay contact rating	V DC	0.8 to 10.2		
Status indicators		max. 48, 500 mA		
Max. cable length	m	LED-ring (360°)		
Overpressure limit (abs.)	bar	100		
Operating temperature range	°C (°F)	10		
Storage temperature range	°C (°F)	5 to 60 (41 to 140)		
Max. bakeout temperature	°C (°F)	-30 to +70 (-86 to 158)		
Max. rel. humidity	% n.c.	85 (185), non-operating (electronics removed)		
Installation orientation		80% RH up to 31°C decreasing linearly to 50% RH at 40°C and above		
Materials exposed to vacuum		Any		
Filament material		Tungsten/Rhenium (Standard)	Platinum/Iridium (corrosion resistant)	Platinum/Rhodium (corrosion resistant)
Tube		Stainless steel 316L and 304L		
Filter		Stainless steel 316L		
Other		Glass, Ni, NiFe, Stainless steel 302S26	Glass, Ni, NiFe, Stainless steel 302S26, PTFE	Glass, Ni, NiFe, Stainless steel 302S26
Dead volume (DN 16 ISO-KF)	cm <sup>3</sup>	3.3		
Weight (DN 16 ISO-KF)	g	130		
Protection class	IP	40		
CE certification		CE, UKCA		
Compatible controllers		DISPLAY, GRAPHIX, IM540, TURBO.CONTROL i		

<sup>1)</sup> Accuracy and repeatability are typical values measured with Nitrogen gas at ambient temperature after zero adjustment

## Gauge Finder Matrix

The range of the pirani gauge is highly configurable.

The characteristics of a particular product are defined through the product item number or description. The characteristics in the following table can be selected at the point of purchase.

TTR 9	6	RN	S	25 KF	9 PIN D SUB	
<p><b>Filament / pressure range</b></p> <p>1: Standard filament 5 x 10<sup>-4</sup> mbar to 1000 mbar</p> <p>6: Corrosion resistant filament 1 x 10<sup>-4</sup> to 1000 mbar</p> <p>7: Corrosion resistant filament 5 x 10<sup>-4</sup> mbar to 1000 mbar</p> <p><b>Setpoint</b></p> <p>[Blank]: Transistor setpoint S: 2 solid state relay setpoints</p> <p><b>Flange</b></p> <p>16KF: 16 KF flange 25 KF: 25 KF flange 1/8" NPT: 1/8" NPT (male) 4VCR: Swagelok 4 VCR fitting (female) 8VCR: Swagelok 8 VCR fitting (female) Bare tube: 1/2" bare tube DN16CF: DN 16 CF</p> <p><b>Connector</b></p> <p>[Blank]: FCC68 connector 9pin DSUB: 9-pin D-Sub (male)</p> <p><b>Voltage output</b></p> <p>[Blank]: 1.0 V to 10 V log linear with pressure G: 1.9 V to 10 V log linear with pressure O: 2.2 V to 8.5 V log linear with pressure Q: 1.875 V to 8.875 V log linear with pressure</p>						

Item description matrix

2	1	L	2	2	2	1	2	0	0
<p><b>Filament / pressure range</b></p> <p>1: Standard (TTR 91 RN) 5 x 10<sup>-4</sup> mbar to 1000 mbar 2: Corrosion resistant (TTR 96 RN) 1 x 10<sup>-4</sup> to 1000 mbar 3: Corrosion resistant (TTR 97 RN) 5 x 10<sup>-4</sup> mbar to 1000 mbar <sup>1)</sup></p> <p><b>Setpoint</b></p> <p>0: No setpoint 1: 1 setpoint <sup>2)</sup> 2: 2 setpoints <sup>3)</sup></p> <p><b>Flange</b></p> <p>1: DN 16 KF flange 2: DN 25 KF flange 5: 1/8" NPT (male) 6: Swagelok 4 VCR fitting (female) 7: Swagelok 8 VCR fitting (female) 8: 1/2" bare tube 9: DN 16 CF</p> <p><b>Comms</b></p> <p>1: 0 - 10 V 5: RS 232 <sup>4)</sup> 0: RS 485 <sup>4)</sup></p> <p><b>Connector</b></p> <p>1: FCC68 / RJ45 2: 9pin D-subminiature (male)</p> <p><b>Voltage output</b></p> <p>0: Standard Leybold 1.0 V to 10 V 2: 1.9 V to 10 V <sup>5)</sup> 3: 2.2 V to 8.5 V <sup>5)</sup> 4: 1.875 V to 8.875 V <sup>5)</sup></p> <p><sup>1)</sup> RS 232/485 versions with single setpoint only <sup>2)</sup> Only with RS232/485 <sup>3)</sup> Only with analog 0-10 V <sup>4)</sup> Only available with 9-pin D-Sub <sup>5)</sup> Only available with 0-10 V</p>									

Part number matrix

## Ordering Information

## THERMOVAC Transmitter TTR RN

Typical product examples	Part No.
TTR 91 RN - DN 16 KF	<b>21L 101 1100</b>
TTR 91 RN - DN 16 CF	<b>21L 109 1100</b>
TTR 91 RN - 1/8" NPT	<b>21L 105 1100</b>
TTR 91 RN - Bare tube	<b>21L 108 1100</b>
TTR 91 RNS - DN 16 KF	<b>21L 121 1100</b>
TTR 91 RNS - DN 16 CF	<b>21L 129 1100</b>
TTR 91 RNS - 1/8" NPT	<b>21L 125 1100</b>
TTR 96 RNS - DN 16 KF	<b>21L 221 1100</b>
TTR 96 RNS - DN 16 CF	<b>21L 229 1100</b>
TTR 96 RNS - 1/8" NPT	<b>21L 225 1100</b>
<b>Spare Parts</b>	
Measuring tube	
TTR 91 RN - DN 16 KF	<b>E21L 1A1 AAAA</b>
TTR 96 RN - DN 25 KF	<b>E21L 2A2 AAAA</b>
TTR 97 RN - DN 16 CF	<b>E21L 3A9 AAAA</b>
TTR 97 RN - 1/8" NPT	<b>E21L 3A5 AAAA</b>
TTR 97 RN - 4 VCR	<b>E21L 3A6 AAAA</b>
TTR 97 RN - 8 VCR	<b>E21L 3A7 AAAA</b>
TTR 97 RN - Bare tube	<b>E21L 3A8 AAAA</b>
Electronics	
TTR 91 RN - no setpoint, 0-10 V, RJ45, 0-10 V	<b>E21L 10A 1100</b>
TTR 96 RN - 1 setpoint, RS232, 9-pin D-Sub, 1.9 - 10 V	<b>E21L 21A 5220</b>
TTR 97 RN - 2 setpoints, RS485, 9-pin D-Sub, 2.2 - 8.5 V	<b>E21L 32A 0230</b>
TTR 97 RN - 2 setpoints, RS485, 9-pin D-Sub, 1 - 9 V	<b>E21L 32A 0240</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"
Operating Units	
DISPLAY ONE	<b>230 001</b>
DISPLAY THREE	<b>230 025</b>
GRAPHIX ONE	<b>230680V01</b>
GRAPHIX TWO	<b>230681V01</b>
GRAPHIX THREE	<b>230682V01</b>
Connection cable, FCC 68 on both ends <sup>1)</sup>	<b>Type A</b>
5 m	<b>124 26</b>
10 m	<b>230 012</b>
15 m	<b>124 27</b>
20 m	<b>124 28</b>
30 m	<b>124 29</b>
50 m	<b>124 31</b>
75 m	<b>124 32</b>
100 m	<b>124 33</b>
Optional accessories	
Spiral tube DN 16 ISO-KF	<b>230 082</b>

<sup>1)</sup> See chapter "Connection cables for Active Sensors"



# THERMOVAC Transmitter

## TTR 101 / TTR 101 S2 / TTR 101 S2 PB



The Pirani Capacitance Diaphragm Gauge is the first vacuum gauge which combines ceramic capacitance diaphragm and thermal conductivity technologies. The Leybold TTR 101 offers superior accuracy and gas type independent readings between 10 mbar and 1500 mbar.

### Advantages to the User


- Large display range  $5 \times 10^{-5}$  to 1500 mbar
- Gas type independent above 10 to 1500 mbar
- Available optional display, or with up to two integrated setpoints
- Easy to exchange plug & play sensor element with on-board calibration data - guarantees high reproducibility and low cost of ownership
- Compact design
- LED signal for set point relay status
- Rapid cycling
- NRTL, ETL, RoHs and WEEE standards

### Typical Applications


- General vacuum measurement and control from low to the high vacuum range
- Forevacuum pressure measurement
- Safety circuits in vacuum systems
- Load lock control
- Control of high vacuum ionization gauge

### Option

Dust and other particles may cause increasing measurement errors and reduced lifetime. Therefore we recommend the installation of a fine filter in critical applications. Fine filters are listed in chapter "General", para. "Connection Accessories for Small Flanges".

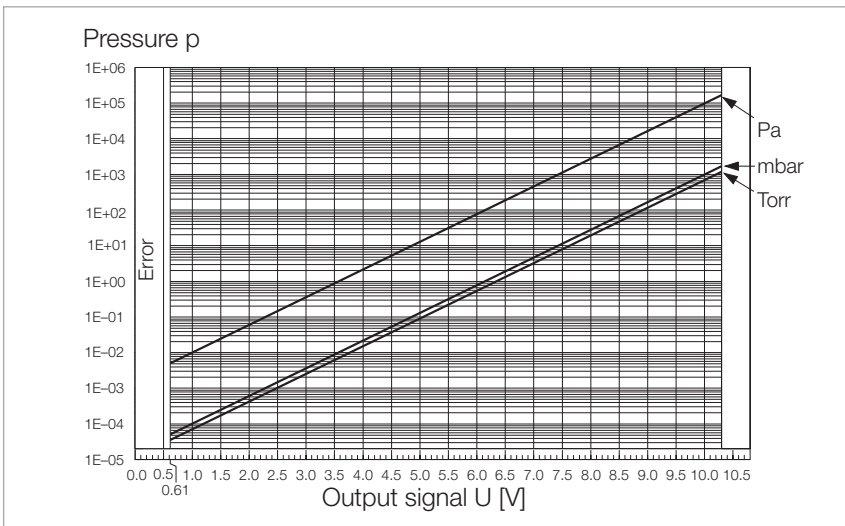

Kennlinie des THERMOVAC-Transmitters TTR 101 (S2)

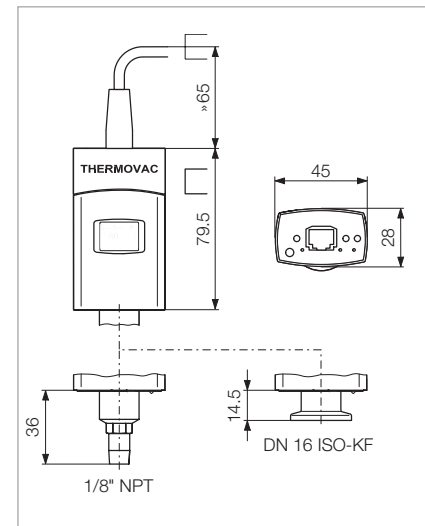

Maßzeichnung des TTR 101 (S2)



## Further Technical Data

### THERMOVAC Transmitter TTR 101 / TTR 101 S2 / TTR 101 S2 PB

Supply voltage at the transmitter Ripple	V DC	Class 2 / LPS +15 to +30 < 1 V <sub>ss</sub>
Power consumption	W	≤ 2.5
Fuse to connect ahead		1 AT
Electrical connection Measurement cord Cable length	m	FCC 68 socket with shield: 0.14 mm <sup>2</sup> / wire ≤ 100
Earthing concept Vacuum connection and signal earth		--> "Electrical connection" connected via 10 kV, 10 nF
Materials exposed to vacuum Vacuum connection Heating filament Vacuum feedthrough Orifice (for DN 16 ISO-KF only) Diaphragm Further materials		Stainless steel 1.4435 W Glass Stainless steel Ceramic Ni, NiFe, Stainless steel 1.4301, SnAg
Internal volume DN 16 ISO-KF 1/8" NPT	cm <sup>3</sup> cm <sup>3</sup>	4.7 5.2
Admissible pressure	bar (abs.)	≤ 5
Burst pressure	bar (abs.)	10
Admissible temperature Operation (ambient) Bakeout at flange <sup>1)</sup> , max. Heating filament Storage	°C °C °C °C	+10 to +50 ≤ 80 < 160 -20 to +6
Relative humidity Annual average on 60 days		≤ 65% (non condensing) ≤ 85% (non condensing)
Mounting orientation		Horizontal and vertical
Use		Indoors only, altitudes up to 2000 m (6562 ft.)
Protection class	IP	40
Weight	kg (lbs)	0.120 (0.265)

<sup>1)</sup> For horizontal installation. While baking out, the technical data for measurement range, inaccuracy and repeatability may deviate



## Ordering Information

## THERMOVAC Transmitter TTR 101 / TTR 101 S2 / TTR 101 S2 PB

	Part No.
THERMOVAC TTR 101 without switching threshold without Display DN 16 ISO-KF 1/8" NPT	<b>230 350 V01</b>
	<b>230 351 V01</b>
with Display DN 16 ISO-KF 1/8" NPT	<b>230 354 V01</b>
	<b>230 355 V01</b>
THERMOVAC TTR 101 S2 with two switching thresholds without Display DN 16 ISO-KF 1/8" NPT	<b>230 352 V01</b>
	<b>230 353 V01</b>
with Display DN 16 ISO-KF 1/8" NPT	<b>230 356 V01</b>
	<b>230 357 V01</b>
THERMOVAC TTR 101 S2 PB with two switching thresholds without Display DN 16 ISO-KF	<b>230 358 V01</b>
	<b>230 360 V01</b>
Replacement sensor DN 16 ISO-KF 1/8" NPT	<b>230 361 V01</b>
	<b>230 362 V01</b>
Centering ring with fine filter DN 16 ISO-KF	<b>883 96</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"
Connection cable, FCC 68 on both ends, 8-way, shielded 5 m 10 m 15 m 20 m 30 m 50 m 75 m 100 m	<b>Type A</b>
	<b>124 26</b>
	<b>230 012</b>
	<b>124 27</b>
	<b>124 28</b>
	<b>124 29</b>
	<b>124 31</b>
	<b>124 32</b>
<b>124 33</b>	
Accessories, optional Spiral tube DN 16 ISO-KF	<b>230 082</b>

# PENNINGVAC Transmitter PTR 90 N



PENNINGVAC Transmitter PTR N analog (left); digital (middle), with Display (right)

The PENNINGVAC transmitter combines the cold cathode ionization principle with the MEMS-Pirani sensor. This allows the complete coverage of the measurement range from  $1 \times 10^{-8}$  mbar to atmosphere by a single transmitter. The compact design, broad measurement range and cost efficiency make this transmitter the perfect gauge for several applications.

## Advantages to the User

- Enhanced reliability through automatically turning on the cold cathode by the MEMS-Pirani
- Significantly higher accuracy in the upper range by using the MEMS Pirani
- Longer lifetime due to low cold cathode turn on pressure
- High reproducibility
- Available with display for pressure units, set point parameters and operation status
- Wide measurement range combining two sensor technologies into a single output
- Ease of serviceability by modular design of the cold cathode
- Automatic zeroing during pump down cycle for improved accuracy
- LED ring to indicate status of the sensor
- Measurement signal insensitive to mounting position

## Typical Applications


Typical Applications within the measurement range from  $1 \times 10^{-8}$  mbar to atmosphere are:

- General vacuum base pressure measurement
- Sputtering and coating technology
- Analytical technology (e. g. mass spectrometer control)
- Vacuum Furnaces
- Multipurpose pressure measurement and control up to the high vacuum range
- Metallurgy
- Scanning electron microscopes
- Process industry


## Option

For protection of the sensor PTR 90 N against contamination, radiation and other disturbing factors the installation of a baffle is recommended.


Two types of baffles are available: A build-in version for CF connections is mounted in the sensor; the baffle for ISO-KF connections is integrated in a centering ring.

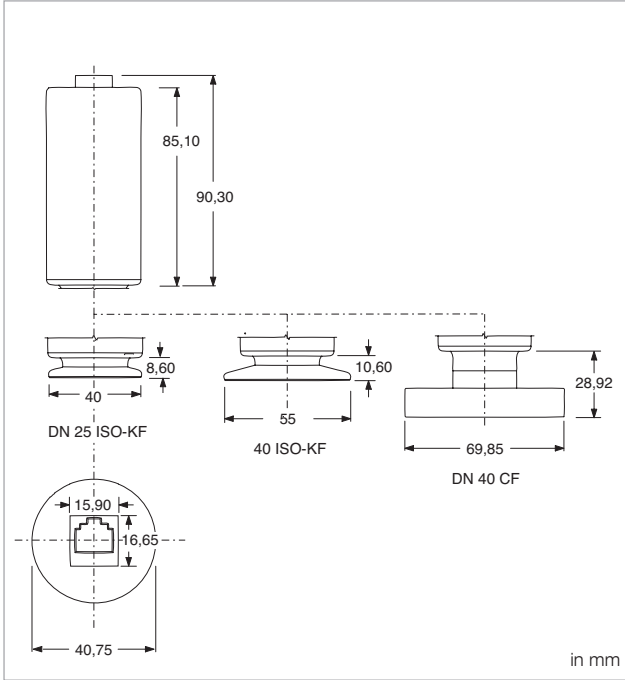

Dimensional drawing for the PENNINGVAC transmitter PTR 90 N

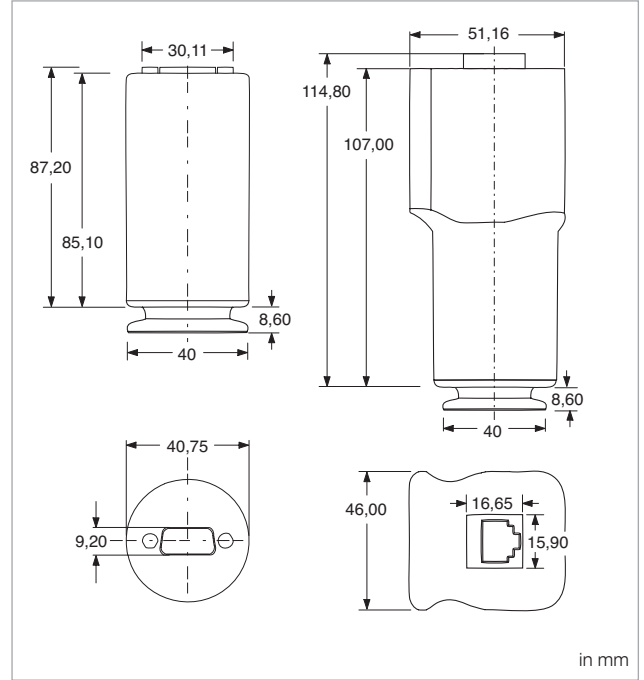

Dimensional drawing for the PENNINGVAC transmitters  
PTR 90 N, RS 232 (left) and PTR 90 N

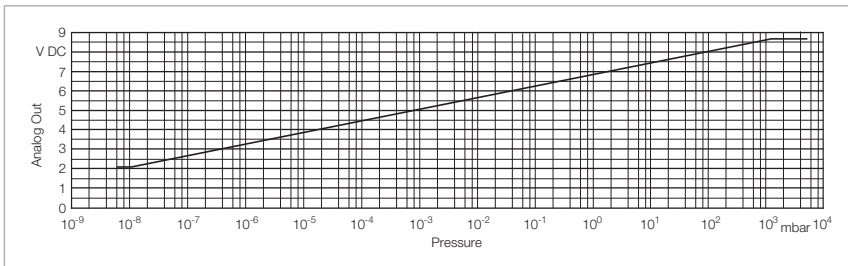

Characteristics of the PENNINGVAC Transmitters PTR 90 N

## Technical Data

## PENNINGVAC Transmitter PTR 90 N

Measurement range	mbar (Torr)	1.0 x 10 <sup>-8</sup> to 1000 (0.75 x 10 <sup>-8</sup> to 750)
Measurement uncertainty of reading (typical) <sup>1)</sup>		
Cold cathode	mbar	1 x 10 <sup>-8</sup> to 5 x 10 <sup>-4</sup> ±30 %
MEMS Pirani	mbar	5 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±10 % 1 x 10 <sup>-3</sup> to 100 ±5 % 100 to 1000 ±25 %
Repeatability of reading (typical) <sup>1)</sup>	mbar	1 x 10 <sup>-3</sup> to 100 ±2 %
Sensor		Cold cathode and MEMS Pirani
Measurement principle		Cold cathode ionization and thermal conductivity
Supply voltage	V DC	9 to 30
Power consumption	W	< 2
Electrical connection	V	FCC 68, RJ 45 (analog) / RS232 (digital)
Analog output	V DC	$V_{out} = \log 0.6 (P_{mbar}) + 6.8$ 2.0 to 8.668 / 2.0 to 8.667 [RS 232]
Resolution	bit	16
Impedance	Ω	100
Update rate	Hz	16
Interfaces		FCC 68, RJ45 (analog) / RS232 (digital)
Set point		
Range	mbar (Torr)	1.0 x 10 <sup>-8</sup> to 1000 (0.75 x 10 <sup>-8</sup> to 750)
Relay		0 / 2 [RS 232]
Relay contact rating		1 A at 30 V AC / DC, resistive load
Relay contact resistance, max.	mΩ	100
Relay contact endurance, min.		
1.0 A at 30 V DC load		100 000
0.2 A at 30 V DC load		2 000 000
Status indicators		LED-ring (360°)
Max. cable length	m	100
Overpressure limit (abs.)	bar	6
Operating temperature range <sup>2)</sup>	°C (°F)	0 to 60 (32 to 140)
Storage temperature range	°C (°F)	-20 to +65 (-4 to 149)
Max. bakeout temperature	°C (°F)	85 (185)
Max. rel. humidity	% n.c.	0 – 95
Installation orientation		Any
Materials exposed to vacuum		304 stainless steel, 403 stainless steel, Ceramic (Al <sub>2</sub> O <sub>3</sub> ), Tin, Gold, Viton®, Titanium
Dead volume (DN 25 ISO-KF), approx	cm <sup>3</sup>	28.6
Weight (DN 25 ISO-KF)	g	321
Protection class	IP	40
CE certification		EMC Directive 2014/30/EEC
Controller type		DISPLAY ONE / THREE and GRAPHIX ONE / TWO / THREE

<sup>1)</sup> Accuracy and repeatability are typical values measured with Nitrogen gas at ambient temperature after zero adjustment

<sup>2)</sup> There may be minimal deviation tolerances in the range of 40 – 60 °C

## Ordering Information

## PENNINGVAC Transmitter PTR 90 N

	Part No.
PTR 90 N, DN 25 ISO-KF, FCC 68 / RJ 45	<b>230070V02</b>
PTR 90 N, DN 25 ISO-KF, Display, FCC 68 / RJ 45	<b>230085V02</b>
PTR 90 N, DN 25 ISO-KF, 2 SP, RS 232	<b>230088V02</b>
PTR 90 N, DN 40 ISO-KF, FCC 68 / RJ 45	<b>230071V02</b>
PTR 90 N, DN 40 CF, FCC 68 / RJ 45	<b>230072V02</b>
Replacement cathode plate for PTR 90 N / PTR 225 N (up to serial no. 17022777352) for PTR 90 N / PTR 225 N (from serial no. 17022777353)	*) <b>EK16292V02</b>
Replacement anode ring for PTR 90 N / PTR 225 N (up to serial no. 17022777352) for PTR 90 N / PTR 225 N (from serial no. 17022777353)	*) <b>E20028712V02</b>
Baffle, with centering ring (FPM (FKM)) DN 25 ISO-KF DN 40 ISO-KF	<b>230 078</b> <b>230 079</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"
Operating Units DISPLAY ONE DISPLAY THREE GRAPHIX ONE GRAPHIX TWO GRAPHIX THREE	<b>230 001</b> <b>230 025</b> <b>230680V01</b> <b>230681V01</b> <b>230682V01</b>
Connection cable, FCC 68 on both ends <sup>1)</sup> 5 m 10 m 15 m 20 m 30 m 50 m 75 m 100 m	<b>Type A</b> <b>124 26</b> <b>230 012</b> <b>124 27</b> <b>124 28</b> <b>124 29</b> <b>124 31</b> <b>124 32</b> <b>124 33</b>
Connection cable, RS 232 <sup>1)</sup> 5 m 10 m 15 m 20 m  RS232 / USB Converter for setpoint definition of RS232 gauges	<b>Type G</b> <b>230550V01</b> <b>230551V01</b> <b>230552V01</b> <b>230553V01</b>  <b>230399V02</b>

\*) Please contact leybold for the correct replacement

<sup>1)</sup> See chapter "Connection cables for Active Sensors"

# PENNINGVAC Transmitter PTR 225 N, PTR 237 N



PENNINGVAC Transmitter PTR 225 N analog (left), PTR 225 N digital (middle), PTR 237 N analog (right)

The PENNINGVAC Transmitters are based on the cold cathode measurement principle. The compact design and broad measuring range of the PTR 225 N, makes it well suited for easy system integration and process control from medium to high vacuum pressure. Options include various serial interfaces and programmable setpoint relays, making it an ideal transmitter for control systems.

## Advantages to the User

- Good performance to price ratio
- Available with up to three setpoints
- Ease of serviceability by modular design of the cold cathode
- High reproducibility and high accuracy
- Available with display for pressure units, set point parameters and operation status
- LED ring to indicate status of the sensor
- Measurement signal insensitive to mounting position
- Optional Computer interface: RS 232

## Typical Applications


- Analytical Instrumentation
- Scanning electron microscopes
- Evaporation and sputtering systems
- High vacuum systems
- Coating systems
- Vacuum furnaces
- Cryo processes
- Systems control in the medium and high vacuum range

## Option


For protection the PTR sensors against contamination, radiation and other disturbing factors the installation of a baffle is recommended.




Baffle DN 25 ISO-KF, with centering ring,  
Part No. 230 078

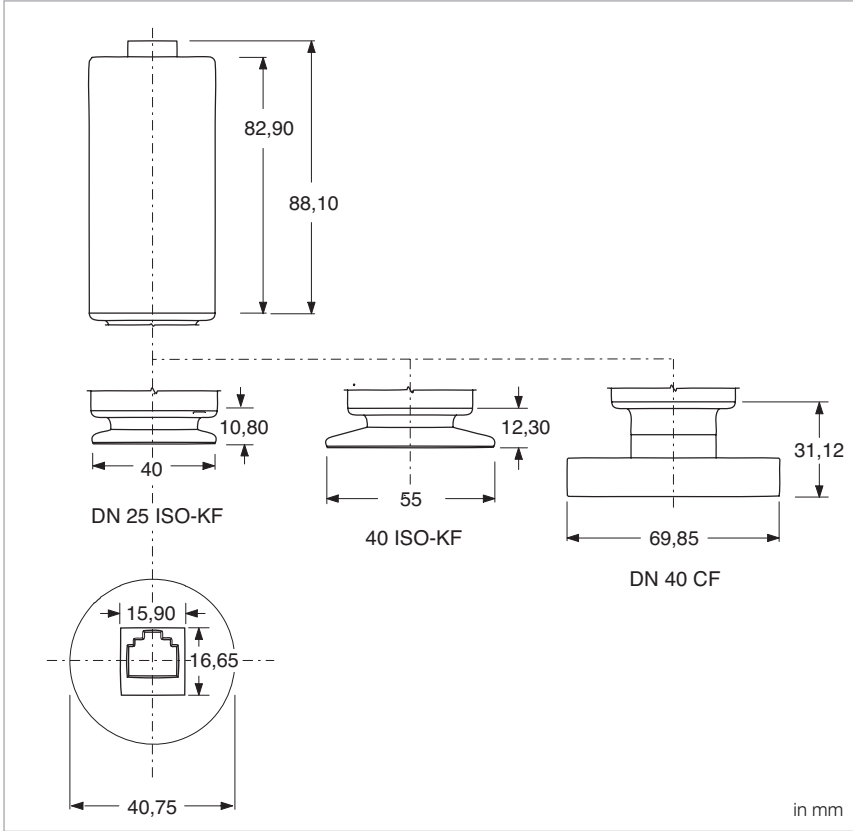

Dimensional drawing for the PENNINGVAC transmitters  
PTR 225 N and PTR 237 N

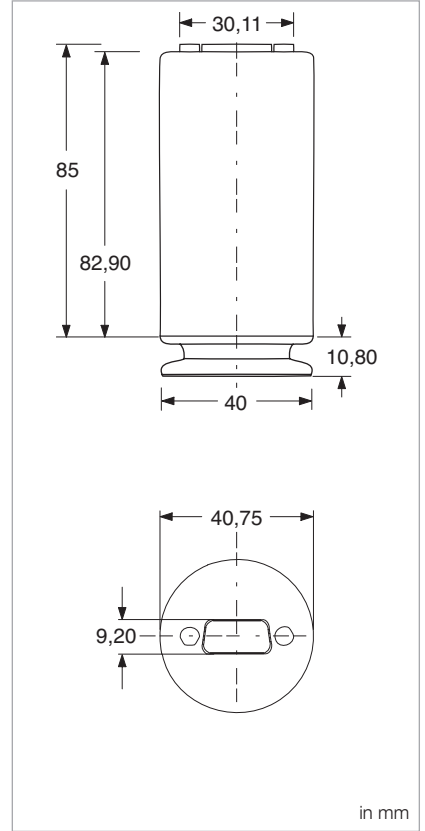

Dimensional drawing for the  
PENNINGVAC transmitter PTR 225 N, RS 232

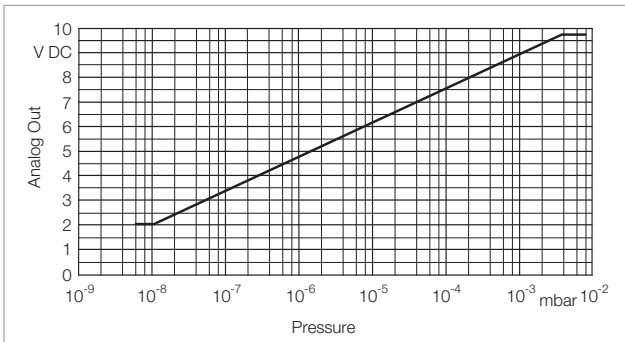

Characteristic of the PENNINGVAC transmitters PTR 225 S/237

## Technical Data

### PENNINGVAC Transmitter PTR 225 N / PTR 237 N

Measurement range	mbar (Torr)	1.0 x 10 <sup>-8</sup> to 5 x 10 <sup>-3</sup> (0.75 x 10 <sup>-8</sup> to 3.75 x 10 <sup>-3</sup> ) 1.0 x 10 <sup>-8</sup> to 6.7 x 10 <sup>-3</sup> (0.75 x 10 <sup>-8</sup> to 5.0 x 10 <sup>-3</sup> ) [RS 232]
Measurement uncertainty of reading (typical) <sup>1)</sup>		
Cold Cathode	mbar	1 x 10 <sup>-8</sup> to 1 x 10 <sup>-3</sup> ±30 %
Repeatability of reading (typical) <sup>1)</sup>	mbar	1 x 10 <sup>-8</sup> to 1 x 10 <sup>-3</sup> ±30 %
Sensor Measurement principle		Cold cathode Cold cathode ionization
Supply voltage	V DC	9 to 30
Power consumption	W	< 2
Electrical connection	V	FCC 68 / RJ 45, RS 232
Analog output	V DC	$V_{out} = 1.33 \times \log_{10} (P_{mbar}) + 12.66$ 2.0 to 9.6
Resolution	bit	16
Impedance	Ω	100
Update rate	Hz	16
Interfaces		FCC 68 / RJ 45
Set point		
Range	mbar (Torr)	1 x 10 <sup>-8</sup> to 5 x 10 <sup>-3</sup> (0.75 x 10 <sup>-8</sup> to 3.75 x 10 <sup>-3</sup> )
Relay		2 [RS 232]
Relay contact rating		1 A at 30 V AC / DC, resistive load
Relay contact resistance, max.	mΩ	100
Relay contact endurance, min.		
1.0 A at 30 V DC load		100 000
0.2 A at 30 V DC load		2 000 000
Status indicators		LED-ring (360°)
Max. cable length	m	100
Overpressure limit (abs.)	bar	6
Operating temperature range <sup>2)</sup>	°C (°F)	0 to 60 (32 to 140)
Storage temperature range	°C (°F)	-20 to +65 (-4 to 149)
Max. bakeout temperature	°C (°F)	85 (185)
Max. rel. humidity	% n.c.	0 – 95
Installation orientation		Any
Materials exposed to vacuum		304 stainless steel, 403 stainless steel, Ceramic (Al <sub>2</sub> O <sub>3</sub> ), Viton®, Titanium
Dead volume (DN 25 ISO-KF), approx	cm <sup>3</sup>	25.6
Weight (DN 25 ISO-KF)	g	318
Protection class	IP	40
CE certification		EMC Directive 2014/30/EEC
Controller type		DISPLAY ONE / THREE and GRAPHIX ONE / TWO / THREE

<sup>1)</sup> Accuracy and repeatability are typical values measured with Nitrogen gas at ambient temperature after zero adjustment

<sup>2)</sup> There may be minimal deviation tolerances in the range of 40 – 60 °C



## Ordering Information

## PENNINGVAC Transmitter PTR 225 N / PTR 237 N

	Part No.
PTR 225 N, DN 25 ISO-KF, FCC 68 / RJ 45	<b>15734V02</b>
PTR 225 N, DN 25 ISO-KF, 3 SP, RS 232	<b>89642V02</b>
PTR 237 N, DN 40 CF, FCC 68 / RJ 45	<b>15736V02</b>
Replacement cathode plate for PTR 90 N / PTR 225 N (up to serial no. 17022777352) for PTR 90 N / PTR 225 N (from serial no. 17022777353)	*) <b>EK16292V02</b>
Replacement anode ring for PTR 90 N / PTR 225 N (up to serial no. 17022777352) for PTR 90 N / PTR 225 N (from serial no. 17022777353)	*) <b>E20028712V02</b>
Baffle, with centering ring (FPM (FKM)) DN 25 ISO-KF	<b>230 078</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"
Operating Units DISPLAY ONE DISPLAY THREE GRAPHIX ONE GRAPHIX TWO GRAPHIX THREE	<b>230 001</b> <b>230 025</b> <b>230680V01</b> <b>230681V01</b> <b>230682V01</b>
Connection cable, FCC 68 on both ends <sup>1)</sup> 5 m 10 m 15 m 20 m 30 m 50 m 75 m 100 m	<b>Type A</b> <b>124 26</b> <b>230 012</b> <b>124 27</b> <b>124 28</b> <b>124 29</b> <b>124 31</b> <b>124 32</b> <b>124 33</b>
Connection cable, RS 232 <sup>1)</sup> 5 m 10 m 15 m 20 m  RS232 / USB Converter for setpoint definition of RS232 gauges	<b>Type G</b> <b>230550V01</b> <b>230551V01</b> <b>230552V01</b> <b>230553V01</b>  <b>230399V02</b>

\*) Please contact leybold for the correct replacement

<sup>1)</sup> See chapter "Connection cables for Active Sensors"

# Loadlock Transmitter

## THERMOVAC TTR 200 N PENNINGVAC PTR 200 N



THERMOVAC Transmitter TTR 200 N (left) and PENNINGVAC Transmitter PTR 200 N (right)

The TTR 200 N and PTR 200 N combine different measurement technologies in one housing making them the perfect gauges for load lock applications. The transmitters offer a wide absolute measurement range and a differential range of  $-10^{13}$  to  $10^{13}$  mbar (relative to ambient pressure). The highly accurate differential sensor is ideal for loadlock control since it is insensitive to changes in ambient pressure conditions. Efficient loadlock control will improve throughput due to reduced cycle time.

### Advantages to the User

- Fast, accurate and repeatable pressure measurements reduce process cycle time
- Gas type independent pressure measurements from 50 mbar to 1500 mbar
- Combination of absolute and differential measurements offer unprecedented loadlock control
- Three integrated setpoints
- Up to three sensors in one housing for a wide measurement range
- Measurement signal insensitive to mounting position
- Ease of operation via analog output and digital communication
- LED ring to indicate status of the sensor


### Typical Applications

- Load lock applications
- Chamber over and under pressure control relative to ambient
- Coating Systems (e. g. UNIVEX)
- Vacuum chamber production
- Processes requiring both absolute pressure measurement and atmospheric switching capabilities
- Analytical equipment (e. g. mass spectrometer control)
- Scanning electron microscopes


### Option

For protection of the sensor TTR 200 N and PTR 200 N against contamination, radiation and other disturbing factors the installation of a baffle is recommended.


Two types of baffles are available: A build-in version for CF connections is mounted in the sensor; the baffle for ISO-KF connections is integrated in a centering ring.

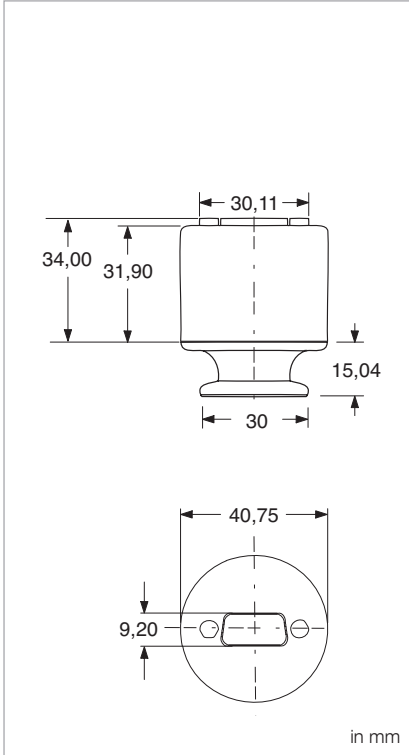


Dimensional drawing for the THERMOVAC transmitter TTR 200 N

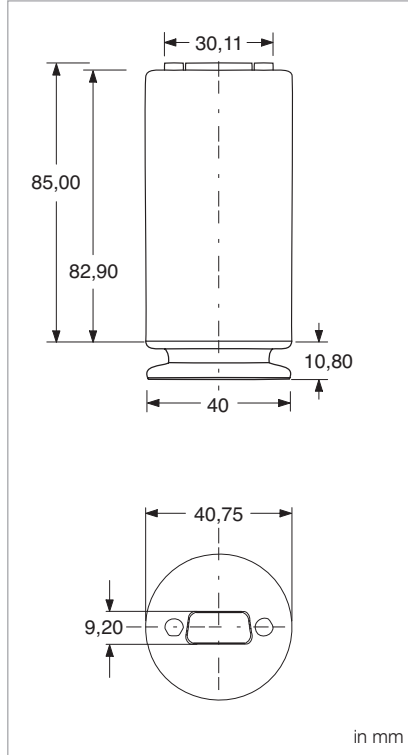

Dimensional drawing for the PENNINGVAC transmitter PTR 200 N

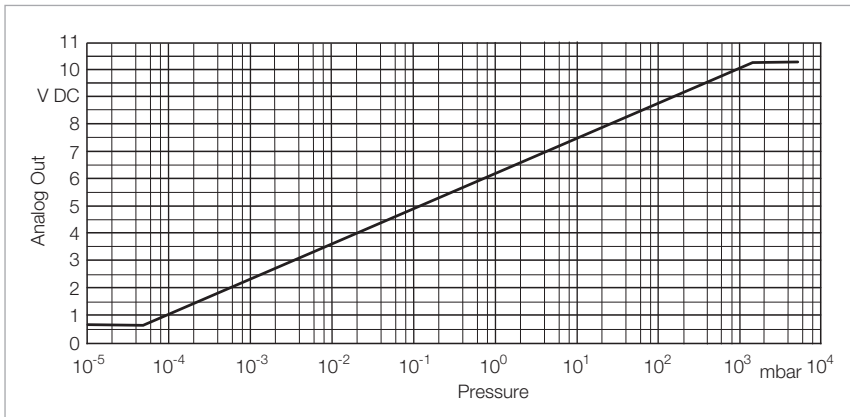

Characteristic of the THERMOVAC Transmitter TTR 200 N

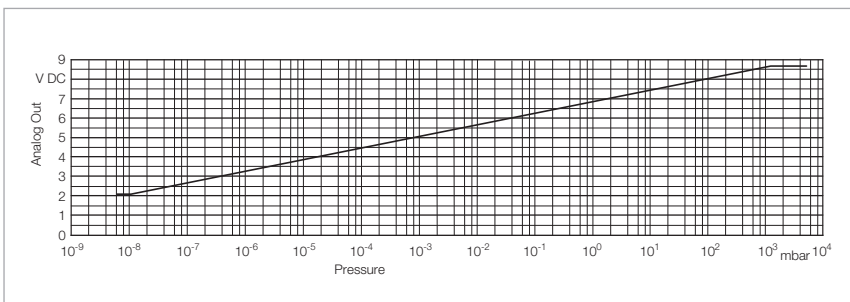

Characteristic of the PENNINGVAC transmitter PTR 200 N

## Technical Data

## Loadlock Transmitter

### TTR 200 N

### PTR 200 N

Measurement range (N <sub>2</sub> and air)	mbar (Torr)	5.0 x 10 <sup>-5</sup> to 1500 (3.75 x 10 <sup>-5</sup> to 1125) 5 x 10 <sup>-5</sup> to 1500 [RS 232] (3.75 x 10 <sup>-5</sup> to 1125) [RS 232]	1.0 x 10 <sup>-8</sup> to 1500 (0.75 x 10 <sup>-8</sup> to 1125) 1 x 10 <sup>-8</sup> to atm. [RS 232] (0.75 x 10 <sup>-8</sup> to atm.) [RS 232]
absolute		-1013 to 1013 [RS 232] (-760 to 760) [RS 232]	-1013 to 1013 [RS 232] (-760 to 760) [RS 232]
differential			
Measurement uncertainty of reading (typical) <sup>1)</sup>	mbar		
Cold Cathode		–	1 x 10 <sup>-8</sup> to 1 x 10 <sup>-3</sup> ±30 % 1 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±10 % 1 x 10 <sup>-3</sup> to 100 ±5 % 100 to atm. ±25 %
MEMS-Pirani		1 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±10 % 1 x 10 <sup>-3</sup> to 100 ±5 % 100 to atm. ±25 %	1 x 10 <sup>-4</sup> to 1 x 10 <sup>-3</sup> ±10 % 1 x 10 <sup>-3</sup> to 100 ±5 % 100 to atm. ±25 %
Diff. Piezo		-10 to 10 ±10 % ±0.67 mbar -100 to -10 ±8 % -1013 to -100 ±1 % 10 to 100 ±5 %	10 to 10 ±10 % ±0.67 mbar -100 to -10 ±8 % -1013 to -100 ±1 % 10 to 100 ±5 %
Repeatability of reading (typical) <sup>1)</sup>	mbar		
Penning		1 x 10 <sup>-3</sup> to 100 ±2 %	1 x 10 <sup>-8</sup> to 100 ±2 %
MEMS-Pirani		1 x 10 <sup>-3</sup> to 100 ±2 %	1 x 10 <sup>-3</sup> to 100 ±2 %
Diff. Piezo		-1013 to 10 ±1 %	-1013 to 10 ±1 %
Sensor Measurement principle		MEMS-Pirani and Diff. Piezo Thermal conductivity, combined with Piezo	Cold cathode, MEMS-Pirani and Diff. Piezo Thermal conductivity, combined with Piezo and cold cathode ionization
Supply voltage	V DC	9 to 30	
Power consumption	W	< 1.2	< 2
Electrical connection	V	D-Sub 15 pin	
Analog output	V DC	$V_{out} = \log_{10}(P_{mbar}) \times 1.286 + 6.143$ 0.61 to 10.23	$V_{out} = \log 0.6(P_{mbar}) + 6.8$ 2.0 to 8.667
Resolution	bit	16	16
Impedance	Ω	100	100
Update rate	Hz	16	16
Interfaces		RS 232	
Set point			
Range			
Absolute	mbar (Torr)	1 x 10 <sup>-4</sup> to 1333 (0.75 x 10 <sup>-4</sup> to 1000)	1 x 10 <sup>-8</sup> to 1333 (0.75 x 10 <sup>-8</sup> to 1000)
Differential	mbar (Torr)	-1013 to 133 (-775 to 100)	-1013 to 133 (-775 to 100)
Relay		3	3
Relay contact rating		1 A at 30 V AC / DC, resistive load	1 A at 30 V AC / DC, resistive load
Relay contact resistance, max.	mΩ	100	100
Relay contact endurance, min.			
1.0 A at 30 V DC load		100 000	100 000
0.2 A at 30 V DC load		2 000 000	2 000 000
Status indicators		LED-ring (360°)	
Max. cable length	m	20	
Overpressure limit (abs.)	bar	2	
Operating temperature range <sup>2)</sup>	°C (°F)	0 to 60 (32 to 140)	
Storage temperature range	°C (°F)	-20 to +65 (-4 to 149)	
Max. bakeout temperature	°C (°F)	85 (185)	
Max. rel. humidity	% n.c.	0 – 95	
Installation orientation		Any	
Materials exposed to vacuum		304 stainless steel, Tin, Gold, Viton®	304 stainless steel, Ceramic (Al <sub>2</sub> O <sub>3</sub> ), Tin, Gold, Viton®, Titaniu
Dead volume (DN 16ISO-KF), approx	cm <sup>3</sup>	2.8	28.6
Weight (DN 16 ISO-KF)	g	305	321
Protection class	IP	40	
CE certification		EMC Directive 2014/30/EEC	
Controller type		GRAPHIX ONE / TWO / THREE	

<sup>1)</sup> Accuracy and repeatability are typical values measured with Nitrogen gas at ambient temperature after zero adjustment

<sup>2)</sup> There may be minimal deviation tolerances in the range of 40 – 60 °C

## Ordering Information

## Loadlock Transmitter

### TTR 200 N

### PTR 200 N

	Part No.	Part No.
THERMOVAC TTR 200 N DN 16 ISO-KF, 3SP	<b>230365V02</b>	-
PENNINGVAC PTR 200 N DN 25 ISO-KF, RS 232, 3 SP	-	<b>230087V02</b>
Replacement cathode plate for PTR 90 N / PTR 225 N (up to serial no. 17022777352)	-	<b>EK16291V02</b>
for PTR 90 N / PTR 225 N (from serial no. 17022777353)	-	<b>EK16292V02</b>
Replacement anode ring for PTR 90 N / PTR 225 N (up to serial no. 17022777352)	-	<b>20028711V02</b>
for PTR 90 N / PTR 225 N (from serial no. 17022777353)	-	<b>E20028712V02</b>
Baffle, with centering ring (FPM (FKM)) DN 25 ISO-KF	-	<b>230 078</b>
Centering ring with fine filter DN 16 ISO-KF	<b>883 96</b>	-
Optional accessories		
Connection cable, RS 232 <sup>1)</sup>		<b>Type G</b>
5 m		<b>230550V01</b>
10 m		<b>230551V01</b>
15 m		<b>230552V01</b>
20 m		<b>230553V01</b>
RS232 / USB Converter for setpoint definition and parametrization of RS232 gauges		<b>230399V02</b>

<sup>1)</sup> See chapter "Connection cables for Active Sensors"

# IONIVAC Transmitter ITR 90



The ITR 90 is an optimized combination transmitter. The combination of a hot cathode ionisation sensor according to Bayard-Alpert and a Pirani sensor permits vacuum pressure measurements of nonignitable gases and gas mixtures in the pressure range from  $5 \times 10^{-10}$  to 1000 mbar.

The ITR 90 can be ordered with integrated display or Profibus interface.

## Advantages to the User

- Continuous pressure measurements from  $10^{-10}$  mbar to atmospheric pressure
- High degree of reproducibility within the typical range for process pressures of  $10^{-2}$  to  $10^{-8}$  mbar
- Controlled switching on and off sequencing through the integrated double Pirani optimized the service life of the yttrium coated iridium cathodes
- Compact design
- Enclosed, rugged electrode geometry in a rugged metal housing
- Efficient degassing by electron bombardment
- Simple fitting of the sensor
- Extension for higher bake out temperatures during the measurements
- One signal covering 13 decades
- One flange joint for 13 decade
- ITR 90 model with built-in display for stand-alone operation without additional display components
- RS 232 C interface


## Typical Applications

- Analytical
- Evaporation and coating
- Vacuum furnaces
- General purpose pressure measurements in the fine and high vacuum ranges


## Sensor

The sensor of the ITR 90 contains a dual filament Pirani system as well as a Bayard-Alpert measurement system.


When using the bake out extension, measurements will be possible also at flange temperatures up to 150 °C.

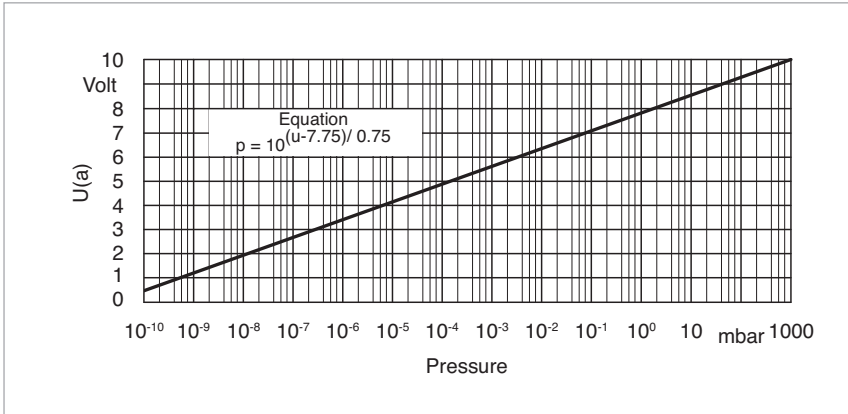

Characteristic of the ITR 90

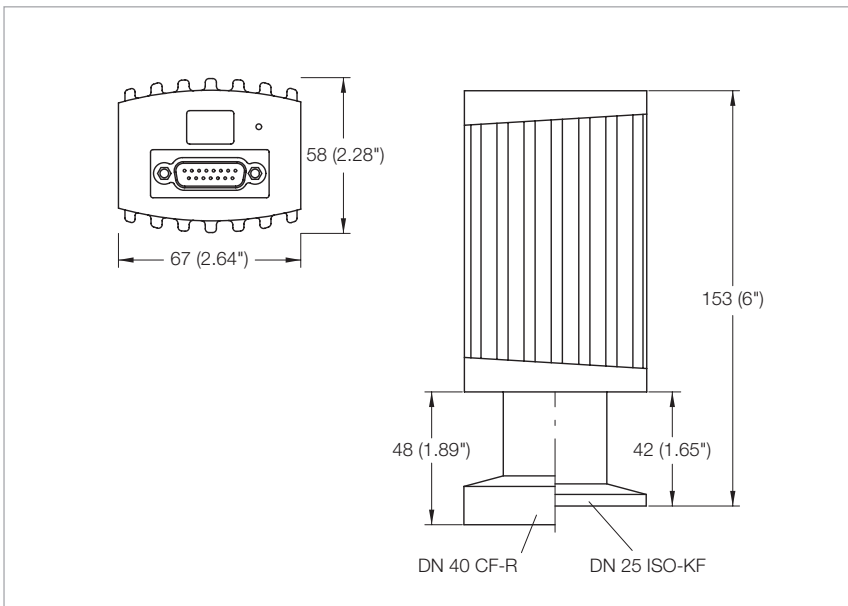

Dimensional drawing for the ITR 90; dimensions in mm, in brackets ( ) are in inch (Image with integrated display; Profibus interface differing)

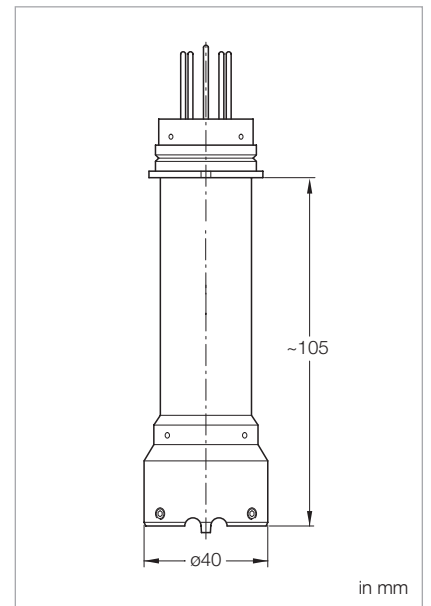

Dimensional drawing for the bake out extension

## Technical Data

## IONIVAC Transmitter

### ITR 90

Measurement range	mbar (Torr)	5 x 10 <sup>-10</sup> to 1000 (3.75 x 10 <sup>-10</sup> to 750)
Measurement uncertainty, 10 <sup>-1</sup> – 1000 mbar		≥ 15% of the meas. value
Measurement uncertainty, 10 <sup>-8</sup> – 10 <sup>-2</sup> mbar		15% of the meas. value
Reproducibility, 10 <sup>-8</sup> – 10 <sup>-2</sup> mbar		5% of the meas. value
Principles of measurement		Hot cathode ionization according to Bayard-Alpert combined with thermal conductivity according to Pirani
Degas		Electron bombardment 3 minutes, max.
Supply voltage	V DC	20 to 28 V DC, typ. 24 V DC
Power consumption, max.	W	16
Storage / nominal temperature range	°C	-20 bis +70 / 0 bis +50
Weight, approx.		
ITR 90, DN 25 ISO-KF	kg (lbs)	0.285 (0.64)
ITR 90, DN 40 CF	kg (lbs)	0.550 (1.24)
Sensor		Fully sealed, exchangeable
Degassing temperature, max.	°C	150 <sup>1)</sup>
Materials in contact with the medium		Cu, W, Glass, NiFe, Mo, Stainless steel, Aluminum, Iridium, Yttrium, NiCr
Dead volume, approx.	cm <sup>3</sup>	24 at DN 25 ISO-KF 34 at DN 40 CF
Overpressure rating (abs.)	bar	2
Signal output (R <sub>a</sub> ≥ 10 kΩ)		
Measurement signal		0 bis 10 V; 0.774 to 10 V; 0.75 V decade
Error signal		< 0.5 V
Protection class	IP	30
Interface (standard / optional)		RS 232 C / Profibus
Electrical connection		15-way Sub-D male connector / pin contacts
Cable length, max.	m	100 / 30 bei RS 232 C

<sup>1)</sup> Flange temperature when using the bake out extension



## Ordering Information

### IONIVAC Transmitter ITR 90

without Display

with Display

	Part No.	Part No.
ITR 90, DN 25 ISO-KF	<b>120 90</b>	<b>120 91</b>
ITR 90, DN 25 ISO-KF, Profibus interface	<b>230 030</b>	-
ITR 90, DN 40 CF-R, rotatable CF flange	<b>120 92</b>	<b>120 94</b>
ITR 90, DN 40 CF-R, rotatable CF flange Profibus interface	<b>230 031</b>	-
Options		
Power supply for IONIVAC transmitter 100 – 240 V AC / 24 V DC incl. 5 m connection cable and 5 m RS 232 C cable		<b>121 06</b>
Bake out extension (100 mm, approx.)		<b>127 06</b>
Baffle, DN 25 ISO-KF, with Installation baffle for CF/ISO-KF varian		<b>121 07</b>
Replacement sensor		
IE 90, DN 25 ISO-KF <sup>1)</sup>		<b>E 121 02</b>
IE 90, DN 40 CF-R <sup>1)</sup>		<b>E 121 03</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"	
Connection cable	see chapter "Products", para. "Connection Cable for Active Sensors"	

<sup>1)</sup> Including hex. socket screw key

# IONIVAC Transmitter ITR 200 S



The ITR 200 S is an optimized dual cathode combination transmitter on the basis of the well proven ITR 90. The combination of a hot cathode ionization sensor according to Bayard-Alpert and a Pirani sensor allows vacuum pressure measurements of non-ignitable gases and gas mixtures in the pressure range from  $5 \times 10^{-10}$  to 1000 mbar.

Upon request, the pressure can be displayed on an integrated display.

## Advantages to the User

- Service life increase and increased operational reliability through integration of a second hot cathode
- Full coverage of the pressure range from  $5 \times 10^{-10}$  mbar to atmospheric pressure
- High repeatability within the typical process pressure range of  $10^{-2}$  to  $10^{-8}$  mbar
- Controlled switching on and switching off through the integrated dual Pirani optimized the service life of the yttrium-coated iridium cathodes
- Compact design
- Enclosed, stable electrode geometry in rugged metal casing
- Efficient degassing through electron bombardment
- Simple to install
- ITR 200 S version with built-in display allows for stand-alone operation without the necessity for additional displays
- RS 232 C interface

## Typical Applications


- Analytical engineering
- Sputtering and coating technology
- Vacuum furnaces
- Multipurpose pressure measurement in the medium and high vacuum range

## Options


Upon request, the ITR 200 S can be supplied with an integrated display or a Profibus interface.

## Sensor

The sensor of the ITR 200 S includes besides the Pirani system a dual cathode measurement system according to Bayard-Alpert. If one of the hot cathodes should burn out during operation, then the second cathode is automatically switched on. Moreover, each sensor contains a memory chip with the relevant system data. Thus after having exchanged a sensor, an automatic alignment is performed between sensor and operating electronics (plug and play).

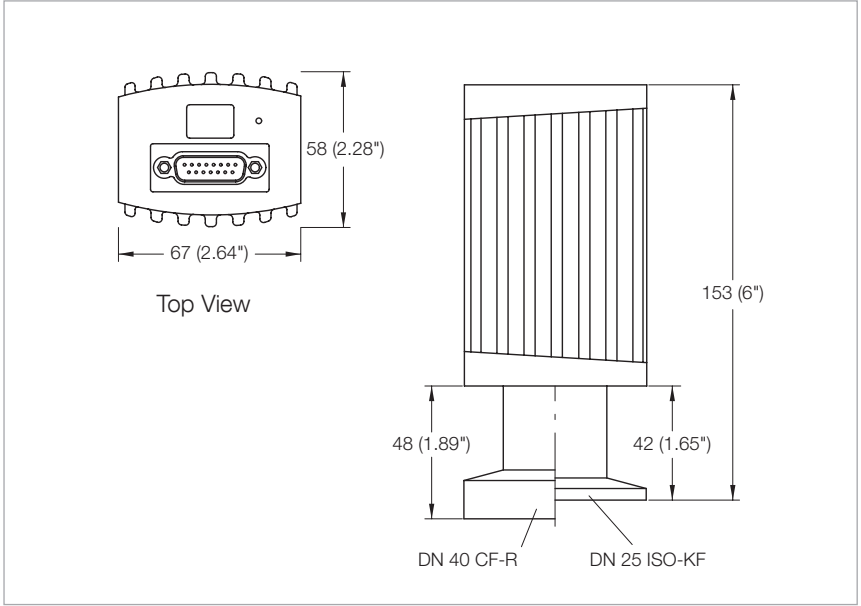

Dimensional drawing for the ITR 200 S; dimensions in mm, in brackets ( ) are in inch  
(Image with integrated display; Profibus interface differing)

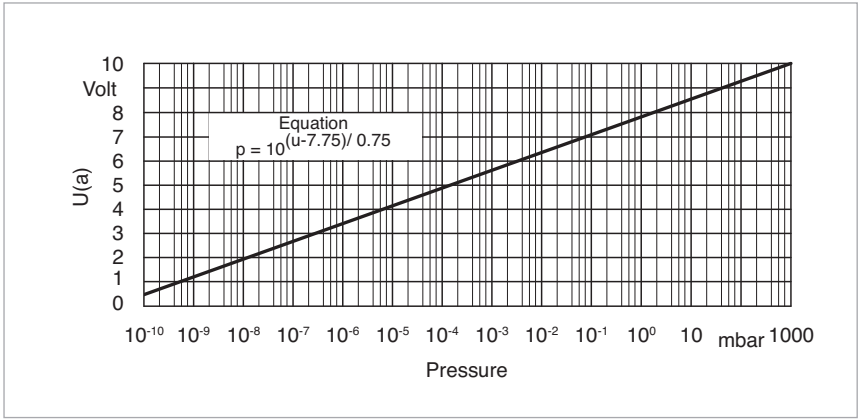

Characteristic of the ITR 200 S

## Technical Data

## IONIVAC Transmitter

### ITR 200 S

Measurement range	mbar (Torr)	5 x 10 <sup>-10</sup> to 1000 (3.75 x 10 <sup>-10</sup> to 750)
Measurement uncertainty, 10 <sup>-1</sup> – 1000 mbar		≥ 15% of the meas. value
Measurement uncertainty, 10 <sup>-8</sup> – 10 <sup>-2</sup> mbar		15% of the meas. value
Reproducibility, 10 <sup>-8</sup> – 10 <sup>-2</sup> mbar		5% of the meas. value
Principles of measurement		Hot cathode ionization according to Bayard-Alpert combined with thermal conductivity according to Pirani
Degas		Electron bombardment 3 minutes, max.
Supply voltage	V DC	20 to 28 V DC, typ. 24 V DC
Power consumption, max.	W	20
Storage / nominal temperature range	°C	-20 bis +70 / 0 bis +50
Weight, approx.		
ITR 200 S, DN 25 ISO-KF	kg (lbs)	0.50 (1.10)
ITR 200 S, DN 40 CF	kg (lbs)	0.75 (1.65)
Sensor		Fully sealed, exchangeable
Degassing temperature, max.	°C	150 <sup>1)</sup>
Materials in contact with the medium		Cu, W, Glass, NiFe, Mo, Stainless steel, Aluminum, Iridium, Yttrium, NiCr
Dead volume, approx.	cm <sup>3</sup>	24 at DN 25 ISO-KF 34 at DN 40 CF
Overpressure rating (abs.)	bar	2
Signal output (R <sub>a</sub> ≥ 10 kΩ)		
Measurement signal		0 bis 10 V; 0.774 to 10 V; 0.75 V decade
Error signal		< 0.5 V
Protection class	IP	30
Interface (standard / optional)		RS 232 C / Profibus
Switching function		
Standard		1 normally open contact
Profibus		2 normally open contacts
Electrical connection		15-way Sub-D male connector / pin contacts
Cable length, max.	m	100 / 30 bei RS 232 C

<sup>1)</sup> Flange temperature when using the bake out extension

## Ordering Information

### IONIVAC Transmitter ITR 200 S

without Display


with Display

	Part No.	Part No.
ITR 200 S, DN 25 ISO-KF 1 switching function	<b>230 250</b>	<b>230 251</b>
ITR 200 SP, DN 25 ISO-KF, Profibus interface, 2 switching functions	<b>230 252</b>	-
ITR 200 S, DN 40 CF-R, rotatable CF flange 1 switching function	<b>230 254</b>	<b>230 255</b>
ITR 200 SP, DN 40 CF-R, rotatable CF flange Profibus interface, 2 switching functions	<b>230 256</b>	-
<b>Options</b>		
Power supply for IONIVAC transmitter 100 – 240 V AC / 24 V DC incl. 5 m connection cable and 5 m RS 232 C cable		<b>121 06</b>
Baffle, DN 25 ISO-KF, with Installation baffle for CF/ISO-KF varian		<b>121 07</b>
<b>Replacement sensor</b>		
IE 200, DN 25 ISO-KF <sup>2)</sup>	<b>240 020</b>	<b>240 020</b>
IE 200, DN 40 CF-R <sup>2)</sup>	<b>240 021</b>	<b>240 021</b>
IE 200 SL <sup>1)</sup> , DN 40 CF-R <sup>2)</sup>	-	<b>240 022</b>
<b>Calibration</b>	see chapter "Miscellaneous", para. "Leybold Calibration Service"	
<b>Connection cable</b>	see chapter "Products", para. "Connection Cable for Active Sensors"	

<sup>1)</sup> SL = long version (bake out version)

<sup>2)</sup> Including hex. socket screw key

# Spiral Tube

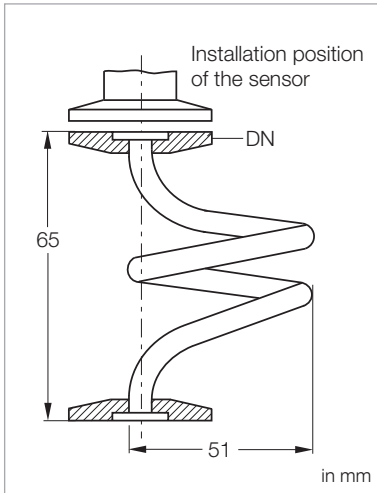

Dimensional drawing for the spiral tube

## Advantages to the User

Pressure sensors may through the use of the spiral tube be better protected against contamination like condensate, vapours and dusts. Thus measurement accuracy is improved and a longer service life of the pressure sensors is attained.

Installation is recommended in connection with

- measurement system TTR (preferred)
- CERAVAC CTR

## Operating Principle

Through the specially developed geometry which provides a constant slope, possibly occurring contamination is removed.

## Maintenance

Depending on the type of application regular maintenance on the spiral tube is recommended.

## Note

- Measurement errors caused by the increased conductance of the component need to be taken into account
- Low vibration mounting must be ensured
- The sensor must be connected at the upper end

## Technical Data

### Spiral Tube

Materials

Stainless steel

## Ordering Information

### Spiral Tube

	Part No.
Spiral Tube	<b>230 082</b> <b>230 083</b> <b>230 084</b>



# Connection Cables for Active Sensors

## Active Sensors

### Operating Units for Active Sensors

#### DISPLAY ONE

#### DISPLAY THREE

#### GRAPHIX ONE GRAPHIX TWO GRAPHIX THREE

THERMOVAC Transmitter (FCC 68) TTR 91 / 911 RN, TTR 96 / 916 RN, TTR 97 / 917 RN a. o. TTR 101 N	<b>Type A</b>	<b>Type A</b>	<b>Type A</b>
THERMOVAC Transmitter (RS 232) TTR 101 N, TTR 200 N	-	-	<b>Type G</b>
PENNINGVAC Transmitter (FCC 68) PTR 90 N, PTR 225 N, PTR 237 N	<b>Type A (only PTR 90)</b>	<b>Type A</b>	<b>Type A</b>
PENNINGVAC Transmitter (RS 232) PTR 90 N, PTR 225 N, PTR 200 N	-	-	<b>Type G</b>
CERAVAC Transmitter (RS 232) CTR 100 N, CTR 101 N (digital signal)	-	-	<b>Type C</b>
IONIVAC Transmitter (RS 232) ITR 90 N, ITR 200 NS	-	-	<b>Type C</b>

## Active Sensors

### Operating Units for Active Sensors

#### IONIVAC IM 540 (Channel 3 und 4)

#### CMove

#### Loose wire ends

THERMOVAC Transmitter (FCC 68) TTR 91 / 911 RN, TTR 96 / 916 RN, TTR 97 / 917 RN a. o. TTR 101 N	<b>Type A</b>	<b>Type A</b>	-
CERAVAC Transmitter (RS 232) CTR 100 N, CTR 101 N (analog signal)	<b>Type B</b>	<b>Type B</b>	<b>Type E</b>
IONIVAC Transmitter (RS 232) ITR 90 N, ITR 200 NS	-	<b>Type C</b>	<b>Type E</b>

## Active Sensors

### Operating Units for Active Sensors

#### TURBOVAC iX Extension Box

THERMOVAC Transmitter (FCC 68) TTR 91 / 911 RN, TTR 96 / 916 RN, TTR 97 / 917 RN a. o. a. o. TTR 101 N	<b>Type F</b>
PENNINGVAC Transmitter (FCC 68) PTR 90 N, PTR 225 N/NS, PTR 237 N	<b>Type F</b>



## Technical Data

## Connection Cable

Sensor side Controller-/Customer side

Cable	Connection Cable	
	Sensor side	Controller-/Customer side
Type A	FCC 68 (RJ45) on both ends, 8-way, shielded	
Type B	Sub-D 15-way female, shielded	FCC 68 (RJ45), 8-way, shielded
Type C	Sub-D 15-way female, shielded	Sub-D 15-way male, shielded
Type E	Sub-D 15-way female, shielded	bare wire ends, shielded
Type F	FCC 68 (RJ45), shielded	Sub-D 15-way male, shielded
Type G	Sub-D 15-way HD female, shielded	Sub-D 15-way male, shielded

## Ordering Information

## Connection Cable

	Type A	Type B
	Part No.	Part No.
Cable length		
1.5 m	<b>800 103 V0032</b>	-
5 m	<b>124 26</b>	<b>230 013</b>
10 m	<b>230 012</b>	<b>230 014</b>
15 m	<b>124 27</b>	<b>230 015</b>
20 m	<b>124 28</b>	<b>230 016</b>
30 m	<b>124 29</b>	<b>230 017</b>
50 m	<b>124 31</b>	<b>230 019</b>
75 m	<b>124 32</b>	<b>230 020</b>
100 m	<b>124 33</b>	<b>230 021</b>

## Ordering Information

## Connection Cable

	Type C	Type E
	Part No.	Part No.
Cable length		
5 m	<b>124 55</b>	<b>124 63</b>
10 m	<b>230 022</b>	<b>163 69</b>
15 m	<b>124 56</b>	<b>124 64</b>
20 m	<b>124 57</b>	<b>124 65</b>
30 m	<b>124 58</b>	-
50 m	<b>230 345 V01</b>	-


## Ordering Information

## Connection Cable

	Type F	Type G
	Part No.	Part No.
Cable length		
5 m	<b>230 032 V01</b>	<b>230 550 V01</b>
10 m	<b>230 023 V01</b>	<b>230 551 V01</b>
15 m	-	<b>230 552 V01</b>
20 m	-	<b>230 553 V01</b>

# Controller and Operating Units for Active Sensors

## GRAPHIX ONE, TWO, THREE

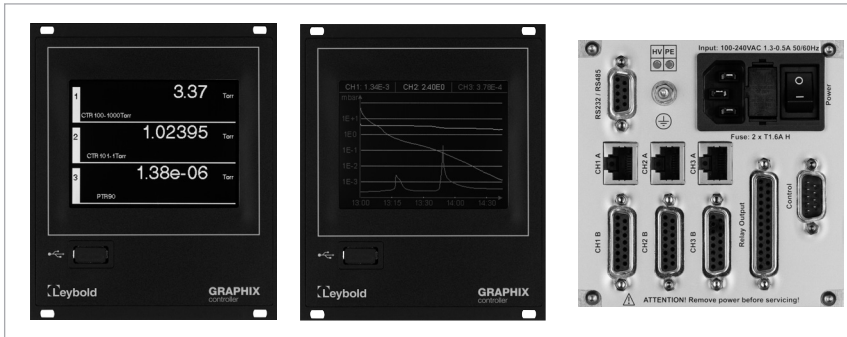


Controller GRAPHIX with different displays and rear panel (right)

Universal 1 to 3 channel display and operating unit with persistent display of all measurement channels, suited for the active sensors of the THERMOVAC, CERAVAC, linear sensors (DU series), PENNINGVAC and IONIVAC series.

### Advantages to the User

- Display range from  $1 \times 10^{-10}$  to 2000 mbar
- 3.5" touch screen display with intuitive menu interface
- Graphic display of the measurement data
- Internal and external (front side USB) storing of measurement data and configuration files
- Leak rate indication based on the pressure rise method
- 6 adjustable variable hysteresis switching thresholds, floating changeover contacts and visual indication of the switching status in the display area, freely assignable to the individual measurement channels
- Different visualisation options (graphs and decimal display with zoom function)
- For connection of all active sensors of other brands
- Degas function for ITR transmitters
- Zero alignment for CTR transmitters
- 3 separate chart recorder outputs 0 to 10 V for each measurement channel (analogue output)
- 4th programmable chart recorder output optional
- RS 232 C / RS 485 C interface with adjustable baud rate
- Relay output for error indication
- Display selectable between mbar, Torr, micron, Pascal or psi
- Compact installation and benchtop enclosure (1/4 19" 3 HU)
- Software update via USB optional
- Languages: English, German, Chinese, Japanese, French; Italian, Spanish, Korean
- Visualisation through LEYASSIST running on a PC

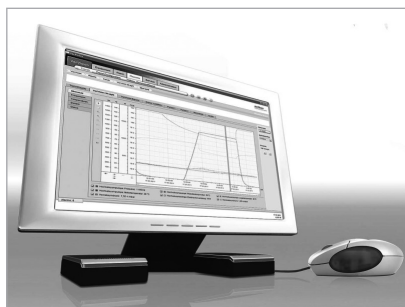

### Connectable Sensors

#### THERMOVAC

- TTR 211 / TTR 216 S
- TTR 91 RN / TTR 911 RN
- TTR 96 RN / TTR 916 RN
- TTR 97 RN / TTR 917 RN
- TTR 100 / TTR 100 S2
- TTR 101 / TTR 101 N / TTR 101 S2 / TTR 101 N 2S

#### CERAVAC

- CTR 90 / CTR 91
- CTR 100 / CTR 100 N
- CTR 101 / CTR 101 N

#### Linear pressure sensors

- DU 200 / DU 201
- DU 2000 / DU 2001
- DU 2001 rel.

#### PENNINGVAC


- PTR 90 / PTR 90 N
- PTR 225 / PTR 225 N
- PTR 225 S / PTR 225 N S
- PTR 237 / PTR 237 N

#### IONIVAC

- ITR 90
- ITR 200 S
- ITR 200 SL

#### Other brands

- Active sensors with linear or logarithmic output

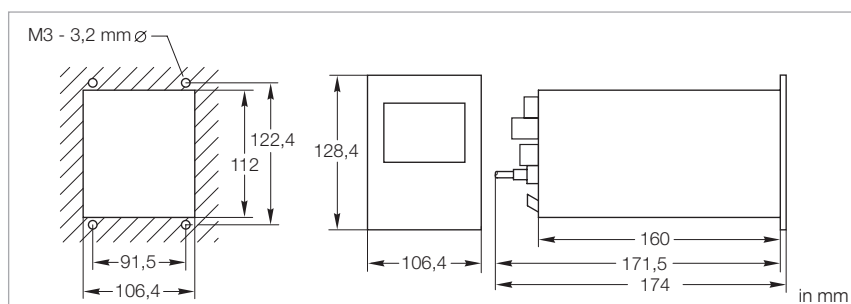

Front panel cut-out and dimensional drawing for the controller GRAPHIX ONE to THREE

## Technical Data

### GRAPHIX ONE

### GRAPHIX TWO

### GRAPHIX THREE

Number of measurement channels	1	2	3
Measured values display	3,5" graph. TFT touch display		
Display range mbar (Torr)	1 x 10 <sup>-10</sup> to 2000 (0.75 x 10 <sup>-10</sup> to 1500)		
Unit of measurement (selectable)	mbar, Torr, Micron, Pa, Psi		
Gas type correction	factor adjustable		
Sensor connection	15-way Sub-D socket and FCC68 (RJ45)		
Sensor power supply V DC	24 ± 5%		
Relay inputs and outputs	25-way Sub-D socket		
Switching threshold	freely assignable to the measurement channels		
Number	6		
Adjustment range	sensor dependent		
Hysteresis	adjustable		
Relay contact	floating changeover contact		
Load rating	1 A / 30 V AC / 30 V DC		
Error message			
Relay contact	floating normally open contact		
Load rating	1 A / 30 V AC / 30 V DC		
Chart recorder output (R <sub>a</sub> > 10 kΩ)	0 to 10 V per measurement channel, output characteristic corresponds to the connected sensor, additionally one further chart recorder output can be programmed		
Control input	PTR: high voltage on, ITR 90/200: emission on		
Interface RS 232 C / RS 485 C	9-way Sub-D socket		
Mains connection V AC / Hz	100 – 240 / 50/60		
Power consumption W	< 50	< 70	< 100
Nominal temperature range °C	+5 to +45		
Weight kg (lbs)	1.7 (3.75)		
Protection class IP	20		
Possible languages	English, German, Chinese, Japanese, French, Italian, Spanish, Korean		

## Ordering Information

### GRAPHIX ONE

### GRAPHIX TWO

### GRAPHIX THREE

	Part No.	Part No.	Part No.
GRAPHIX controller including 2 m EURO- and US mains cord	<b>230680V01</b>	<b>230681V01</b>	<b>230682V01</b>
THERMOVAC, PENNINGVAC, CERA VAC, linear sensors (DU) and IONIVAC transmitter	see chapter "Products", para. "Active Sensors"		
Connection cables for THERMOVAC and PENNINGVAC (Type A), CERA VAC (Type B analog, Type C digital and IONIVAC (Type C)	see chapter "Products", para. "Connection Cables for Active Sensors"		
Adapter USB/RS 232 C	<b>800110V0103</b>		
LEYASSIST GRAPHIX visualisation and operating software, including data storage and export (CSV file)	<b>230440V01</b>		

LabView® <sup>1)</sup> driver, online via download available

<sup>1)</sup> LabView is a registered trademark of the company National Instruments

# DISPLAY ONE



Cost-effective, compact single channel display unit for the transmitters from the THERMOVAC series and for PTR 90.

## Advantages to the User

- Power supply voltage for the transmitters
- Four digit mantissa in the range from  $5 \times 10^{-9}$  to 2000 mbar
- Readout selectable between mbar, Torr or Pascal
- 0 to 10 V chart recorder output via plug-in screw terminals
- The switching threshold of the transmitters has been looped through to plug-in terminals
- The transmitter switching threshold settings are displayed
- Compact bench top enclosure (1/4 19", 2 HU)
- For fitting into 19", 3 HU racks
- Supply voltage 100 – 240 V

## Connectable Sensors

### THERMOVAC


- TTR 100 \*)
- TTR 101 / TTR 101
- TTR 101 S / TTR 101 N S
- TTR 211 \*)
- TTR 216 S \*)
- TTR 90 \*)
- TTR 90 S \*)
- TTR 91 / TTR 91 N
- TTR 91 S / TTR 91 N S
- TTR 96 S / TTR 96 N S
- TTR 911 / TTR 911 N
- TTR 916 / TTR 916 N
- TTR 91 RN / TTR 911 RN
- TTR 96 RN / TTR 916 RN
- TTR 97 RN / TTR 917 RN

### PENNINGVAC

- PTR 90 / PTR 90 N

### Linear pressure sensor

- DU 200
- DU 201
- DU 2000
- DU 2001
- DU 2001 rel.

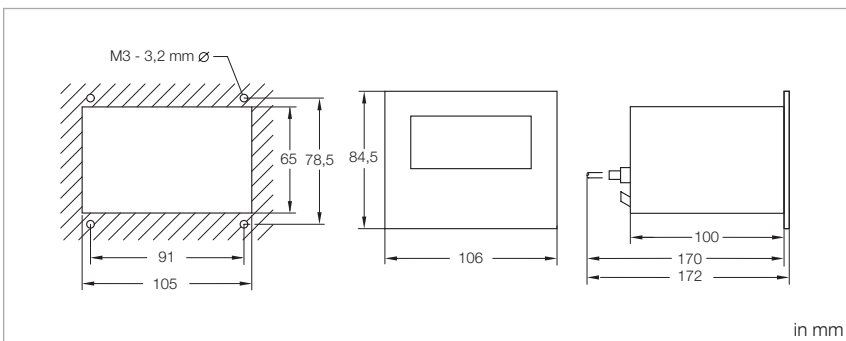

Dimensional drawing and panel cut-out for the DISPLAY ONE

\*) Connecting of older sensors possible

## Technical Data

## DISPLAY ONE

Number of measurement channels	1	
Display for measured values	digital, 7 segment LED	
Measurement range	mbar (Torr)	$5 \times 10^{-9}$ to 2000 ( $3.8 \times 10^{-9}$ to 1500)
Unit of measurement (selectable)	mbar, Torr, Pa	
Switching thresholds	from the transmitter are run to a terminal strip	
Chart recorder output ( $R_a > 2,5 \text{ k}\Omega$ )	0 – 10 Volt, characteristic corresponds to the connected transmitter	
Mains connection		
EURO version	V AC / Hz	100 – 240 / 50/60
US version	V AC / Hz	100 – 240 / 50/60

## Ordering Information

## DISPLAY ONE

	Part No.
DISPLAY ONE with mains cord (EURO and US)	<b>230 001</b>
THERMOVAC Transmitter PENNINGVAC Transmitter PTR 90	see chapter "Products", para. "Active Sensors"
Linear pressure sensors DU	see chapter "Products", para. "Additional Sensors"
Connection cables for THERMOVAC and PENNINGVAC (Type A)	see chapter "Products", para. "Connection Cables for Active Sensors"
Adapter panel for installation in a 3 HU, 19" rack	<b>230 005</b>

# DISPLAY THREE




Cost-effective, operating and display units for the transmitters from the THERMOVAC, PENNINGVAC and DI/DU series.

All channels are displayed simultaneously.

## Advantages to the User

- Power supply voltage for the transmitters
- Display range from  $1 \times 10^{-9}$  to 2000 mbar ( $0.75 \times 10^{-9}$  to 1500 Torr)
- Readout selectable between mbar, Torr or Pascal
- Adjustable switching thresholds with variable hysteresis, floating change-over contacts and visual indication of the switching status in the display
- Option of entering gas correction factors
- Separate chart recorder outputs 0 – 10 V for each measurement channel
- Compact bench top enclosure (1/4 19", 3 HU)
- For fitting into 19", 3 HU racks

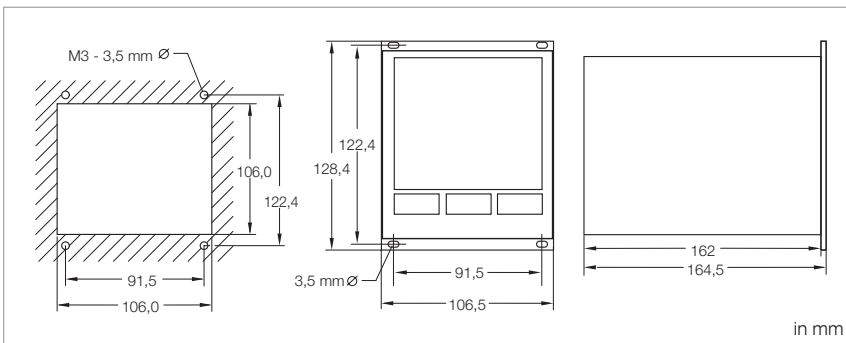

Dimensional drawing and panel cut-out for the DISPLAY THREE

## Connectable Sensors

### THERMOVAC

- TTR 211 \*)
- TTR 216 S \*)
- TTR 90 \*)
- TTR 91 / TTR 91 N
- TTR 96 S / TTR 96 N S
- TTR 100 \*)
- TTR 100 S \*)
- TTR 101 / TTR 101 N
- TTR 101 S / TTR 101 N S
- TTR 911 / TTR 911 N
- TTR 916 / TTR 916 N
- TTR 91 RN / TTR 911 RN
- TTR 96 RN / TTR 916 RN
- TTR 97 RN / TTR 917 RN

### PENNINGVAC

- PTR 90 / PTR 90 N
- PTR 225 / PTR 225 N
- PTR 225 S / PTR 225 N S
- PTR 237 / PTR 237 N

### Linear pressure sensor

- DU 200
- DU 201
- DU 2000
- DU 2001
- DU 2001 rel.

\*) Connecting of older sensors possible

## Technical Data

## DISPLAY THREE

Number of measurement channels		3
Display for measured values		3 (1 per channel)
Measurement range	mbar (Torr)	$1 \times 10^{-10}$ to 2000
Unit of measurement (selectable)		adjustable
Gas type correction (for PTR)		6 floating changeover contacts
Sensor connection		60 V, 1 A DC / 30 V, 1 A AC
Sensor power supply	V DC	1 per channel,
Electrical outputs		configurable as 2nd switching threshold
Switching thresholds		3 (1 per channel)
Number		sensor dependent
Adjustment range		adjustable
Hysteresis		6 floating changeover contacts
Relay contact		60 V, 1 A DC / 30 V, 1 A AC
Load rating		1 per channel,
Ready signal relay		configurable as 2nd switching threshold
Error message		
Relay contact		normally open contact
Load rating		60 V, 1 A DC / 30 V, 1 A AC
Chart recorder output ( $R_a > 10 \text{ k}\Omega$ )		0 - 10 V per measurement channel, output characteristic corresponds to the connected transmitter
Control input		PENNINGVAC PTR: high voltage on
Mains connection	V AC / Hz	85 - 240 / 50/60
Power consumption	W	< 15
Nominal temperature range	°C	+5 to +50
Weight	kg (lbs)	1.4 (3.09)
Protection class	IP	40

## Ordering Information

## DISPLAY THREE

	Part No.
DISPLAY THREE with mains cord (EURO and US)	<b>230 025</b>
THERMOVAC Transmitter	see chapter "Products", para. "Active Sensors"
PENNINGVAC Transmitter	see chapter "Products", para. "Active Sensors"
Connection cables for THERMOVAC and PENNINGVAC (Type A)	see chapter "Products", para. "Connection Cables for Active Sensors"

# Passive Sensors

## THERMOVAC Sensors

### TR 211, TR 211 NPT, TR 212, TR 216



These passive sensors use thermal conductivity technology according to Pirani.

#### Advantages to the User

- Measurement range  $5 \times 10^{-4}$  to 1000 mbar ( $3.75 \times 10^{-4}$  to 750 Torr)
- Tungsten or platinum filament
- Cost-effective sensing cell
- Fully aligned and temperature compensated 0 to +40 °C
- Constant filament temperature

#### TR 211


- Aluminum sensing cell with tungsten filament
- Improved temperature compensation

#### TR 212

- Stainless steel sensing cell with tungsten filament
- Overpressure resistant

#### TR 216

- Stainless steel sensing cell with platinum filament and ceramics feed through
- Well suited for corrosive processes and water vapor atmospheres

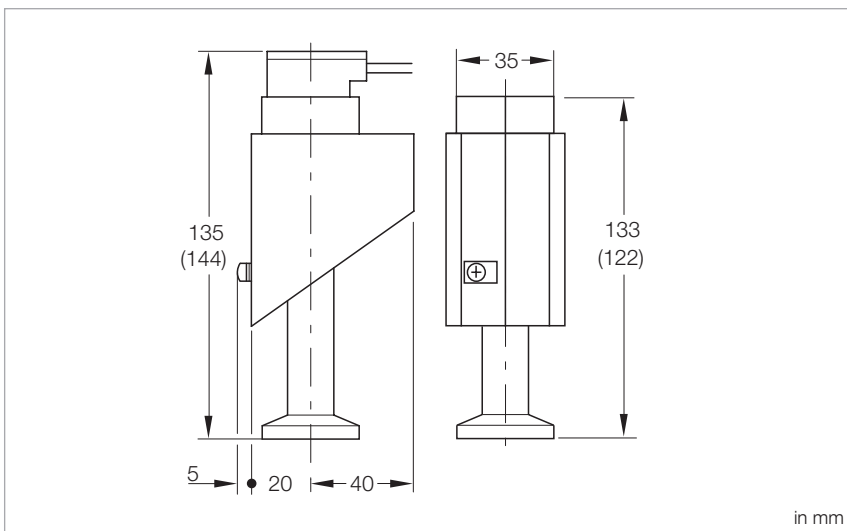

Dimensional drawing for the TR 211, TR 212 and TR 216; TR 211 NPT in brackets



## Technical Data

### TR 211

### TR 211 NPT

### TR 212

### TR 216

Measurement range	mbar (Torr)	5 x 10 <sup>-4</sup> to 1000 (3.8 x 10 <sup>-4</sup> to 7.5 x 10 <sup>2</sup> )			
Operating temperature range (compensated)	°C	0 to +40			
Storage temperature range, max.	°C	80			
Filament		Tungsten	Tungsten	Tungsten	Platinum
Filament temperature	°C	110			
Permissible overload (abs.), max.	bar	3	3	10	10
Volume of the sensing cell, approx.	cm <sup>3</sup>	11			
Vacuum connection	DN	16 ISO-KF	1/8" NPT	16 ISO-KF/16 CF	16 ISO-KF
Materials in contact with the medium		Aluminium, Vacon, Glass, Tungsten, CrNi 8020, epoxy cement	Aluminium, Vacon, Glass, Tungsten, CrNi 8020, epoxy cement	Stainless steel, Vacon, Glass, Tungsten, CrNi 8020	Stainless steel 1.4301 (SS 304), Al <sub>2</sub> O <sub>3</sub> , CrNi 8020, Platinum
Operating units		THERMOVAC TM 21, 22, 23 / COMBIVAC CM 31, 32, 33, 51 / PIEZOVAC PV 20			

Vacuum Measuring,  
Controlling

## Ordering Information

### TR 211


### TR 211 NPT

### TR 212

### TR 216

	Part No.	Part No.	Part No.	Part No.
THERMOVAC sensors Series 200				
DN 16 ISO-KF	<b>157 85</b>	-	<b>158 52</b>	<b>157 87</b>
DN 16 CF	-	-	<b>157 86</b>	-
DN 1/8" NPT	-	<b>896 33</b>	-	-
Replacement sensing cell	<b>E 157 75</b>	<b>E 896 34</b>	-	<b>E 157 77</b>

# PENNINGVAC Sensors PR 25, PR 26, PR 27, PR 28

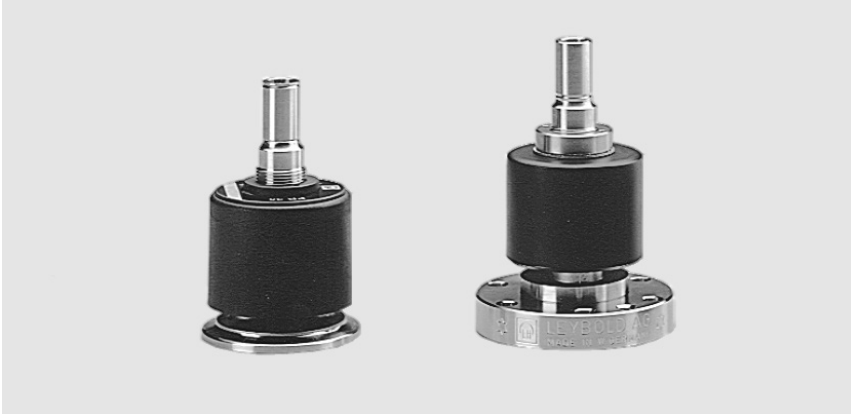


These passive sensors use cold cathode ionization technology according to Penning.

## Advantages to the User

- Rugged
- Insensitive to air inrushes and vibrations
- Easy disassembly and cleaning of the measurement system
- Exchangeable cathode plate
- Improved ignition characteristic through titanium cathodes

## Option

For protection of the PENNINGVAC sensors against contamination, radiation and other disturbing factors the installation of a baffle is recommended.

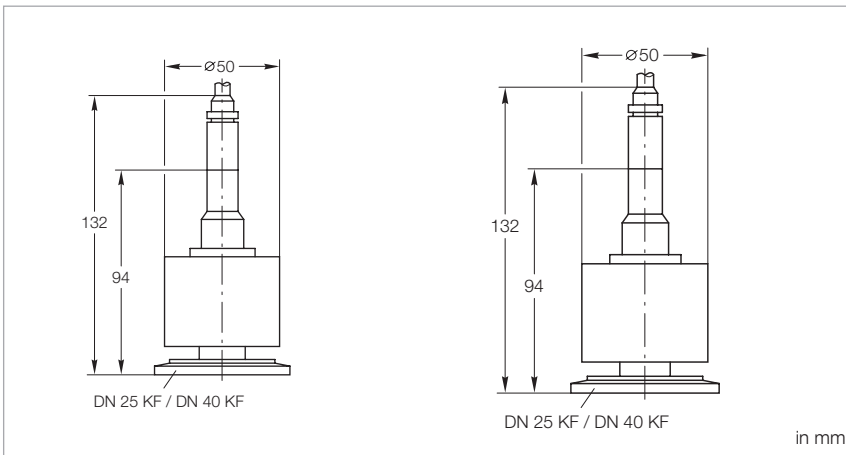

Dimensional drawing for the PENNINGVAC PR sensors

## Technical Data

**PR 25**

**PR 26**

**PR 27**

**PR 28**

Measurement range	mbar (Torr)	1 x 10 <sup>-9</sup> to 10 <sup>-2</sup> (0.75 x 10 <sup>-9</sup> to 10 <sup>-2</sup> )			
High voltage supply (anode potential)					
Trigger voltage	kV	3.3			
Operation voltage	kV	1.6			
Storage temperature range	°C	-25 to +80			
Nominal temperature range	°C	0 to +80			
Bake out temperature (flange)	°C	-	-	-	200
Permissible overload (abs.)	bar	6 <sup>1)</sup>			
Dead volume	cm <sup>3</sup>	21			
Vacuum connection	DN	25 ISO-KF	40 ISO-KF	40 CF	40 CF
Materials in contact with the medium		Stainless steel, Nichrome, Ceramics, Titanium			
Weight, approx.	kg (lbs)	0.75 (1.66)	0.75 (1.66)	0.8 (1.66) 0.8 (1.66)	0,8
Operating units		COMBIVAC CM 31, 32, 33, 51 / PENNINGVAC PM 31			

Vacuum Measuring,  
Controlling

## Ordering Information

**PR 25**

**PR 26**

**PR 27**

**PR 28**

	Part No.	Part No.	Part No.	Part No.
PENNINGVAC sensors	<b>157 52</b>	<b>136 46</b>	<b>136 47</b>	<b>136 48</b>
Replacement cathode plate, titanium (5 pcs., incl. 5 ceramics discs)	<b>EK 162 91</b>			
Replacement anode ring	<b>200 28 711</b>			
Baffle, with centering ring (FPM (FKM))				
DN 25	<b>230 078</b>	-	-	-
DN 40	-	<b>230 079</b>	-	-

<sup>1)</sup> When using an ultra sealing gasket at the vacuum connection

**Note:**

PR 26 replaces PR 31, 32, 35

PR 27 replaces PR 36

# IONIVAC Sensors IE 414 and IE 514



These passive sensors use hot cathode ionization technology.

## IE 414


- Bayard-Alpert sensing system
- Measurement range to  $2 \times 10^{-11}$  mbar ( $1.5 \times 10^{-11}$  Torr)
- Protection shield welded in place

## IE 514

- Extractor sensing system
- Reliable to  $1 \times 10^{-12}$  mbar ( $0.75 \times 10^{-12}$  Torr)
- Significant reduction of X-ray and ion desorption effects

## Advantages to the User

- Exchangeable cathode
- High accuracy of the measurements due to individually calibrated sensing system

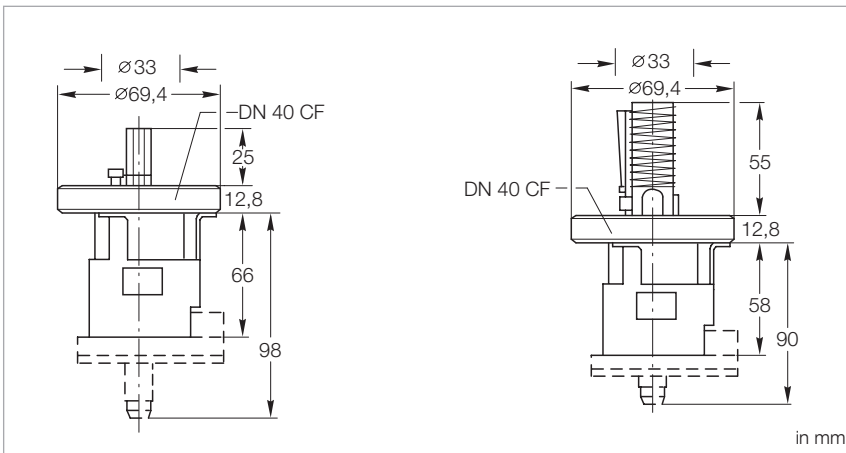

Dimensional drawing for the IE 414 (left) and IE 514 (right)

## Technical Data

## IE 414

## IE 514

Measurement range	mbar (Torr)	$2 \times 10^{-11}$ to $10^{-2}$ ( $1.5 \times 10^{-11}$ to $10^{-2}$ )	$10^{-12}$ to $1 \times 10^{-4}$ ( $10^{-12}$ to $7.5 \times 10^{-5}$ )
X-ray limit	mbar (Torr)	$\leq 10^{-11}$ ( $\leq 10^{-11}$ )	$\leq 10^{-12}$ ( $\leq 10^{-12}$ )
Operating temperature range	°C	0 to +80	
Degassing temperature at the flange, max.	°C	250 <sup>1)</sup> / 400 <sup>2)</sup>	
Material			
Cathode		Iridium with yttric oxid coating	Iridium with yttric oxid coating
Feedthrough pins		NiFe 42	NiFe 42
Anode		Pt/Ir 90/10/pt wire	Stainless Steel 1.4404
Vacuum connection	DN	40 CF	
Adjustment data			
Ion detector potential	V	0	0
Cathode potential	V	80	100
Anode potential	V	220	220
Emission current	mA	0.06 to 0,6	1.6
Hot cathode current	A	1.4	
Hot cathode voltage	V	2.7	3.7
Sensitivity for Nitrogen	mbar <sup>-1</sup>	17.0	6.6
Bake out operation, Electron bombardment	V / mA	700 / 30	
Operating units		IM 540, CM 52	

## Ordering Information

## IE 414

## IE 514

	Part No.	Part No.
IONIVAC sensors	<b>158 66</b>	<b>158 67</b>
Replacement cathode	<b>158 63</b>	<b>158 61</b>

<sup>1)</sup> With bakeable gauge head cable

<sup>2)</sup> With gauge head cable detached

# Operating Units for Passive Sensors

## COMBIVAC CM 51/CM 52



The COMBIVAC CM 51 covers the complete pressure range between  $10^{-9}$  and 1000 mbar by combining two measurement principles - THERMOVAC and PENNINGVAC - providing both monitoring and control functions.

The COMBIVAC CM 52 offers by combining two UHV principles of measurement (THERMOVAC absolute pressure sensor and Bayard-Alpert measurement system IE 414 or extractor measurement system IE 514) measurements of vacuum pressures in the range between  $10^{-12}$  and 1000 mbar.



Rear side of the COMBIVAC CM 51 (left) and CM 52 (right)

### Advantages to the User

- Compact 3 channel operating unit for a pressure range for passive sensors of
  - $10^{-9}$  to 1000 mbar (CM 51)
  - $10^{-12}$  to 1000 mbar (CM 52)
- Automatic switchover from THERMOVAC operation to
  - Penning (cold cathode) operation (CM 51)
  - UHV sensors (Bayard-Alpert measurement system IE 414 or extractor measurement system IE 514) (CM 52)
- Measurement cable lengths up to 100 meters are possible depending on the type of application
- Easy to operate
- Keyboard locking through SOFT-LOCK
- Two adjustable switching thresholds with a relay contact for each measurement channel
- Logarithmic chart recorder output 0 – 10 V or 2 – 10 V
- Wide range power supply 100 – 240 V
- Unit of pressure selectable between mbar, Torr und Pascal
- Compact, rugged Penning sensor insensitive to operation at high pressures (see para. "Sensors")
- Aligned and temperature compensated THERMOVAC sensors (see para. "Sensors")
- Cost-effective replacement sensors and electrodes
- Error message for each channel, for example in the case of broken filament, defective sensor line or failed plasma discharge
- Compact benchtop enclosure (1/4 19", 3 HU) made of metal for installation in front panel cut outs and 19" racks
- RS 232 C and Profibus interface
- CE mark
- RoHS-compliant



## Technical Data

## COMBIVAC

### CM 51

### CM 52

		CM 51	CM 52
Number of measurement channels		3	3
Measurement range			
Channel 1, 2 (THERMOVAC)	mbar (Torr)	5 x 10 <sup>-4</sup> to 1000 (3.5 x 10 <sup>-4</sup> to 750) 10 <sup>-9</sup> to 10 <sup>-2</sup> (10 <sup>-9</sup> to 10 <sup>-2</sup> )	5 x 10 <sup>-4</sup> to 1000 (3.5 x 10 <sup>-4</sup> to 750) -
Channel 3 (PENNINGVAC)	mbar (Torr)		
Channel 3 (IE 414 Bayard-Alpert)	mbar (Torr)	-	2 x 10 <sup>-11</sup> to 1 x 10 <sup>-2</sup> (1.5 x 10 <sup>-11</sup> to 0.75 x 10 <sup>-2</sup> )
(IE 514 Extraktor)	mbar (Torr)	-	2 x 10 <sup>-12</sup> to 1 x 10 <sup>-4</sup> (1.5 x 10 <sup>-12</sup> to 0.75 x 10 <sup>-4</sup> )
Unit of measurement (selectable)		mbar, Torr, Pa	
Measurement uncertainty			
THERMOVAC		≤ 20% of the measured value in the range 10 <sup>-3</sup> to 10 <sup>-2</sup> mbar (± 20%) in the range 10 <sup>-2</sup> to 10 <sup>2</sup> mbar (± 15%)	≤ 20% of the measured value in the range 10 <sup>-3</sup> to 10 <sup>-2</sup> mbar (± 20%) in the range 10 <sup>-2</sup> to 10 <sup>2</sup> mbar (± 15%)
PENNINGVAC		± 30% of the measured value in the range 10 <sup>-8</sup> to 10 <sup>-4</sup> mbar	-
IE 414/514		-	± 10% of the displayed value (however, this value may increase depending on the type of application)
Measurement cable	m	up to 100 (application dependent)	
Display for measured values		digital, 7 segment LED, 4 digit mantissa and 2 digit exponent	
Type of gas (selectable)		factor adjustable	
Switching thresholds		2 per channel single, interval-trigger	2 per channel single, interval-trigger
Operating mode			
Adjustable switching thresholds			
THERMOVAC	mbar (Torr)	5 x 10 <sup>-3</sup> to 500 (5 x 10 <sup>-3</sup> to 375)	5 x 10 <sup>-3</sup> to 500 (5 x 10 <sup>-3</sup> to 375)
PENNINGVAC	mbar (Torr)	1 x 10 <sup>-8</sup> to 9.9 x 10 <sup>-3</sup> (0.75 x 10 <sup>-8</sup> to 7.4 x 10 <sup>-3</sup> )	-
Bayard-Alpert	mbar (Torr)	-	1 x 10 <sup>-8</sup> to 5 x 10 <sup>-3</sup> (0.75 x 10 <sup>-8</sup> to 3.75 x 10 <sup>-3</sup> )
Extraktor	mbar (Torr)	-	1 x 10 <sup>-11</sup> to 1 x 10 <sup>-11</sup> (0.75 x 10 <sup>-11</sup> to 0.75 x 10 <sup>-11</sup> )
Switching relay hysteresis		10% of the trigger value (default), freely adjustable for THERMOVAC and PENNINGVAC	10% of the trigger value (default), freely adjustable for THERMOVAC and IE 414 oder 514
Relay contact load rating		AC/DC, max. 30 V / 1 A	
Chart recorder output (default)		0 to 10 V, log. divisions linear: 3 decades, approximately 10.5 V in case of a failure, logarithmic: (1 x 10 <sup>-3</sup> mbar), 1.67 V/decade	0 to 10 V, log. divisions linear: 3 decades, approximately 10.5 V in case of a failure, logarithmic: (1 x 10 <sup>-3</sup> mbar), 1.67 V/decade
THERMOVAC			
PENNINGVAC		logarithmic: (1 x 10 <sup>-9</sup> mbar), 1.43 V/decade	-
IE 414 oder 514		-	logarithmic: (1 x 10 <sup>-12</sup> mbar), 1.00 V/decade
Interface		RS 232 C, RS 485 and Profibus	
Mains connection 50/60 Hz	V AC	100 – 240	
Power consumption	W	< 10	65
Storage temperature range	°C	-20 to +60	
Nominal temperature range	°C	+5 to +50	
Max. rel. humidity	% n.c.	80	
Weight	kg (lbs)	1.4 (3.09)	
Dimension (W x H x D)	mm	106.4 x 128.5 x 164.5	
Installation depth	mm	approx. 220	
Protection class	IP	40	



## Ordering Information

## COMBIVAC

	<b>CM 51</b>	<b>CM 52</b>
	<b>Part No.</b>	<b>Part No.</b>
Operating unit COMBIVAC CM 51/52 including EURO and US mains cord, 2 m with RS 232 C / 485 with Profibus DB	<b>230 110</b> <b>230 111</b>	<b>230 115</b> <b>230 116</b>
Cable adapter CM 31 – CM 51	<b>230 112 V01</b>	-
Options		
19" installation frame		<b>161 00</b>
1/4 19" blank panel		<b>161 02</b>
THERMOVAC sensors for CM 51/52		
TR 211, DN 16 ISO-KF		<b>157 85</b>
TR 211, 1/8" NPT		<b>896 33</b>
TR 212, DN 16 ISO-KF		<b>158 52</b>
TR 212, DN 16 CF		<b>157 86</b>
TR 216, DN 16 ISO-KF		<b>157 87</b>
Gauge head cables for TR sensors		
5 m		<b>162 26</b>
10 m		<b>162 27</b>
15 m		<b>124 34</b>
20 m		<b>162 28</b>
30 m		<b>124 35</b>
50 m		<b>124 37</b>
75 m		<b>124 38</b>
100 m		<b>124 39</b>
PENNINGVAC sensors for CM 51		
PR 25, DN 25 ISO-KF	<b>157 52</b>	-
PR 26, DN 40 ISO-KF	<b>136 46</b>	-
PR 27, DN 40 CF	<b>136 47</b>	-
PR 28, DN 40 CF, bakeable	<b>136 48</b>	-
Gauge cables for PR sensors		
5 m	<b>162 88</b>	-
10 m	<b>162 89</b>	-
15 m	<b>124 49</b>	-
20 m	<b>157 56</b>	-
30 m	<b>124 50</b>	-
50 m	<b>124 52</b>	-
75 m	<b>124 53</b>	-
100 m	<b>124 54</b>	-
IONIVAC sensors for CM 52		
IE 414, DN 40 CF	-	<b>158 66</b>
IE 514, DN 40 CF	-	<b>158 67</b>
Mains cable		
3 m (US)		<b>800 102 V1002</b>
Gauge head cables for IE sensors		
5 m	-	<b>158 68</b>
10 m	-	<b>150 88</b>
15 m	-	<b>230 670 V01</b>
5 m, bakeable to 200 °C	-	<b>158 44</b>
10 m, bakeable to 200 °C	-	<b>230 671 V01</b>
Extension cables for IE 414/514		
10 m	-	<b>245 002</b>
20 m	-	<b>200 02 937</b>
30 m	-	<b>245 011 V01</b>
50 m	-	<b>245 010 V01</b>
up to 100 m (application dependent)	-	<b>upon request</b>

# IONIVAC IM 540



The 3-channel display and operating unit IONIVAC IM 540 offers, by combination of up to 4 different principles of measurement – Pirani, capacitive, Bayard-Alpert and Extractor –, complete coverage and control of the vacuum pressure in the range between  $10^{-12}$  mbar and atmospheric pressure.

## Advantages to the User

- Precise UHV pressure measurements with the Bayard-Alpert sensor IE 414 (offering excellent longterm stability) or the Extractor sensor IE 514 (offering an extremely low X-ray limit of  $< 1 \times 10^{-12}$  mbar)
- 1 measurement channel for IONIVAC sensor (Bayard-Alpert or Extractor)
- Possibility of simultaneously connecting a second IONIVAC sensor
- Degassing of the anode through electron bombardment with time-limit
- Continuous UHV measurement also during the degassing phase (up to  $+250$  °C with bakeable gauge head cable)
- 2 measurement channels for direct connection of transmitters from the series THERMOVAC TTR and CERAVAC CTR
- Selectable pressure units (mbar, Torr, Pascal, Micron)
- Display of a single measurement channel with pressure trend through analogue bargraph or simultaneous display of all measurement channels
- Two adjustable thresholds with adjustable hysteresis and freely assignable to the measurement channels

- Compact benchtop enclosure (1/2 19", 3 HU)
- RS 232 C interface provided as standard
- Simple software updates possible through the RS 232 interface
- Profibus interface (optional)
- CE mark

## Typical Applications


- Pressure measurement and control in the UHV range
- Measurement of ultimate pressure in UHV systems
- Checking of ultimate pressure in semiconductor production
- Total pressure measurements in the area of cryo technology
- Total pressure measurements in calibration systems

## Connectable Sensors

- Bayard-Alpert sensor IE 414
- Extractor sensor IE 514 (see Chapter "Additional Sensors") combined with
- THERMOVAC TTR 211, TTR 216 S, TTR 91 RN, TTR 911 RN, TTR 96 RN, TTR 916 RN, TTR 97 RN, TTR 917 RN
- CERAVAC CTR 90, CTR 91 and CTR 100 (see Chapter "Active Sensors")

Two passive sensors working with ionization technology (IE 414 and/or IE 514) could be connected simultaneously to the IONIVAC IM 540 while only one is in operation.

A pressure dependent emission control of these sensors is possible if a THERMOVAC TTR or CERAVAC CTR 100/CTR 91 of suitable range overlap is connected

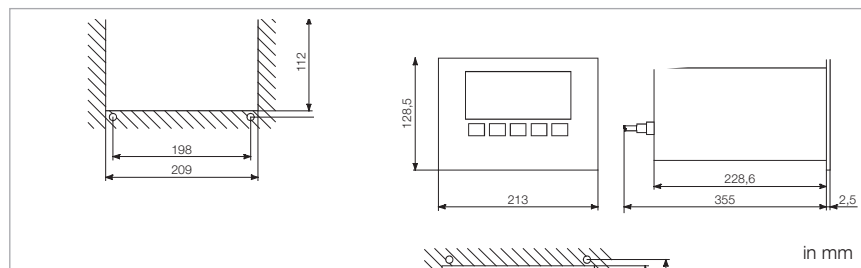

Front panel cut-out (left) and dimensional drawing (right) for the IONIVAC IM 540

## Technical Data

## IONIVAC IM 540

Number of measurement channels		3
Bayard-Alpert / Extractor		Channel 1 or 2
THERMOVAC / CERAVAC		Channel 3 and 4
Measurement range	mbar (Torr)	$1 \times 10^{-12}$ to 1100 ( $0.75 \times 10^{-12}$ to 825)
Measurement range Extractor	mbar (Torr)	$1 \times 10^{-12}$ to $1 \times 10^{-4}$ ( $0.75 \times 10^{-12}$ to $0.75 \times 10^{-4}$ )
Measurement range Bayard-Alpert	mbar (Torr)	$1 \times 10^{-11}$ to $1 \times 10^{-2}$ ( $0.75 \times 10^{-11}$ to $0.75 \times 10^{-2}$ )
Measurement range switching		automatic or decade pre-select
Units of measurement (selectable)		mbar, Torr, microns, Pa
Measurement uncertainty	%	$\pm 10$ of the value displayed
Trend indication		bargraph
Measurement value display rate		$1 \times 10^{-10}$ to $1 \times 10^{-2}$ mbar, $5 \text{ s}^{-1}$ $1 \times 10^{-12}$ to $1 \times 10^{-10}$ mbar, $0.5 \text{ s}^{-1}$
Emission current		
Extractor sensor	mA	1.6
Bayard sensor	mA	0.1 to 10; automatic control
Emission current shutdown at		$p > 1 \times 10^{-2}$ mbar, broken cathode, short-circuit, interruption of the electric circuit
Bake out power		
Extractor / Bayard-Alpert	W	20 / 40
Sensor power supply, potential for		anode Extractor / Bayard-Alpert: 220 V, cathode Extractor / Bayard-Alpert: 100 V/80 V, Reflector Extractor: 205 V
Sensor connections		Bayard-Alpert and Extractor - single operation is possible 2 x Bayard-Alpert or Extractor (redundant operation)
Measurement system detection		automatically
Measurement system switchover		automatically, pressure dependent, error dependent
Chart recorder outputs		logarithmic 0 to 10 V (1 V / dec.) or linear 0 to 10 Volt error indication $U > 10.5 \text{ V}$
Extractor / Bayard-Alpert ( $R_a = 2,5 \text{ k}\Omega$ )		
Interface (standard / optional)		RS 232 C / Profibus
Switching thresholds (single operation or interval)		2 with floating changeover contact
Mains connection	V AC / Hz	90 – 264 / 50/60
Storage temperature range	°C	-40 to +60
Nominal temperature range	°C	+5 to +50
Dimensions of the benchtop instrument, (W x H x D)	mm	213 x 128.5 x 250
Weight, approx.	kg (lbs)	3.0 (6.62)

## Ordering Information

## IONIVAC IM 540


	<b>Part No.</b>
IONIVAC IM 540 with mains cord 2 m (EURO and US)	<b>230 100</b>
Options Profibus DP interface	<b>230 101</b>
Calibration	see chapter "Miscellaneous", para. "Leybold Calibration Service"
IONIVAC sensors IE 414, DN 40 CF Replacement cathode IE 414 IE 514, DN 40 CF Replacement cathode IE 514	<b>158 66</b> <b>158 63</b> <b>158 67</b> <b>158 61</b>
Gauge head cables for IE 414/514 5 m 10 m 15 m 5 m, bakeable to 200 °C 10 m, bakeable to 200 °C	<b>158 68</b> <b>150 88</b> <b>230 670 V01</b> <b>158 44</b> <b>230 671 V01</b>
Extension cables for IE 414/514 10 m 20 m	<b>245 002</b> <b>200 02 937</b>
THERMOVAC transmitter TTR	see chapter "Products", para. "Active Sensors"
Connection cable for THERMOVAC (Type A)	see chapter "Products", para. "Connection Cable for Active Sensors"
CERAVAC transmitter CTR	see chapter "Products", para. "Active Sensors"
Connection cable for CERAVAC (Type B)	see chapter "Products", para. "Connection Cable for Active Sensors"

# Mechanical Gauges

## Bourdon Vacuum Gauges



Rugged relative pressure vacuum gauges based on the Bourdon principle covering the pressure range from 1 to 1020 mbar (0.75 to 765 Torr).

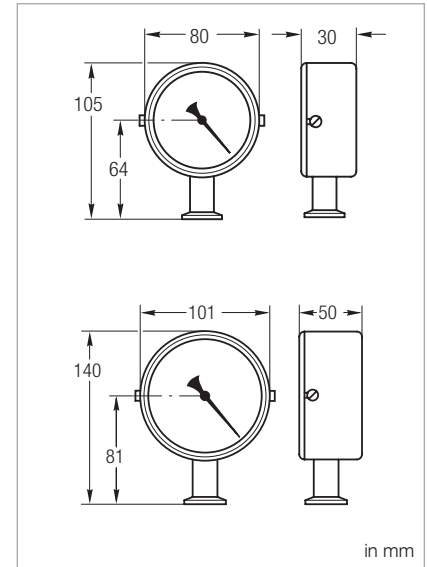

Dimensional drawing for the BOURDONVAC A (top) and the BOURDONVAC C (bottom)

Vacuum Measuring,  
Controlling

### Advantages to the User

- Highly reliable, rugged, insensitive to vibrations
- Linear readout, independent of the type of gas
- Excellent media compatibility owing to the stainless steel movement (BOURDONVAC C)
- IP 54 protection (BOURDONVAC C)

### Typical Applications

- Vacuum distillation
- Drying processes
- Vacuum conveying systems

### Technical Data

### BOURDONVAC A

### BOURDONVAC C

Measurement range	mbar (Torr)	1 to 1020 (0.75 to 765)	
Measurement uncertainty	% FS	1	
Class 1 (EN 837)	% FS	1	
Overload range (abs. briefly)	bar	1.5	1.3
Storage temperature range	°C	-25 to +60	
Nominal temperature range	°C	+10 to +60	
Flange connection	DN	16 ISO-KF	
Length of scale	mm	207	188
Diameter	mm	80	101
Overall height	mm	105	140
Weight	kg (lbs)	0.25 (0.55)	0.5 (1.10)
Leak tightness	mbar x l/s	1 x 10 <sup>-8</sup>	
Materials in contact with the medium		Nickel plated standard steel, bronze, soft solder	Stainless steel 1.4404

### Ordering Information

### BOURDONVAC A

### BOURDONVAC C

	Part No.	Part No.
Bourdon vacuum gauge	<b>160 40</b>	<b>161 20</b>

# Capsule Vacuum Gauges




Rugged absolute pressure gauges for the pressure range from 1 to 1000 mbar (0.75 to 750 Torr).

## Advantages to the User

- Rugged and insensitive to vibrations
- Models available for two measurement ranges (1 to 100 mbar (0.75 to 75 Torr) and 1 to 1000 mbar (0.75 to 750 Torr))
- Readout independent of the type of gas and changes in atmospheric pressure
- Linear pressure readout
- Installation direct via the connection flange or panel mounting
- Model with integrated isolation valve for use on packaging machines (Part No. 160 68)

## Typical Applications

- Measurement of absolute pressures (for inert gases only)
- Vacuum conveying systems
- Operation monitoring
- Packaging

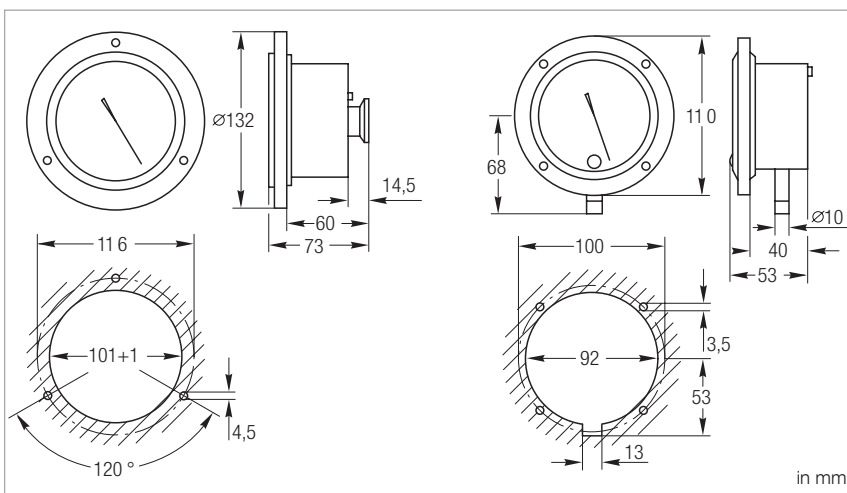

Dimensional drawings for the capsule vacuum gauges  
Part Nos. 160 63/64 (left) and Part No. 160 68 (right)

## Technical Data

## Capsule Vacuum Gauge

Measurement range	mbar (Torr)	1 to 100 (0.75 to 75)	1 to 100 (0.75 to 75)	1 to 1000 (0.75 to 750)
Measurement uncertainty	% FS	1.0	2.5	1.6
Overload range (abs. briefly)	bar	1.5		
Storage temperature range	°C	-25 to +60		
Nominal temperature range	°C	+10 to +60		
Length of scale	mm	205	180	205
Dead volume, approx.	cm <sup>3</sup>	235	167	235
Diameter	mm	132	110	132
Weight	kg (lbs)	0.7 (1.54)	0.6 (1.32)	0.7 (1.54)
Vacuum connection	DN	16 ISO-KF	10 mm dia. hose nozzle with integrated isolation valve	16 ISO-KF
Max. inclination when installed		45°		
Materials in contact with the medium		Brass, Standard steel nickel plated, Glass, NBR,Aluminum, Copper beryllium, Soft and hard solder, Resin		

## Ordering Information

## Capsule Vacuum Gauge

	Part No.	Part No.	Part No.
Capsule vacuum gauge	<b>160 63</b>	<b>160 68</b>	<b>160 64</b>

# Diaphragm Vacuum Gauge DIAVAC DV 1000




Rugged mechanical diaphragm vacuum gauge of high accuracy for the rough vacuum range from 1 to 1000 mbar (1 to 750 Torr).

## Advantages to the User

- Wide measurement range from 1 to 1000 mbar (1 to 750 Torr) with high resolution in the range from 1 to 100 mbar (1 to 75 Torr)
- The scale of each gauge is individually calibrated
- Absolute pressure gauge
- Readout independent of the type of gas and changes in atmospheric pressure
- Stainless steel diaphragm for excellent compatibility with most media
- Laser welding technology for high precision diaphragm mount
- Rugged table-top housing, can be freely mounted above the flange connection; also for panel mounting
- Measurement chamber can be easily cleaned owing to the detachable measurement flange

## Typical Applications

- Chemical processes
- Vacuum distillation
- Absolute pressure measurements for gas mixtures
- For use in explosion hazard rated areas
- Drying processes
- Lamp manufacture

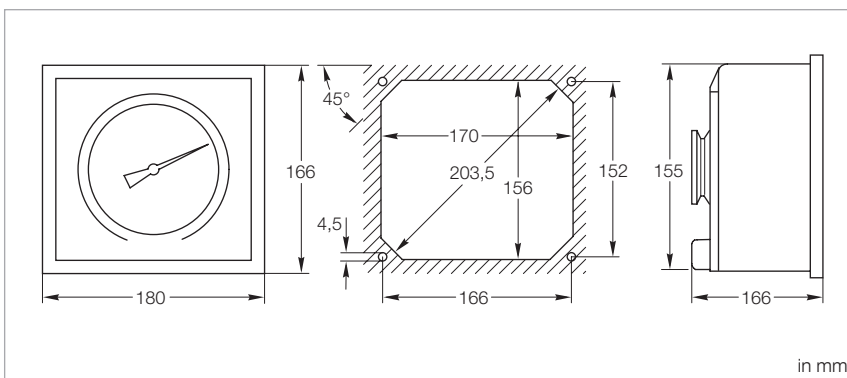

Dimensional drawing and panel cut-out for the DIAVAC DV 1000



## Technical Data

## DIAVAC DV 1000

Measurement range	mbar (Torr)	1 to 1000 (1 to 750)
Measurement uncertainty 1 – 10 mbar (1.0 - 7.5 Torr) 10 – 600 mbar (7.5 - 450 Torr)		±1 mbar ± 10% vom Messwert
Permissible overload (abs.)	bar	3
Storage temperature range	°C	-10 to +60
Nominal temperature range	°C	0 to +60
Length of scale	mm	270
Dead volume	cm <sup>3</sup>	130
Dimension (W x H x D)	mm	180 x 166 x 100
Weight	kg (lbs)	2.7 (5.95)
Vacuum connection	DN	40 ISO-KF
Materials in contact with the medium		Stainless steel 1.4301, 1.4310 (diaphragm), FPM (FKM)

## Ordering Information

## DIAVAC DV 1000

	Part No.
DIAVAC DV 1000 mbar display Torr display	<b>160 67</b> <sup>1)</sup> <b>896 06</b> <sup>1)</sup>
Factory calibration	<b>154 22</b>
Replacement sinter filter with centering ring, DN 40 ISO-KF	<b>231 93 515</b>
Replacement housing, complete	<b>240 000</b>

<sup>1)</sup> Complete with centering ring and sintered filter

# Additional Sensors

## Older Sensors / Replacement Sensors



Linear pressure sensor



Replacement sensor TTR 211



Replacement sensor TTR 216

### Type

### Corresponding Sensors/ Operating Units

### Ordering Information


		Part No.
Replacement sensor TTR 211	TTR 211 PB / D	<b>E 157 75</b>
Replacement sensor TTR 216	TTR 216 PB / D	<b>E 157 77</b>
Replacement sensor IE 100 DN 25 ISO-KF DN 40 CF	ITR 100 ITR 100	<b>E 163 61</b> <b>E 163 67</b>
Replacement spare cathode IE 413	IM 510	<b>158 63</b>
Linear pressure sensor (Previous version)	DI 200 DI 201 DI 2000 DI 2000 Adaptor	<b>158 12</b> <b>158 14</b> <b>158 13</b> <b>245022V01</b>

<sup>1)</sup> For all DI-Sensors



# Pressure Switches and Control Instruments

## Pressure Control System Move

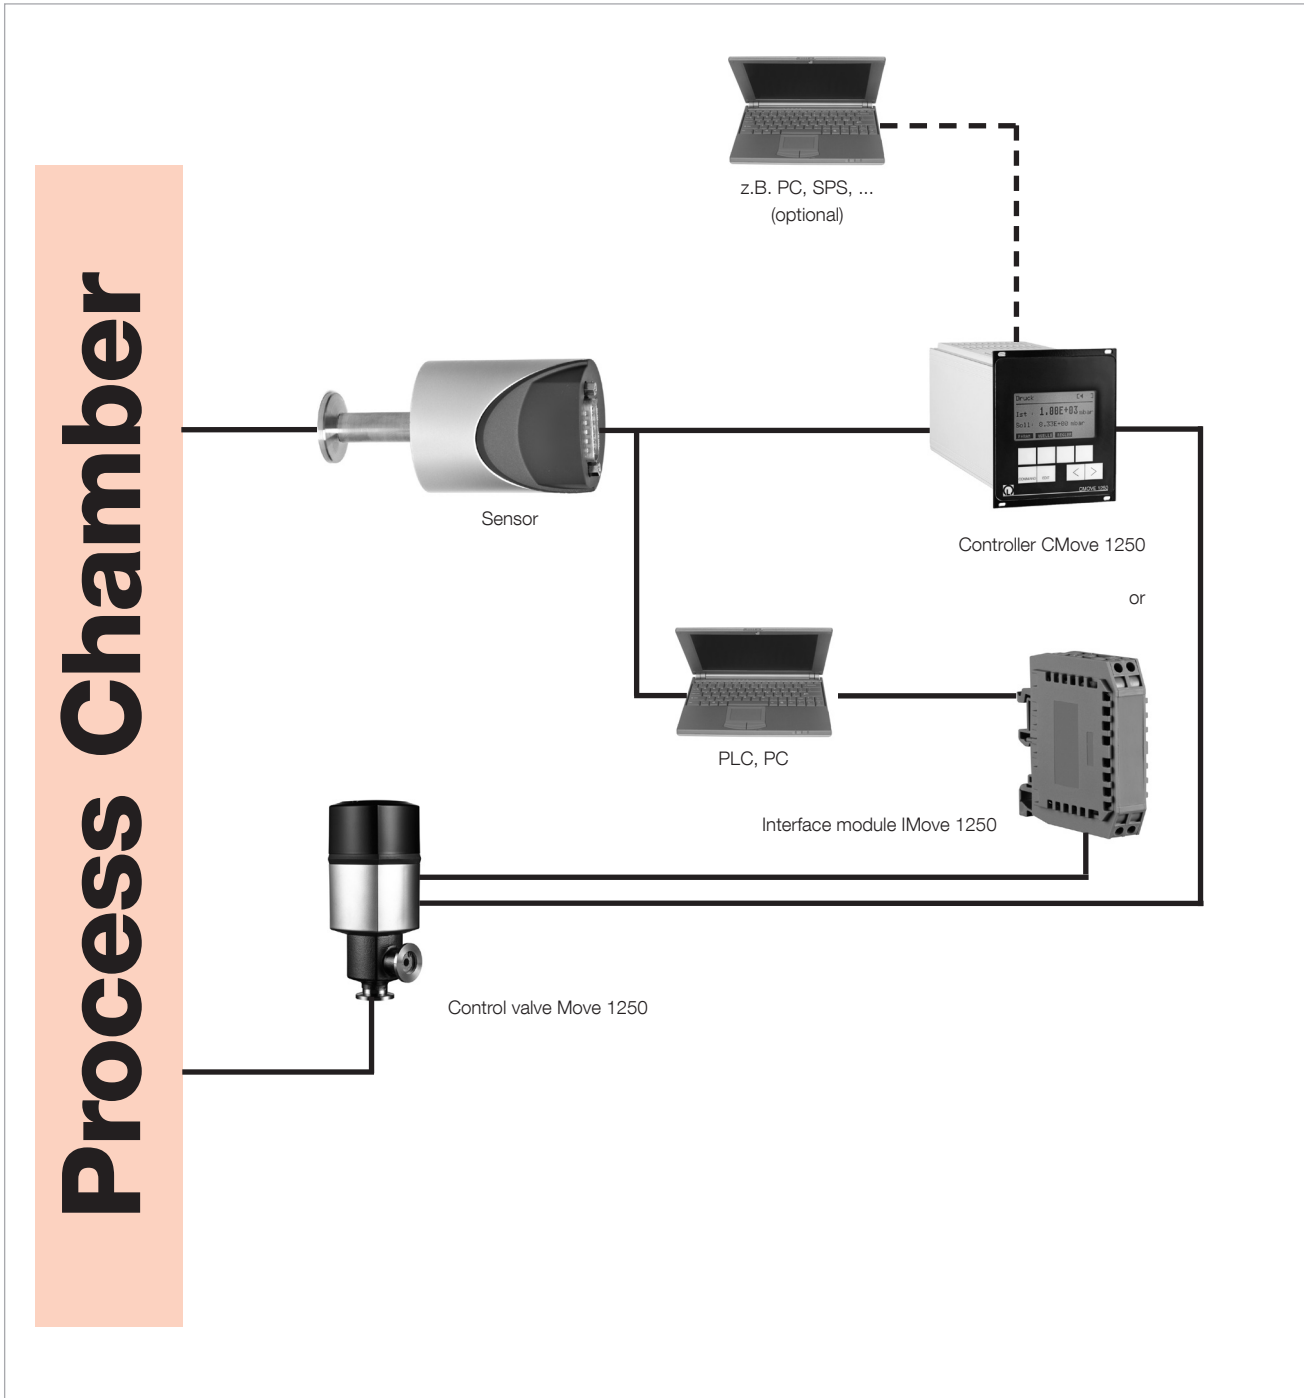

# Control Valve Move 1250



Control valve Move 1250

## Control Valve Move 1250

### Advantages to the User


- Extended control range from  $1 \times 10^{-6}$  to 1250 mbar x l/s
- High controllable gas throughput
- Corrosion resistant owing to FPM (FKM)/stainless steel
- In combination with CMove the valve closes automatically in the event of a power failure
- Valve driven either by the controller CMove 1250 or by a PC or a PLC through the IMove interface
- Electromotive pressure control with variable gas flow (upstream regulation) or with variable conductance (downstream regulation)

### Technical Data


### Control Valve Move 1250

Vacuum connection		DN 16 ISO-KF
Mounting orientation		Any
Leak tightness	mbar x l/s	$1 \times 10^{-9}$
Pressure range		$1 \times 10^{-8}$ mbar to 2.5 bar (absolute)
Gas flow <sup>1)</sup>		
with filter, on the inlet side	mbar x l/s	$5 \times 10^{-6}$ bis 1250 mbar x l/s
with filter, on the inlet and the vacuum side		$5 \times 10^{-6}$ to 1000
Power supply		
Operation voltage	V DC	24 ( $\pm 10\%$ )
Power consumption	VA	12
Current consumption	mA	500, 20 to 30 (closed circuit current)
Actuation	V DC	Step motor
Digital		CMove or IMove 1250
Analog		0 to 10
Type of protection	IP	40
Closing time / opening time	s	3 / 4
Ambient temperature	°C	+5 to +40
Bake out temperature		
Valve body	°C	80
Actuator	°C	60
Material		
Valve body		Stainless steel 1.4435
Valve needle, valve disc		Stainless steel 1.4301
Filter		Stainless steel 1.4404
Seals		FPM
Dosing sleeve		Fluorplastomer
Weight	kg (lbs)	0.5 (1.1)

<sup>1)</sup> For air at a differential pressure of  $\Delta p = 1$  bar

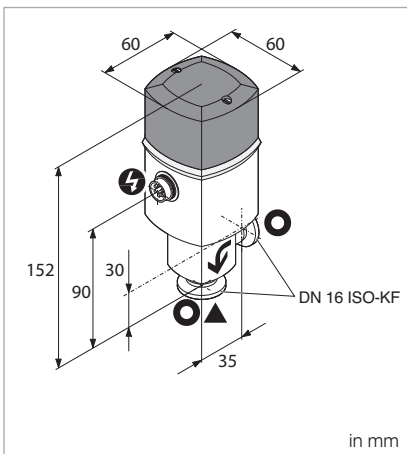

Dimensional drawing for the Move 1250

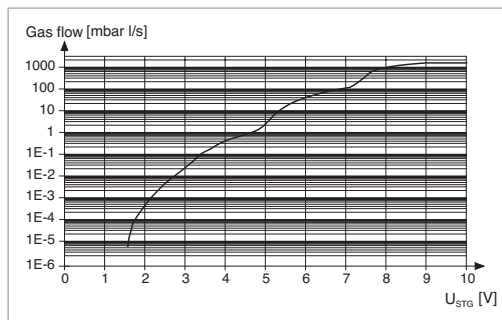

Gas flow curve of the Move 1250

**Ordering Information****Control Valve  
Move 1250**

	<b>Part No.</b>
Control Valve Move 1250	<b>230 219</b>
Accessories	
Filter for the inlet or vacuum side consisting of filtering candle, O-ring and two securing rings	<b>109 63</b>
Connection cable	
CMove 1250 - Control valve Move 1250	
3 m	<b>230 220</b>
5 m	<b>230 221</b>
10 m	<b>230 222</b>
15 m	<b>230 223</b>
20 m	<b>230 224</b>
25 m	<b>230 225</b>



# Controller CMove 1250



Controller CMove 1250

## Technical Applications


- Simple to operate
  - Self-explanatory LCD display and function keys
- Analog/digital inputs/outputs and interfaces
  - Digital input valve control, switch-over
  - Pressure and gas flow adjustment
  - Digital output valve control, error message
- Adjustable PID control algorithms
- 99 pre-programmed PI control algorithms for fast and simple operation
- For installation or tabletop use (1/4 19")

## Typical Applications

The controller CMove in connection with the electric control valve Move 1250 or Move X is suited for applications in the areas like for example

- Semiconductor industry
- Analytical
- Coating
- Quality control
- Surface treatment

as well as in all applications where simple, fast and accurate pressure control is desired and necessary.

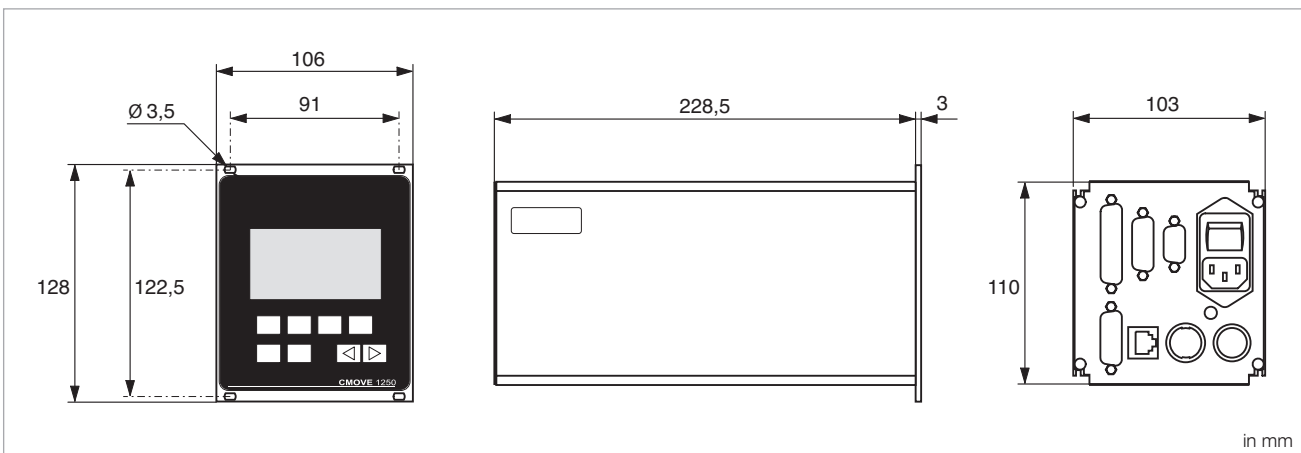

Dimensional drawing for the CMove 1250



## Technical Data

## Controller CMove 1250

Power supply		
Mains voltage, 50/60 Hz	V AC	90 – 250
Power consumption	VA	50
Control types		Auto = (PI) adjustable in 1 to 99 selectable steps PID = PID is user adjustable
Control accuracy <sup>1)</sup>		0,5% F.S. sensor
Display		LCD 64 x 128 Pixel
Display units (selectable)		
Pressure		mbar, Torr, Pa, mV
Flow		mbar l/s, Torr l/s, Pa l/s, mV
Measurement range		
Pressure control		
CERAVAC		
THERMOVAC		
PENNINGVAC (not for PTR 90)		
IONIVAC		
0 to 10 V linear	mV	0 to 10.000
Flow control		
with MOVE 1250		CLOSED, $5.0 \times 10^{-6}$ to $1.25 \times 10^{-3}$ mbar x l/s
with MOVE X		CLOSED, $1.0 \times 10^{-5}$ to $1.0 \times 10^{-2}$ mbar x l/s
with analog output AA 2	mV	0 to 10 000
Operating mode		Gas flow regulation (upstream regulation) Pressure regulation (downstream regulation)
Operating		Local operation or remote control
Digital input		Flow matching, opening/closing of external valves / operating mode flow/regulation / switching on of emission/degas
Digital output		Valve position indication; valve fault; sensor fault; status message for sensor and valve; pressure regulation upstream/downstream
Analog input		0 to 10 V DC setpoint pressure/flow
Analog output		0 to 10 V DC, Pressure sensor signal, valve signal, valve position MOVE 1250
Serial interface		RS 232 C, RS 485 C
Housing		1/4 19", for installation or tabletop use
Weight	kg (lbs)	1.65 (3.64)
Temperature		
Operation	°C	+5 to +50
Storage	°C	-40 to +60
Protection class	IP	30 (EN 60 529)

<sup>1)</sup> Valid for sensor setting 0 to +10 V linear and analog output A02

## Ordering Information

## Controller CMove 1250

	<b>Part No.</b>
Controller CMove 1250	<b>230 200</b>
Control valve Move 1250	<b>230 219</b>
Connection cable CMove 1250 – Control valve Move 1250	
3 m	<b>230 220</b>
5 m	<b>230 221</b>
10 m	<b>230 222</b>
15 m	<b>230 223</b>
20 m	<b>230 224</b>
25 m	<b>230 225</b>
Sensor cable TTR 100, TTR 101, TTR 211, TTR 216, PTR 225, PTR 237	
5 m	<b>124 26</b>
10 m	<b>230 012</b>
15 m	<b>124 27</b>
20 m	<b>124 28</b>
30 m	<b>124 29</b>
50 m	<b>124 31</b>
75 m	<b>124 32</b>
100 m	<b>124 33</b>
ITR 90, ITR 100, ITR 200	
5 m	<b>124 55</b>
10 m	<b>230 022</b>
15 m	<b>124 56</b>
20 m	<b>124 57</b>
30 m	<b>124 58</b>
CTR 90, CTR 91, CTR 100, CTR 101	
5 m	<b>230 013</b>
10 m	<b>230 014</b>
15 m	<b>230 015</b>
20 m	<b>230 016</b>
30 m	<b>230 017</b>
50 m	<b>230 019</b>
75 m	<b>230 020</b>
100 m	<b>230 021</b>

# Interface Module IMove 1250 for Move 1250



## Advantages to the User

- Status query and valve position

## Typical Applications

The interface module IMove 1250 connects a RS 232C interface (for example from a computer or a PLC) to the digital interface of the Move 1250 control valve.

## Technical Data


## Interface-Modul IMove 1250

Temperature		
Operation	°C	+5 to +50
Storage	°C	-10 to +65
Protection class	IP	30
Operation voltage	V DC	24 ± 10%
Current consumption		
IMove 1250	mA	< 50 (own consumption)f)
Move 1250	mA	< 500
Provide upfront fusing		1 AT
Interface		RS 232 C
Mounting		
Support rails		EN 50022-35 (symmetrical) EN 50035-G32 (asymmetrical)
Weight	g	40


## Ordering Information

## Interface Module IMove 1250

	Part No.
Interface Module IMove 1250	230 201

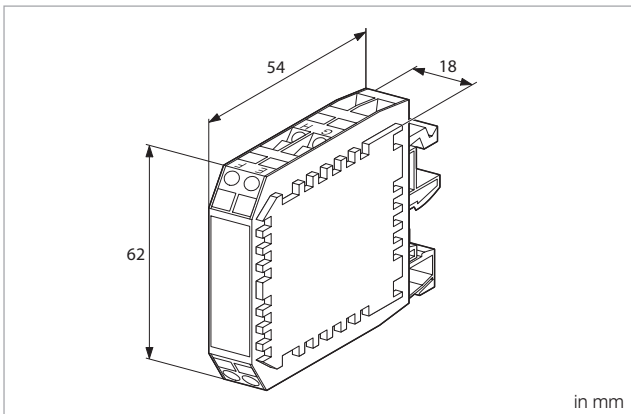

Dimensional drawing for the IMove 1250

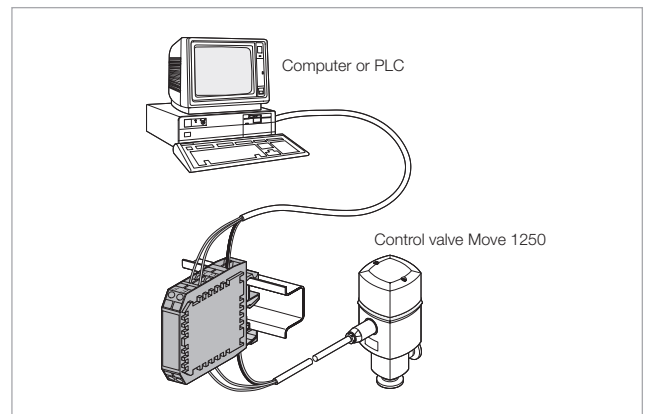

Connection of the IMove 1250

# Low Pressure Safety Switch PS 113 A



Switch indicating whether or not the pressure has reached the level of the atmospheric pressure after venting. Preset diaphragm pressure switch set to a trigger of 6 mbar (4 Torr) below atmospheric pressure.

## Advantages to the User


- Rugged design
- High switching capacity
- Corrosion protected
- Easy to use
- IP 44 protection
- Can be connected to a programmable control

## Typical Applications

- Venting facilities
- Safety shutdown of vacuum systems
- Load locks
- Increased switching capacity when using the switching amplifier SV 110

## Technical Note

Due to the diaphragm material used (EPDM) the PS 113 A is not suited for applications in which the process gas contains large quantities of helium. Owing to helium permeation, the leak rate of the diaphragm for helium amounts to values  $\leq 1 \times 10^{-4}$  mbar x l/s.

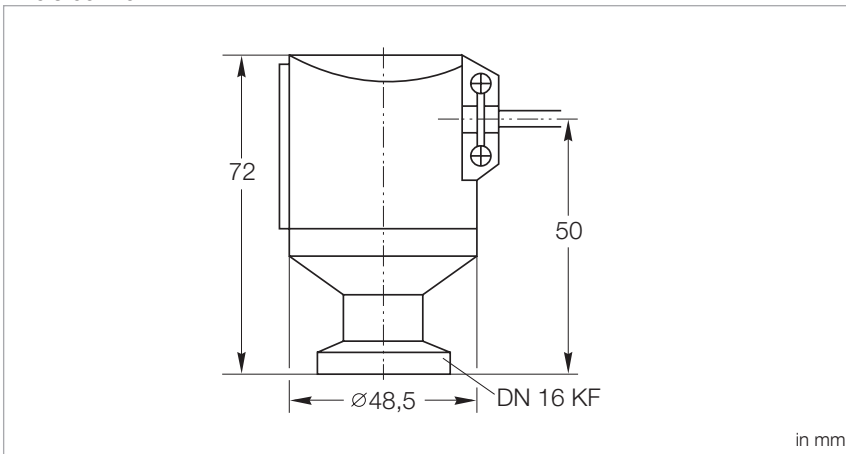

Dimensional drawing for the low pressure safety switch PS 113 A

## Technical Data

## Low Pressure Safety Switch

Switching pressure	mbar (Torr)	Approx. 6 (4.5) below atmospheric pressure
Return switching pressure	mbar (Torr)	3 (2.3) below atmospheric pressure
Switching inaccuracy	mbar (Torr)	2 (1.5)
Max. permissible operating pressure (abs.)	mbar (Torr)	2000 (1500)
Storage temperature range	°C	-25 to +85
Nominal temperature range	°C	0 to +85
Switching contact		Changeover contacts, gold-plated, for prog. controls
Contact life		> 10 <sup>5</sup> switching cycles
Switching capacity		100 mA / 24 V AC 30 mA / 24 V DC
Electrical connection		6.3 mm flat plug
Vacuum connection	DN	16 ISO-KF
Helium permeation	mbar (Torr)	≤ 5 x 10 <sup>-5</sup>
Dead volume	cm <sup>3</sup>	2
Materials in contact with the medium		Stainless steel 1.4305, Stainless steel 1.4310, Stainless steel 1.4300 PTFE coated, EPDM
Weight	g	315
Protection class	IP	44

## Ordering Information

## Low Pressure Safety Switch

	Part No.
Low pressure safety switch PS 113 A, DN 16 ISO-KF; complete with 3 m long cable	<b>230 011</b>

# Pressure Switch PS 115




Rugged absolute pressure switch with electrical switching contact and an adjustable switching pressure between 0.5 and 2000 mbar (0.4 and 1500 Torr).

Through the differential pressure adapter (optional) the PS 115 pressure switch may be converted to operate as a differential pressure switch. The adapter consists of a DN 16 ISO-KF flange with screw-in thread and a sealing arrangement, and it is screwed into the PS 115 instead of the adjustment valve. The operating range extends to 2000 mbar (1500 Torr). Brief over-loading to 3000 mbar (2250 Torr) is permissible without impairing switching accuracy. In this operating range differential values of +5 to -20 mbar (+3.75 to -15 Torr) can be adjusted via the set screw.

## Advantages to the User

- High switching accuracy ( $\pm 0.1$  mbar)
- Stable long term operating characteristics
- Rugged, corrosion protected design
- Increased switching capacity (floating) when using the switching amplifier SV 110
- Switching contact (n.c.) in the reference chamber and thus protected against corrosion
- For operating pressures up to 3 bar
- For high ambient temperatures
- Upon request, the switching threshold may be set in the factory

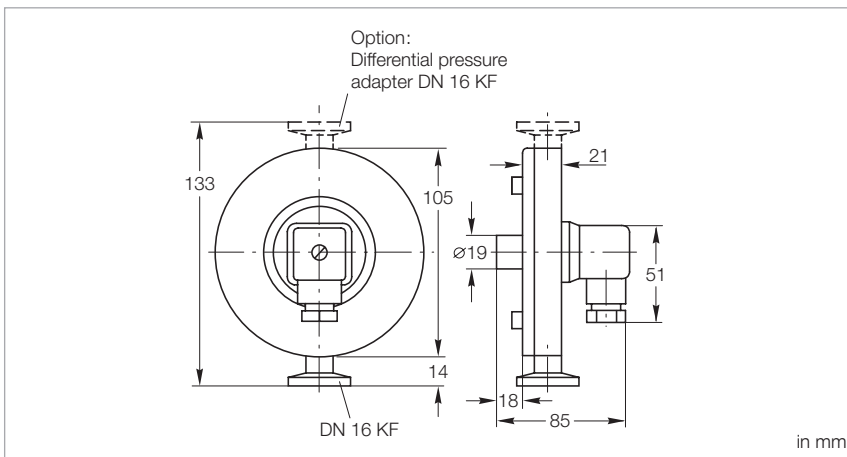

Dimensional drawing for the pressure switch PS 115

## Technical Data

## Pressure Switch PS 115

Switching range	mbar (Torr)	0.5 to 2000 (0.375 to 1500)
Overload limit	mbar (Torr)	3000 (2250)
Sensitivity	mbar (Torr)	0.1 (0.75)
Switching hysteresis	mbar (Torr)	0.5 (0.375)
Temperature coefficient	%/°K	0.4 of the switching value
Nominal temperature range		
briefly (max. 8 h)	°C	120
continuous	°C	0 to +90
Switching contact		Plug
Switching voltage	V	24
Switching current (max.)	mA	10
Contact resistance, max.	kΩ	1
Electrical connection		Plug (DIN 43 650)
Protection class	IP	65
Vacuum connection	DN	16 ISO-KF
Materials in contact with the medium		
Measurement chamber		Stainless steel 1.4301; 1.4401; 1.4310; 1.3541; FPM /FKM
Reference chamber		Stainless steel 1.4301; 1.4401; 1.3541; Glass; Gold
Volume of the measurement chamber approx.	cm <sup>3</sup>	4
Volume of the reference chamber, approx.	cm <sup>3</sup>	20
Weight	kg (lbs)	1.3 (2.87)

## Ordering Information

## Pressure Switch PS 115

	Part No.
Pressure Switch PS 115, DN 16 ISO-KF	<b>160 04</b>
Pressure switch adjustment	<b>160 05</b>
For floating installations without SV 110, Clamping ring DN 16 ISO-KF, plastic Centering ring, DN 16 ISO-KF, plastic	<b>200 28 306</b> <b>200 28 307</b>
Option Differential pressure adapter, DN 16 ISO-KF for connection to the PS 115	<b>160 74</b>
Spare parts kit PS 115	<b>E 160 06</b>
SV 110 switching amplifier	<b>160 78</b>


# Switching Amplifier SV 110

The diaphragm contact of the pressure switches is connected on one side to ground and is rated to 24 V / 10 mA max. When wanting to switch higher voltages or currents, a switching amplifier will be needed. The switching amplifier is equipped with powerful floating changeover contacts. The output relay is energized as soon as the pressure drops below the switching threshold set up on the pressure switch.

The electrical connections are provided via screw terminals and are run out of the plastic enclosure through PG fittings.

## Advantages to the User

- Increased ratings for the switch
- Changeover contact

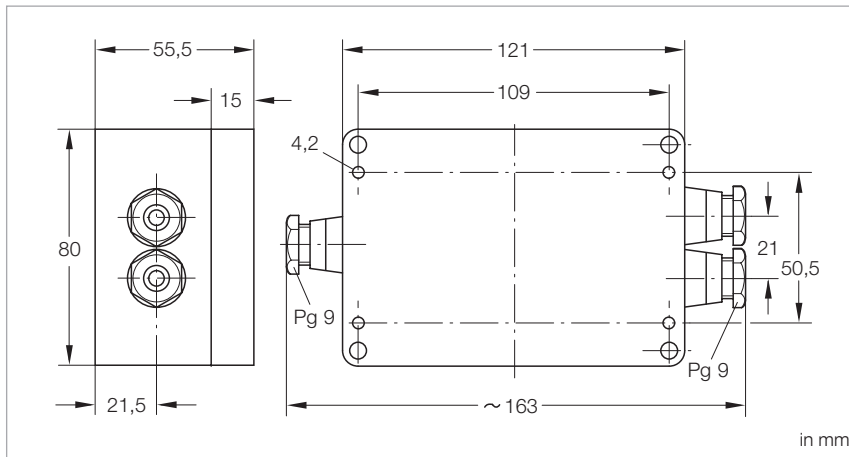

Dimensional drawing for the switching amplifier SV 110



## Technical Data

## Switching Amplifier SV 110

Mains connection 50/60 Hz (selectable)		110/130/220/240 V
Power consumption	VA	3
Output relay		
Switching voltage / current	V / A	250 / 5
Switching power, max.	VA	500
Response time	ms	30
Release time	ms	7
Control circuit	V / mA	24 / 10
Ambient temperature, max.	°C	50
Weight, approx.	kg (lbs)	0.36 (0.79)

## Ordering Information

## Switching AmplifierSV 110

	Part No.
Switching amplifier SV 110	<b>160 78</b>

# Diaphragm Pressure Regulators MR 16/MR 50




The MR 16/50 diaphragm regulators are absolute pressure regulators which automatically adapt the pumping speed of a vacuum pump depending on the amount of gas, without the need for an external power supply.

## Advantages to the User

- Non-incremental, automatic pressure control
- Simple setting of the control pressures
- High control accuracy
- Corrosion protected stainless steel design
- Easy to disassemble for cleaning and maintenance
- Trouble-free operation in ex. areas
- Built-in isolation valves for the process connection and the vacuum pump (MR 16)

## Typical Applications

- Distillation processes of all kinds
- Solvent recovery
- Drying processes
- Temperature control on bath cryostats
- Degassing of liquids and plastics

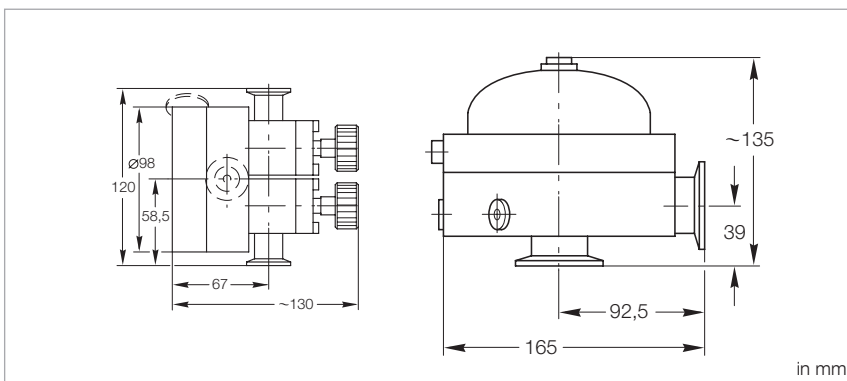

Dimensional drawing for the diaphragm regulator MR 16 (left) and MR 50 (right)

## Technical Data

## Diaphragm Pressure Regulator

### MR 16

### MR 50

Control range	mbar (Torr)	10 to 1000 (7.5 to 750)	
Control inaccuracy		± 2% of the pressure control (10 – 90% of flow)	
Throughput	m³/h	16	50
Nominal temperature range	°C	+5 to +100	
Storage temperature range	°C	-25 to +60	
Temperature coefficient	%/K	0.3	
Setting time	ms	5	
Permissible overload for brief periods	bar	3	
Diaphragm material		FPM (FKM)/EPDM	
Housing material		stainless steel 1.4571	
Installation orientation		Any	
Dimensions		see dimensional drawing	
Vacuum connection	2x DN	16 ISO-KF	40 ISO-KF
Measurement connection	3x thread R	1/8"	
Weight, approx.	kg (lbs)	2.7 (6.0)	8.0 (17.6)

## Ordering Information

## Diaphragm Pressure Regulator

### MR 16

### MR 50

	Part No.	Part No.
Diaphragm pressure regulator MR 16, DN 16 ISO-KF MR 50, DN 40 ISO-KF	<b>160 25</b> -	- <b>160 27</b>
Options Stainless steel measurement flange, DN 16 ISO-KF, for connection to a reference and/or process chamber or pumping stud KALREZ diaphragm	<b>160 26</b> -	<b>160 26</b> <b>200 28 597</b>
Spare Parts EPDM diaphragm and seal kit Viton diaphragm and seal kit Seal kit MR 50, incl. EPDM and Viton diaphragms  Adjustment screw for the adjustable valve, complete with seal	<b>EK 160 29</b> <b>EK 160 31</b>  -  <b>240 001</b>	- -  <b>EK 160 32</b>  <b>240 001</b>

## Leybold Calibration Service



Calibration of vacuum gauges in the pressure range from  $10^{-8}$  to 1000 mbar ( $10^{-8}$  to 750 Torr) as DAkkS or factory calibration.

### Advantages to the User

- Clear reference to the reference quantities
- Reproducible measurements
- Constantly high quality over time
- Reliable checking of existing gauges
- Unambiguous description of the process

Since 1981 Leybold has been offering to all customers an impartial calibration service for gauges and sensors of any make. A DAkkS calibration certificate or a factory calibration certificate is issued for every calibration. Instruments with insufficient long-term stability or such instruments where the principle of measurement is not suited for calibration, can not be calibrated.

### Typical Applications

Calibrated vacuum gauges are used under the following conditions:

- If the requirements concerning reproducibility and comparability of experiment runs are high

- If an unambiguous reference is required for a large number of pressure gauges
- If an unambiguous description for processes is required
- If for experiments and processes unambiguous traceability of the measured pressures to basic quantities is demanded by the authorities
- If testing to DIN/ISO 9000 is required in the following areas
  - Research
  - Thin-film engineering
  - Manufacture of systems
  - Military
  - Energy
  - Chemistry production
  - Production of pharmaceuticals and herbicides
  - Sputtering systems
  - Aircraft and space industry
  - Manufacture of lamp

### DAkkS / Factory Calibration

It is the task of the Deutschen Akkreditierungsstelle (DAkkS) to ensure traceability of industrial measurements and testing to national standards.

The DAkkS is supported jointly by the Federal Institution for Physics and Technology (PTB), the industry, the Federal Minister for Economics and the Western European Metrology Club (WEMC).

The transfer standards in the DAkkS calibration facility used by Leybold are checked regularly (recalibrated) by the PTB.

Within the framework of the DAkkS, the calibration system at Leybold has been checked and approved by the PTB and the applied transfer standards have been calibrated by the PTB.

Factory calibrations were performed with standards which have not been calibrated directly at the PTB; instead the transfer standards of the in-house calibration service are used. Thus traceability to national standards is ensured in both cases.

**Technical Data****DAkKS Calibration**

Calibration range	mbar (Torr)	to 10 <sup>-3</sup>	to 10 <sup>-5</sup>	to 10 <sup>-8</sup>
-------------------	-------------	---------------------	---------------------	---------------------

**Ordering Information****DAkKS Calibration**

	Part No.	Part No.	Part No.
DAkKS Calibration	<b>157 12</b>	<b>157 13</b>	<b>157 14</b>

**Technical Data****Factory Calibration**

Calibration range	mbar (Torr)	to 10 <sup>-3</sup>	to 10 <sup>-5</sup>	to 10 <sup>-8</sup>
-------------------	-------------	---------------------	---------------------	---------------------

**Ordering Information****Factory Calibration**

	Part No.	Part No.	Part No.
Factory Calibration	<b>154 22</b>	<b>154 23</b>	<b>154 24</b>

For PENNINGVAC transmitters only Factory Calibration is available.

**Calibration Systems are described in the Catalog Part “Vacuum Pump Systems”.**

# Leybold Service: Easy, Competent, Reliable

## We are where you are.

With our comprehensive range of innovative service solutions, we offer unrivalled support for your Leybold vacuum pumps and we are committed to:

- Providing you with a reliable, first-class service throughout your pump's lifecycle, no matter where in the world it is installed.
- Maximizing your pump's uptime and ensuring it gets the best possible service.
- Offering you specialist support with preventive maintenance and repairs.

Read on to find out more about our complete range of vacuum pump services and how our specialists can help you. The rewards are maximum uptimes, low running costs and longer lifecycles.



### Service Contracts

Our full range of service contracts are designed to ensure the lowest total cost of ownership of your pumps, maximizing their performance and uptime. From preventive maintenance contracts to warranty extensions, we offer you customized solutions that let you focus fully on your production by providing a perfect match to your needs.



### Spare Parts and Kits

Our genuine spare parts fit your vacuum pump perfectly to ensure high reliability, performance, and a long service life. To ease your workflow and ensure you have everything you need for your pump, we put together spare parts kits for specific maintenance activities.



### LEYBONOL Vacuum Pump Oil

LEYBONOL has been specially formulated to achieve the best performance for your pump. The premium quality of LEYBONOL ensures long oil exchange intervals and reduces power consumption as well as wear and maintenance costs. Our certified oils keep your production running and extend your pump life expectancy.

Find the correct oil for your pump using the **Oil Finder** ([guide.leybold.com/en/](https://guide.leybold.com/en/)).





### **GENIUS Instant Insights™**

Our connectivity solution offers you 24/7 remote mobile access to your vacuum pumps. Alarms on failures, service maintenance, insights on up-time and energy consumption are all transparent on the GENIUS Instant Insights™ Portal. With GENIUS Instant Insights™ you can set up real time notifications about important events coming from the vacuum system, giving you the opportunity to avoid costly downtime and production losses – it has never been so convenient and easy to have a healthy and reliable vacuum pump installation.



### **Service Technology Center**

Fully equipped to handle pumps from every kind of application, even the harshest, our service technology centers are ready to service your pumps. From preventive maintenance to repair, we offer transparent fixed-price solutions and the capability to do anything your pump requires.



### **Field Service**

Our team of vacuum pump experts come to your site to perform maintenance on your pumps, whether it is routine service or troubleshooting. Competent, reliable and there for you, they know what your pumps need to perform flawlessly at their best.



### **Certified and Exchange**

Our certified and exchange stock is always available in an emergency and to ensure your manufacturing continues as smoothly as possible with a minimum of downtime. All pumps come with a 12-month warranty and are rebuilt and tested to industry standards to ensure that they deliver OEM performance.

# Sales and Service

## Germany

**Leybold GmbH**  
Bonner Strasse 498  
D-50968 Cologne  
T: +49-(0)221-347 1234  
F: +49-(0)221-347 31234  
sales@leybold.com  
www.leybold.com

**Leybold GmbH  
Sales Area North**  
Branch Office Berlin  
Industriestrasse 10b  
D-12099 Berlin  
T: +49-(0)30-435 609 0  
F: +49-(0)30-435 609 10  
sales.bn@leybold.com

**Leybold GmbH  
Sales Office South**  
Branch Office Munich  
Karl-Hammerschmidt-Strasse 34  
D-85609 Aschheim-Dornach  
T: +49-(0)89-357 33 9-10  
F: +49-(0)89-357 33 9-33  
sales.mn@leybold.com  
service.mn@leybold.com

**Leybold Dresden GmbH  
Service Competence Center**  
Zur Wetterwarte 50, Haus 304  
D-01109 Dresden  
Service:  
T: +49-(0)351-88 55 00  
F: +49-(0)351-88 55 041  
info.dr@leybold.com

## Europe

### Belgium

**Leybold Nederland B.V.  
Belgisch bijkantoor**  
Leuvensesteenweg 542  
B-1930 Zaventem  
Sales:  
T: +32-2-711 00 83  
F: +32-2-720 83 38  
sales.zv@leybold.com  
Service:  
T: +32-2-711 00 82  
F: +32-2-720 83 38  
service.zv@leybold.com

### France

**Leybold France S.A.S.**  
Parc du Technopolis, Bâtiment Beta  
3, Avenue du Canada  
F-91940 Les Ulis cedex  
Sales and Service:  
T: +33-1-69 82 48 00  
F: +33-1-69 07 57 38  
sales.or@leybold.com  
orsay.sav@leybold.com

**Leybold France S.A.S.**  
Valence Factory  
640, Rue A. Bergès  
B.P. 107  
F-26501 Bourg-lès-Valence Cedex  
T: +33-4-75 82 33 00  
F: +33-4-75 82 92 69  
marketing.vc@leybold.com

## Great Britain

**Leybold UK LTD.**  
Unit 9  
Silverglade Business Park  
Leatherhead Road  
Chessington  
Surrey (London)  
KT9 2QL  
Sales:  
T: +44-13-7273 7300  
F: +44-13-7273 7301  
sales.ln@leybold.com  
Service:  
T: +44-13-7273 7320  
F: +44-13-7273 7303  
service.ln@leybold.com

## Italy

**Leybold Italia S.r.l.**  
Via Filippo Brunelleschi 2  
I-20093 Cologno Monzese  
Sales:  
T: +39-02-27 22 31  
F: +39-02-27 20 96 41  
sales.mi@leybold.com  
Service:  
T: +39-02-27 22 31  
F: +39-02-27 22 32 17  
service.mi@leybold.com

## Netherlands

**Leybold Nederland B.V.**  
Floridadreef 102  
NL-3565 AM Utrecht  
Sales and Service:  
T: +31-(30) 242 63 30  
F: +31-(30) 242 63 31  
sales.ut@leybold.com  
service.ut@leybold.com

## Russia

**Leybold Russia**  
Vashutinskoe Road 15,  
Khimki, Moscow region,  
141402  
Russia  
T: +7 495 933 55 50  
LeyboldRussia@leybold.com

## Switzerland

**Leybold Schweiz AG**  
Hinterbergstrasse 56  
CH-6312 Steinhausen  
Warehouse and shipping address:  
Riedthofstrasse 214  
CH-8105 Regensdorf  
Sales:  
T: +41-44-308 40 50  
F: +41-44-308 40 60  
sales.zh@leybold.com  
Service:  
T: +41-44-308 40 62  
F: +41-44-308 40 60  
service.zh@leybold.com

## Spain

**Leybold Hispánica, S.A.**  
C/. Huelva, 7  
E-08940 Cornellá de Llobregat  
(Barcelona)  
Sales:  
T: +34-93-666 43 11  
F: +34-93-666 43 70  
sales.ba@leybold.com  
Service:  
T: +34-93-666 46 11  
F: +34-93-685 43 70  
service.ba@leybold.com

## Leybold GmbH

Bonner Strasse 498  
D-50968 Cologne  
T: +49-(0)221-347-0  
F: +49-(0)221-347-1250  
info@leybold.com

## America

### USA

**Leybold USA Inc.**  
6005 Enterprise Drive  
Export, PA 15632  
USA  
Sales and Service:  
T: +1-800-764-5369  
F: +1-800-325-4353  
F: +1-800-215-7782  
sales.ex@leybold.com  
service.ex@leybold.com


### Brazil

**Leybold do Brasil Ltda.**  
Av. Tamboré, 937, Tamboré  
Distrito Industrial  
CEP 06460-000 Barueri - SP  
Sales und Service:  
T: +55 11 3376 4604  
info.ju@leybold.com

## Asia

### P. R. China

**Leybold (Tianjin)  
International Trade Co. Ltd.**  
Beichen Economic  
Development Area (BEDA),  
No. 8 Western Shuangchen Road  
Tianjin 300400  
China  
Sales and Service:  
T: +86-400 038 8989  
T: +86-800 818 0033  
F: +86-22-2697 4061  
F: +86-22-2697 2017  
sales.tj@leybold.com  
service.tj@leybold.com

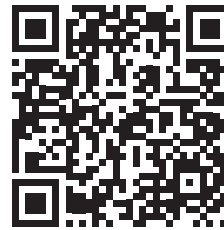

### India

**Leybold India Pvt Ltd.**  
T-97/2, MIDC Bhosari  
Pune-411 026  
Indien  
Sales and Service:  
T: +91-80-2783 9925  
F: +91-80-2783 9926  
sales.bgl@leybold.com  
service.bgl@leybold.com

### Japan

**Leybold Japan Co., Ltd.**  
Shin-Yokohama A.K.Bldg., 4th floor  
3-23-3, Shin-Yokohama  
Kohoku-ku, Yokohama-shi  
Kanagawa-ken 222-0033  
Japan  
Sales:  
T: +81-45-471-3330  
F: +81-45-471-3323  
sales.yh@leybold.com

## Malaysia

**Leybold Malaysia  
Leybold Singapore Pte Ltd.**  
No. 1 Jalan Hi-Tech 2/6  
Kulim Hi-Tech Park  
Kulim, Kedah Darul  
Aman 09090  
Malaysia  
Sales and Service:  
T: +604 4020 222  
F: +604 4020 221  
sales.ku@leybold.com  
service.ku@leybold.com

## South Korea

**Leybold Korea Ltd.**  
25, Hwangsaeul-ro 258 beon-gil,  
undang-gu, Seongnam-si,  
Gyeonggi-do,  
(7F Sunae Finance Tower)  
13595 Bundang  
Sales:  
T: +82-31 785 1367  
F: +82-31 785 1359  
sales.bd@leybold.com  
Service:  
T: +82-41 589 3035  
F: +82-41 588 0166  
service.cn@leybold.com

## Singapore

**Leybold Singapore Pte Ltd.**  
42 Loyang Drive  
Loyang Industrial Estate  
Singapore 508962  
Singapore  
Sales and Service:  
T: +65-6303 7030  
F: +65-6773 0039  
info.sg@leybold.com

## Taiwan

**Leybold Taiwan Ltd.**  
10F., No. 32, Chenggong 12th St.,  
Zhubei City, Hsinchu County 302  
Taiwan, R.O.C.  
Sales and Service:  
T: +886-3-500 1688  
F: +886-3-550 6523  
info.hc@leybold.com

